ALLIMITY AKB72976003

ALLIMITY AKB72976003 Replacement Remote Control User Manual

For LG Home Theatre Systems

1. Introduction

This user manual provides comprehensive instructions for the ALLIMITY AKB72976003 replacement remote control. This remote is designed to be fully compatible with various LG Home Theatre System models, offering all the functionalities of your original remote without the need for complex programming.

Compatible Models:

- HB905TAWBLU-RAY
- HB44S.BDEULL
- HB905TA
- HB965NS.BDEULL
- HLX55W
- HB405SU.BDEULL
- HB45E.BDEULL
- HB905TAW
- HB965TXW
- HLX55WBDEULL
- HB44A.BDEULL
- HB905DA
- HB965DX
- HB965TZ.BAUTLL
- HX995TZ.BDEULL
- HB44A
- HB650SA
- HB965DF.BDEULL
- HB965TZ-DD.BDEULL
- HX995DF.BDEULL

- HB44C
- HB905SP.BDEULL
- HB965DZ
- HLX56S

2. Product Overview

The ALLIMITY AKB72976003 remote control is a direct replacement, designed to replicate the functionality and layout of your original LG Home Theatre System remote. It features a standard button configuration for easy navigation and control.

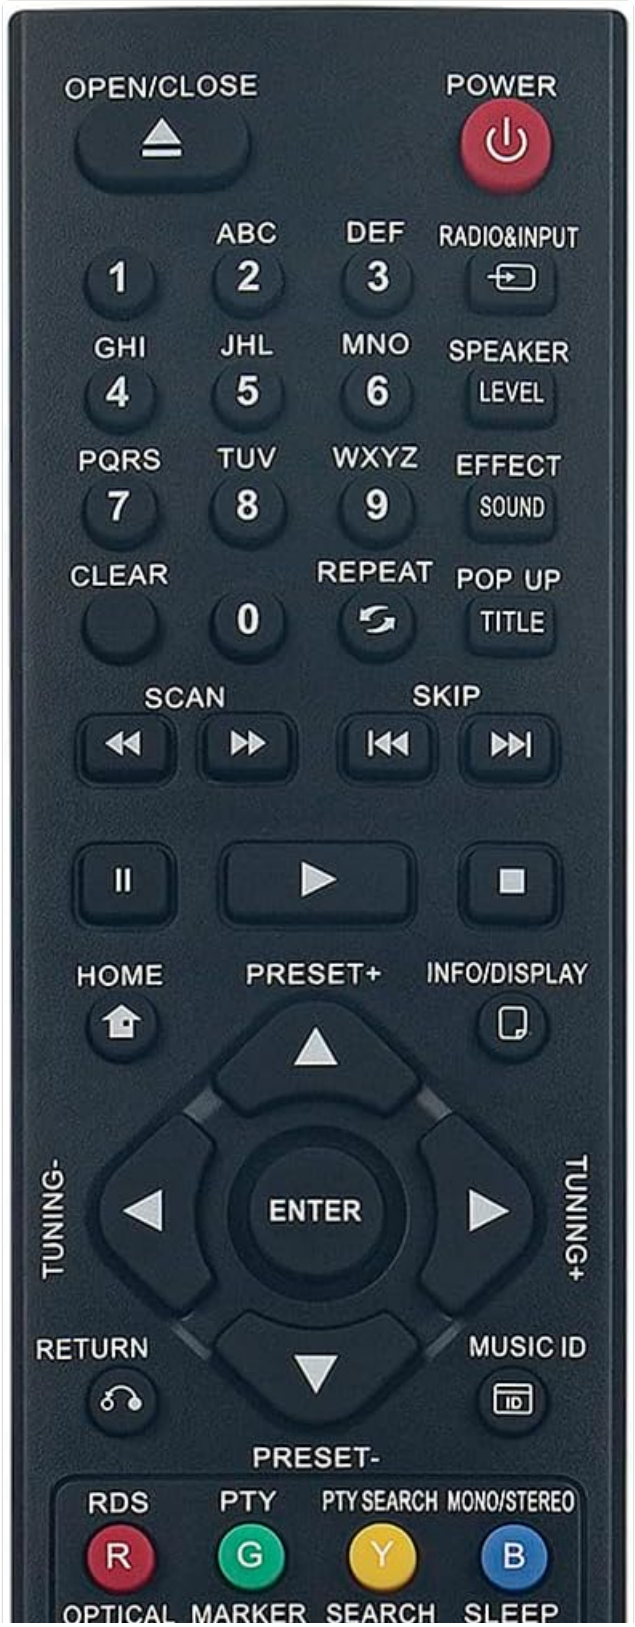




Figure 1: Front view of the ALLIMITY AKB72976003 remote control.





Figure 2: Angled view of the ALLIMITY AKB72976003 remote control.

3. Setup

The ALLIMITY AKB72976003 remote control requires no programming. Simply insert the batteries, and it is ready for use.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

4. Operating Instructions

This section details the primary functions of the buttons on your ALLIMITY AKB72976003 remote control.

Button	Function
POWER	Turns the Home Theatre System on or off.
OPEN/CLOSE	Opens or closes the disc tray.
RADIO & INPUT	Switches between radio and other input sources.
Number Buttons (0-9)	Direct selection of tracks, channels, or inputting numbers.
SPEAKER LEVEL	Adjusts individual speaker levels.
EFFECT SOUND	Cycles through sound effects or audio modes.
REPEAT / POP UP / TITLE	Controls repeat playback, displays pop-up menus, or accesses disc titles.
SCAN / SKIP	Scans forward/backward or skips tracks/chapters.
PLAY / PAUSE / STOP	Standard playback controls.
HOME	Accesses the main menu or home screen.
PRESET+/-	Navigates through radio presets or other stored settings.
INFO/DISPLAY	Displays information about the current content or system status.
Navigation Pad (Up, Down, Left, Right, ENTER)	Navigates menus and confirms selections.
TUNING+/-	Adjusts radio frequency tuning.
RETURN	Goes back to the previous menu or screen.
MUSIC ID	Identifies music tracks (if supported by the system).
RDS / PTY / SEARCH / MONO/STEREO	Radio Data System functions, program type search, station search, and stereo/mono toggle.
OPTICAL / MARKER / SLEEP	Selects optical input, sets markers, or activates sleep timer.
AV/INPUT	Selects audio/video input sources.
PR/CH +/-	Changes program or channel.
VOL +/-	Adjusts the master volume level.
TV	Switches control to a connected TV (if programmed).
REC	Initiates recording (if supported by the system).
DISC MENU	Accesses the disc menu.
MUTE	Mutes or unmutes the audio.

5. Maintenance

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. Troubleshooting

If you experience issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Solution
Remote is not responding.	◦ Check if the batteries are inserted correctly with the correct polarity (+/-). ◦ Replace the batteries with new alkaline batteries. ◦ Ensure there are no obstructions between the remote and the Home Theatre System's IR receiver. ◦ Confirm the remote is pointed directly at the Home Theatre System.
Remote works intermittently.	◦ Batteries may be low; replace them. ◦ Clean the remote's infrared (IR) emitter window and the Home Theatre System's IR receiver window with a soft cloth.
Certain buttons do not work.	◦ Ensure the remote is in the correct mode (e.g., not in "TV" mode if controlling the Home Theatre). ◦ Some functions may require specific system settings or media to be present (e.g., "DISC MENU" requires a disc).

7. Specifications

- **Model:** AKB72976003
- **Brand:** ALLIMITY
- **Compatibility:** LG Home Theatre Systems (specific models listed in Introduction)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Maximum Range:** Approximately 10 meters (33 feet)
- **Dimensions:** Approximately 4 x 12 x 0.3 cm (1.57 x 4.72 x 0.12 inches)
- **Weight:** Approximately 50 g (1.76 oz)
- **Special Features:** No programming required

8. Warranty and Support

For warranty information or technical support, please refer to the seller's policy or contact the ALLIMITY customer service directly. Details are typically provided with your purchase documentation or on the product listing page.

This product is designed to be a direct replacement and should function immediately upon correct battery installation.

© 2023 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question