HoTiyan B0BR89HRFH

HoTiyan 48GB Digital Voice Recorder Instruction Manual

Model: B0BR89HRFH

1. Introduction

Thank you for choosing the HoTiyan Digital Voice Recorder. This device is designed for high-quality audio recording, offering features such as voice activation, password protection, and ample storage. This manual provides detailed instructions to help you set up, operate, and maintain your recorder effectively.



The HoTiyan Digital Voice Recorder, highlighting its main functionalities including voice activation, password protection, music playback, AB repeat, and auto-record.

2. Product Overview

2.1 Components

The HoTiyan Digital Voice Recorder features a compact design with essential controls and ports for ease of use.



The digital voice recorder shown with its charging cable and headphones.

2.2 Key Features

- **High-Quality Recording:** Professional PCM recording chip captures audio at up to 3072Kbps. Supports WAV (512Kbps, 1536Kbps, 3072Kbps) and MP3 (64Kbps, 128Kbps, 192Kbps) formats.
- **Extended Storage:** Equipped with 16GB built-in memory and includes a 32GB microSD card, providing a total of 48GB storage capacity.
- **Long Battery Life:** Offers up to 70 hours of continuous recording on a full charge, which takes approximately 2 hours.
- **Voice Activated Recording (VOR):** Adjustable sensitivity with 7 levels to capture sound only when detected, saving storage space.
- **Password Protection:** Secure your recordings with a password.
- **Auto-Save Function:** Automatically saves current recordings when the battery is low.

- **MP3 Music Player:** Doubles as a portable music player.
- **AB Repeat:** Useful for reviewing specific sections of audio.
- **Easy File Transfer:** Connects to a computer via USB for data transfer and charging.



The recorder offers 70 hours of continuous recording and 48GB of memory (16GB built-in + 32GB microSD card).



PCM recording capability with various bitrate options for MP3 and WAV formats.

3. Setup

3.1 Charging the Device

Before first use, fully charge the recorder. Connect the device to a computer's USB port or a USB wall adapter using the provided USB cable. The battery indicator on the screen will show charging status. A full charge takes approximately 2 hours.

3.2 Powering On/Off

- **To Power On:** Slide the power switch to the 'ON' position. The screen will light up.
- **To Power Off:** Slide the power switch to the 'OFF' position.

3.3 Inserting MicroSD Card

The device comes with a 32GB microSD card. Locate the microSD card slot on the side of the recorder. Gently insert the card with the gold contacts facing down until it clicks into place. To remove, push the card in again until it springs out.



The recorder supports microSD card expansion for additional storage.

4. Operating Instructions

4.1 Basic Controls



Key buttons on the HoTiyan Digital Voice Recorder: REC, PLAY/ENTER, SAVE, and M (Mode/A/B).

- **REC Button:** Press to start recording.
- **PLAY/ENTER Button:** Press to play recordings or confirm selections.
- **SAVE Button:** Press to stop and save the current recording, or to go back in menus.
- **M (Mode/A/B) Button:** Used to switch modes or activate A-B repeat function during playback.
- **Volume Buttons (+/-):** Adjust playback volume.
- **Navigation Buttons (Up/Down):** Navigate through menus and files.

4.2 Recording Audio

1. Power on the device.
2. Press the **REC** button to start recording. The screen will display the recording time.
3. To stop and save the recording, press the **SAVE** button. The recording will be saved automatically.

4.3 Playback

1. From the main menu, navigate to 'Recordings' or 'Files'.
2. Use the navigation buttons to select the desired recording.
3. Press the **PLAY/ENTER** button to start playback.
4. Use the volume buttons to adjust the sound level.
5. Press the **SAVE** button to stop playback and return to the file list.

4.4 Voice Activated Recording (VOR)

VOR allows the recorder to start recording automatically when sound is detected and pause when silence occurs.

1. Access the settings menu.
2. Navigate to 'VOR Settings' or 'Voice Activated'.
3. Enable VOR and select a sensitivity level (1-7). Level 1 requires louder sound to activate, while Level 7 is highly sensitive.
4. Exit the settings. When you start recording, the device will now operate in VOR mode.



The voice activated recording feature can be set to 7 different sensitivity levels.



Visual representation of the voice activated recording function.

4.5 Password Protection

To protect your recordings, you can set a password for the device.

1. Go to the 'Settings' menu.
2. Select 'Password' or 'Security Settings'.
3. Follow the on-screen prompts to set a new password. Remember your password, as there may not be a recovery option.



The recorder offers password protection for securing your audio files.

4.6 File Transfer to Computer


Connect the recorder to your computer using the provided USB cable. The device will appear as a removable disk. You can then drag and drop files to and from the recorder.



Connecting the recorder to a computer for easy data transfer and charging.

4.7 Using as MP3 Player

The recorder can play MP3 music files. Transfer your music files to the device via USB. Connect headphones to the 3.5mm jack and navigate to the 'Music' menu to select and play songs.

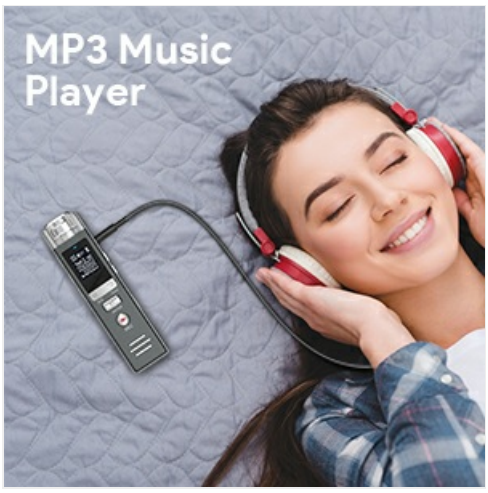

The device can function as an MP3 music player.

4.8 AB Repeat Function

During playback, press the **M (Mode/A/B)** button to set point A. Press it again to set point B. The device will then repeatedly play the section between A and B. Press the button a third time to exit AB repeat mode.



The AB repeat function is useful for reviewing specific audio segments.

5. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid using liquid cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge it regularly, even if not in use for extended periods.
- **Storage:** Store the recorder in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Data Backup:** Regularly back up important recordings to your computer to prevent data loss.



The device automatically saves recordings when the battery is low.

6. Troubleshooting

Problem	Possible Cause	Solution
Device won't power on.	Low battery; Power switch in OFF position.	Charge the device fully; Ensure power switch is in 'ON' position.
Cannot record.	Memory full; Device error.	Delete old files or transfer them to a computer; Restart the device.
Poor recording quality.	Microphone obstructed; Recording environment too noisy; Incorrect recording settings.	Ensure microphone is clear; Record in a quieter environment; Adjust recording quality settings in the menu.
Computer does not recognize device.	Faulty USB cable; Driver issue; Incorrect connection.	Try a different USB cable or port; Restart computer and device; Ensure device is powered on when connected.
Forgot password.	Password forgotten.	Refer to the device's full manual or contact customer support for potential reset options.

7. Specifications

Brand	HoTiyan
Model	B0BR89HRFH
Memory Storage Capacity	48 GB (16GB built-in + 32GB microSD card)
Digital Recording Time	70 hours (continuous)
Battery Average Life	70 Hours
Number of Batteries	1 Lithium Polymer battery (included)
Screen Size	1.1 Inches

Microphone Form Factor	Built-in
Microphone Operation Mode	Speech recognition (Voice Activated)
Format	MP3 Audio (and WAV)
Headphones Jack	3.5 millimeters
Hardware Interface	USB 2.0 Type B
Product Dimensions (D x W x H)	4.4" x 0.8" x 0.4"
Item Weight	0.98 Grams
Compatible Devices	Personal Computer

8. Warranty and Support

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official HoTiyan website. If you encounter any issues not covered in this manual, please contact HoTiyan customer service for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question