Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Belaco BEL-WF-012

Belaco Wall Fan 16 Inch Wall Mounted User Manual

Model: BEL-WF-012

1. Introduction

Thank you for choosing the Belaco 16 Inch Wall Mounted Fan. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.

The Belaco Wall Fan is designed to provide powerful and efficient cooling with its 3-speed settings, oscillation function, and adjustable tilt head, making it ideal for various rooms including living rooms, bedrooms, and offices.



Image: The Belaco 16 Inch Wall Mounted Fan, highlighting its wall-mounted, oscillating, and tilting features.

2. Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using this fan.
- Ensure the power supply matches the voltage specified on the fan's rating label (240 Volts).
- Do not operate any fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel for repair or replacement.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Do not insert fingers or foreign objects into any openings on the fan.
- Do not use this fan near water or in wet locations (e.g., bathrooms, laundry areas).
- Always unplug the fan from the power outlet before cleaning, servicing, or relocating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure the fan is securely mounted to a sturdy wall surface capable of supporting its weight (2.99 kg) and operational forces.

3. Package Contents

Please check the contents of your package. If any items are missing or damaged, contact your retailer.

- Belaco 16 Inch Wall Mounted Fan Unit
- Mounting Bracket (pre-attached or separate)
- Screws and Wall Plugs for Installation
- User Manual (this document)

4. Setup and Installation

Follow these steps for proper installation of your wall-mounted fan.

1. **Choose Location:** Select a suitable wall location that is sturdy, away from obstructions, and within reach of a power outlet. Ensure there is enough clearance for oscillation and tilt.
2. **Mark Drilling Points:** Hold the fan's mounting bracket against the wall at the desired height. Use a pencil to mark the positions for the mounting screws.
3. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your wall type. Insert wall plugs if necessary.
4. **Secure Mounting Bracket:** Align the mounting bracket with the drilled holes and secure it firmly to the wall using the provided screws. Ensure it is level and stable.
5. **Mount the Fan:** Carefully lift the fan unit and align the keyhole slots on the back of the fan with the screws on the mounted bracket. Slide the fan down to lock it into place. Ensure the fan is securely seated on the bracket.
6. **Connect Power:** Plug the fan's power cord into a standard 240V electrical outlet.

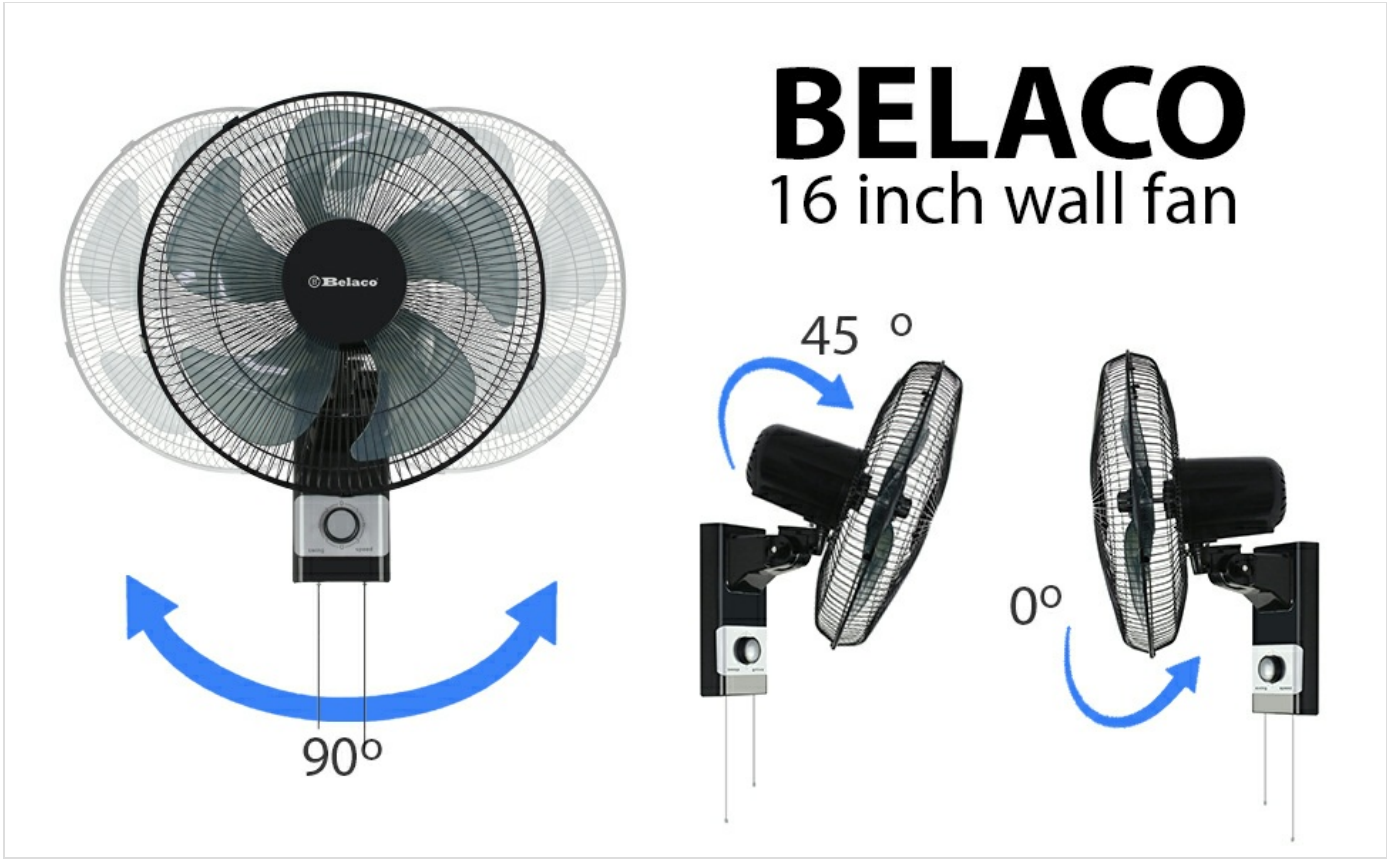


Image: Illustration of the fan's mounting bracket and the "SUPER EASY ASSEMBLY" process, showing how it attaches to the wall.

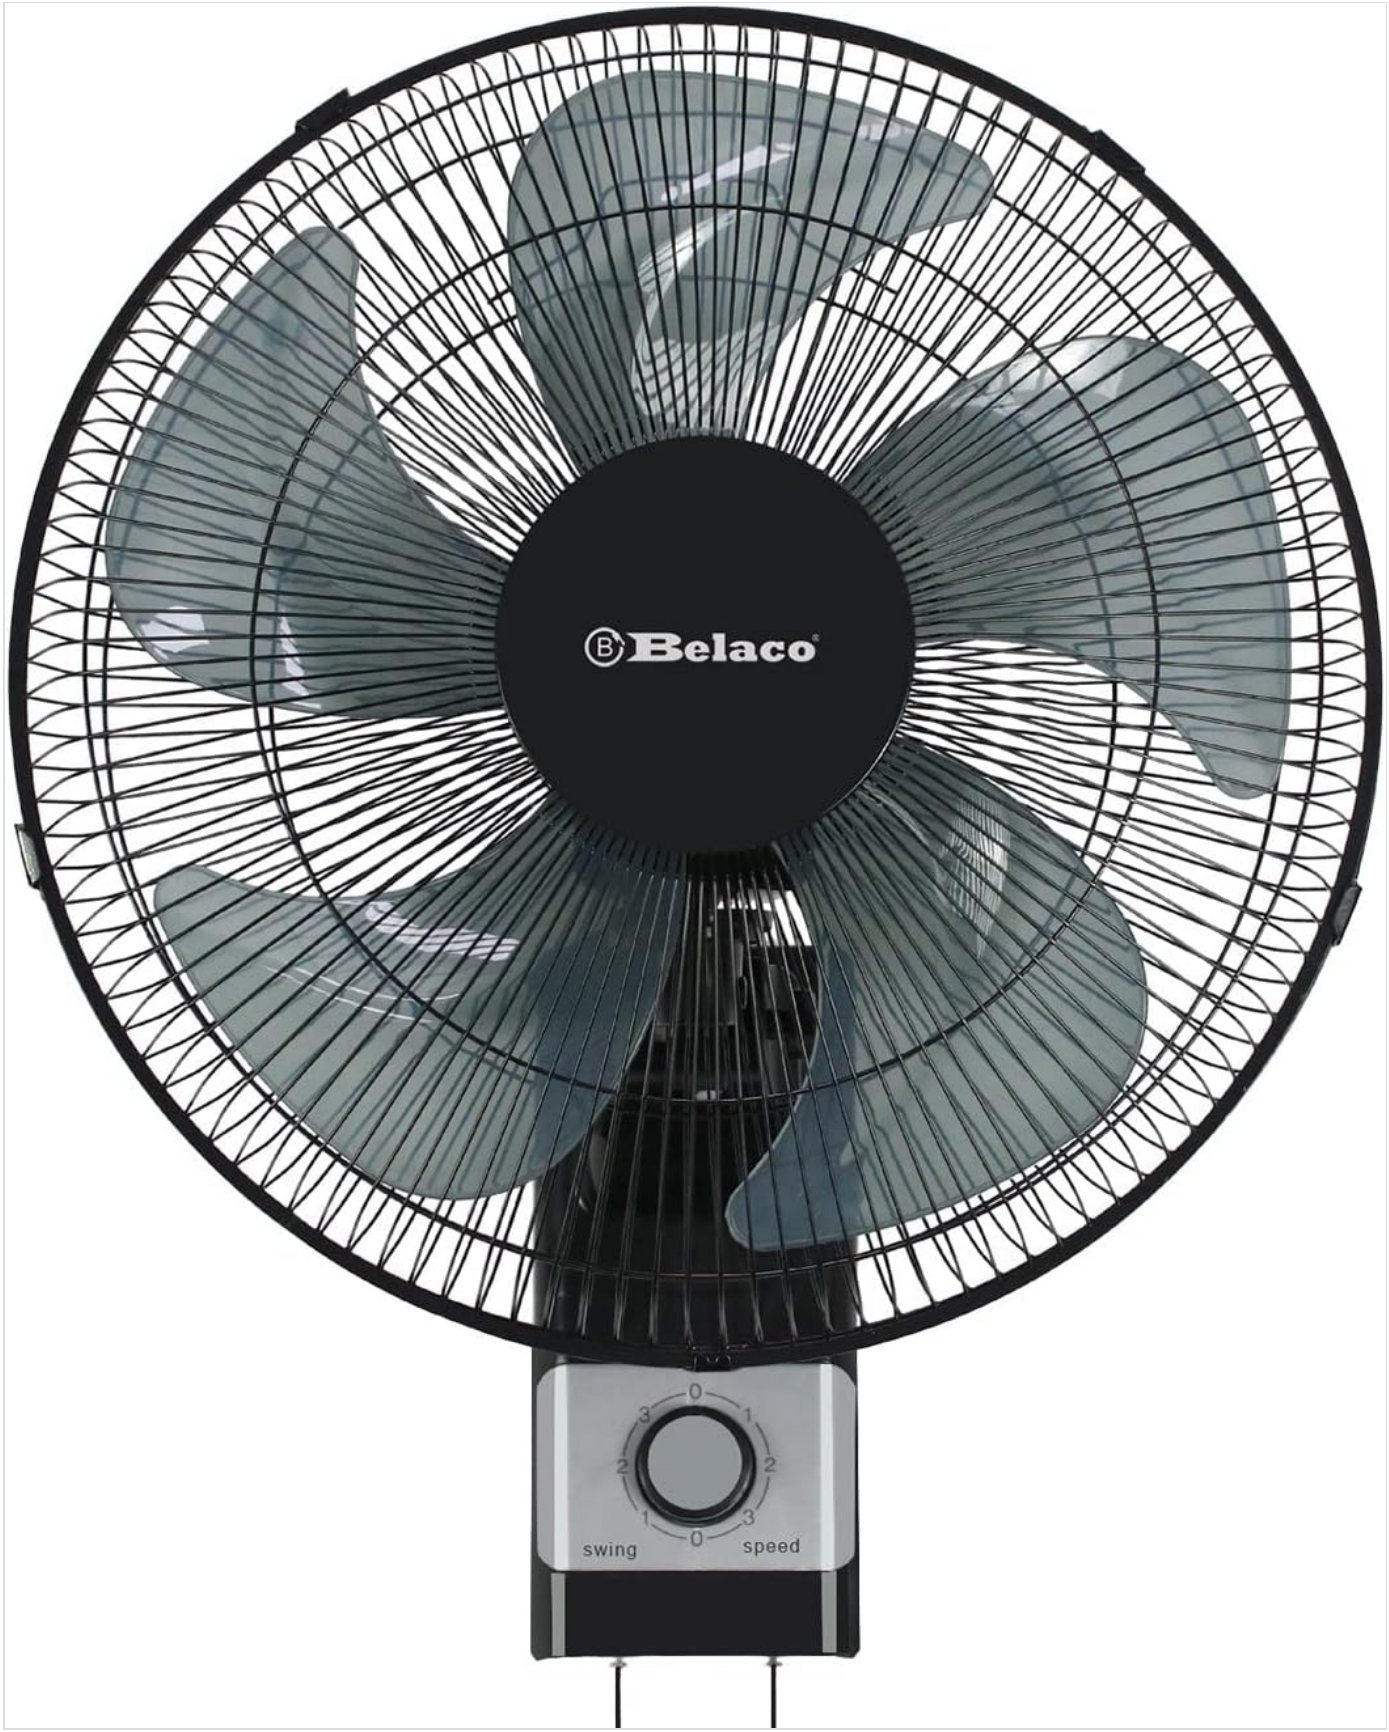


Image: The Belaco 16 Inch Wall Mounted Fan, showcasing its overall design and appearance once installed.

5. Operating Instructions

Your Belaco Wall Fan features simple controls for speed, oscillation, and tilt.

5.1 Speed Control

The fan offers three speed settings (Low, Medium, High) controlled by a rotary dial or pull cord. Pull the speed cord repeatedly to cycle through the settings: 0 (Off), 1 (Low), 2 (Medium), 3 (High).

5.2 Oscillation Function

To activate the oscillation function, pull the oscillation cord. The fan head will swing left and right to distribute air across a wider area. Pull the cord again to stop oscillation at the desired direction.

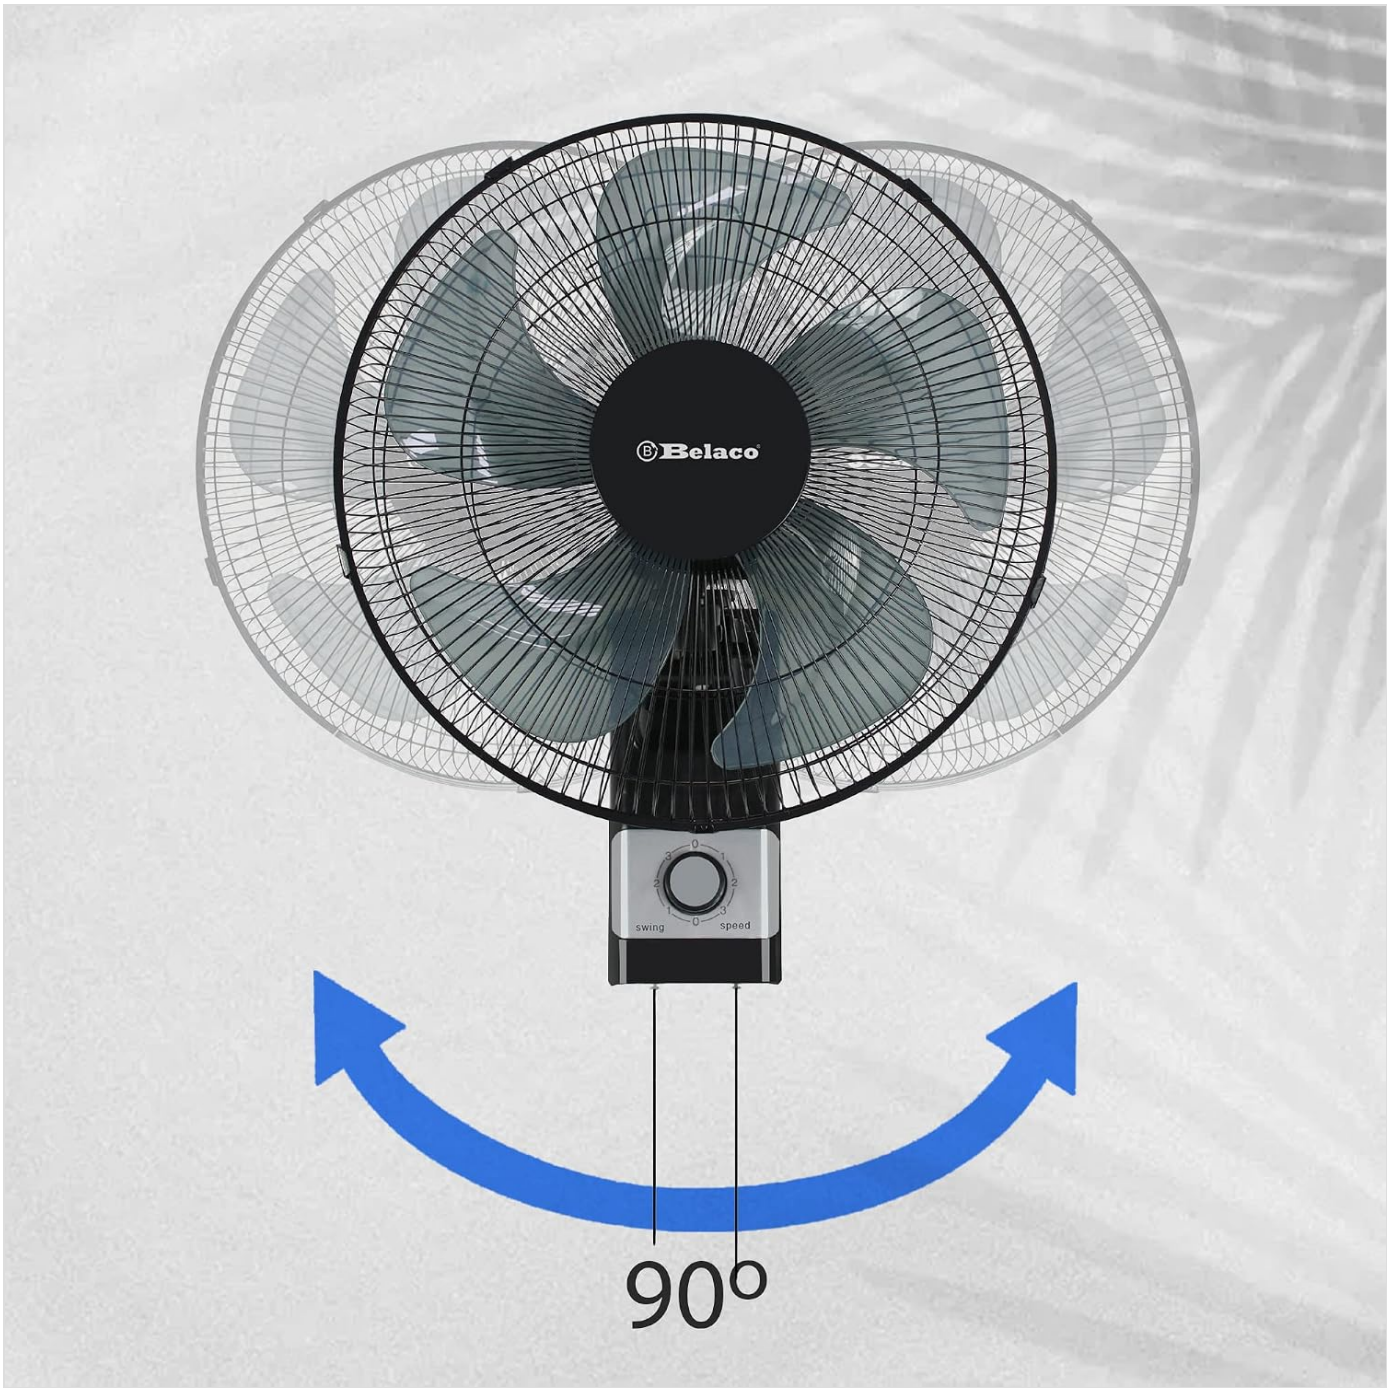


Image: The fan demonstrating its 90-degree oscillation capability, showing the wide area it can cover.

5.3 Tilt Adjustment

The fan head can be manually tilted up or down to direct airflow precisely where needed. Gently adjust the fan head to your preferred angle.



Image: A side view illustrating the adjustable tilt feature of the fan head, allowing for precise airflow direction.

5.4 Video Demonstration

Watch this video for a visual guide on operating your Belaco Wall Fan, including speed and oscillation controls.

Your browser does not support the video tag.

Video: A demonstration of the Belaco Wall Fan's features, including its oscillation and speed settings, and how to use the pull cord controls.

6. Maintenance

Regular cleaning will help maintain your fan's performance and extend its lifespan.

- **Always unplug the fan before cleaning.**
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades, carefully remove the front grille (refer to assembly instructions if needed). Wipe the blades with a soft cloth. Ensure the grille is securely reattached before operating.

- Do not immerse the fan in water or allow water to drip into the motor housing.
- Store the fan in a cool, dry place when not in use for extended periods.

7. Troubleshooting

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Fan not plugged in; Power outlet faulty.	Check if the fan is properly plugged into a working outlet. Test the outlet with another appliance.
Weak airflow.	Fan blades or grille are dirty; Fan is on a low speed setting.	Clean the fan blades and grille. Increase the speed setting.
Oscillation not working.	Oscillation cord not pulled; Mechanism jammed.	Ensure the oscillation cord is pulled to activate the function. Check for any obstructions around the oscillation mechanism.
Unusual noise.	Loose parts; Fan not securely mounted; Debris in fan.	Check for loose screws or parts. Ensure the fan is securely mounted. Unplug and check for debris inside the grille.

If the problem persists after trying these solutions, please contact customer support.

8. Specifications

Feature	Detail
Brand	Belaco
Model Number	BEL-WF-012
Colour	Black/Silver
Product Dimensions	40 x 43 x 55 cm
Item Weight	2.99 kg
Power / Wattage	55 watts
Voltage	240 Volts
Special Features	Adjustable Speed Control, Adjustable Tilt, Oscillating
Room Type	Bedroom, Living Room, Work Office
Power Source	Corded Electric

9. Warranty and Support

Your Belaco Wall Fan comes with a manufacturer's warranty. Please refer to the warranty card included in your package for details on coverage and duration. For technical support, troubleshooting assistance, or warranty claims, please contact Belaco customer service through your retailer or the official Belaco website.

For more information about Belaco products, visit the official Belaco Store: Belaco Store on Amazon.

© 2025 Belaco. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BRBLWK5P

More documents and user manuals: **https://manuals.plus/**