Azwok RC3000M11

Azwok RC3000M11 Replacement Remote Control User Manual

Comprehensive instructions for the setup, operation, and maintenance of your Azwok RC3000M11 replacement remote control.

1. Introduction

The Azwok RC3000M11 is a direct replacement remote control designed for various Kalley and TCL TV LCD LED models. It offers all primary functions of the original remote without requiring any programming.

Compatible Models:

- LT26A310R, LT-26A310R
- TCL19D3260, TCL-19D3260
- TCL24D3270, TCL-24D3270
- TCL24D3270F, TCL-24D3270F
- TCL32D3270, TCL-32D3270
- TCL32D3320, TCL-32D3320
- TCL32E5300, TCL-32E5300
- TCL39D3320, TCL-39D3320
- TCL39D3320F, TCL-39D3320F
- TCL42D10, TCL-42D10
- TCL42D10F, TCL-42D10F

2. Setup

Battery Installation

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.




UM-4SUM-4
RD. 3(AAA)

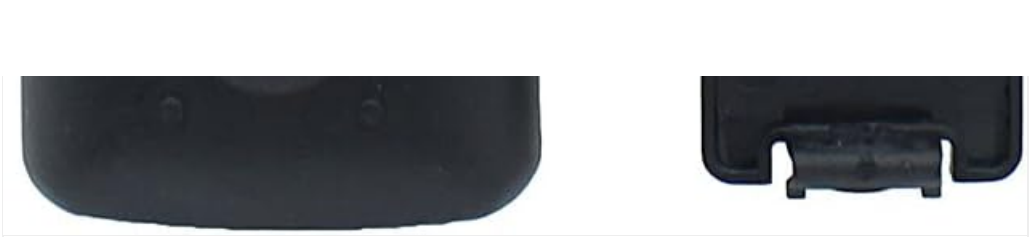


Image showing the rear of the Azwok RC3000M11 remote control with the battery compartment open, revealing two AAA batteries correctly inserted.





Image showing the rear of the Azwok RC3000M11 remote control with the closed battery compartment.

No programming is required. Once batteries are installed, the remote is ready for use with compatible TV models.

3. Operating Instructions

Basic Operation

This section details the functions of the buttons on your Azwok RC3000M11 remote control.





Front view of the Azwok RC3000M11 remote control, displaying all buttons and their labels.

Remote Control Button Functions

Button	Function
Power (Red button)	Turns the TV on or off.
Number Buttons (0-9)	Direct channel selection.
Info	Displays program information.
Return	Returns to the previous screen or menu.
Source	Selects input sources (e.g., HDMI, AV).
Menu	Accesses the TV's main menu.
Navigation (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
Option	Accesses additional options within menus.
Exit	Exits the current menu or screen.
VOL +/-	Adjusts the volume level.
CH +/-	Changes channels.
MTS (Red), **Green**, **Yellow**, **Blue**	Multi-track sound or other specific functions depending on the TV model.

Button	Function
USB	Activates USB media playback mode.
Scale, Picture, Sound, Freeze, DEMO	Specific TV functions for display, audio, or demonstration modes.

4. Maintenance

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries or different types of batteries, as this can lead to improper function or battery leakage.

5. Troubleshooting

Remote Not Responding

- **Check battery orientation:** Ensure AAA batteries are inserted correctly with positive (+) and negative (-) terminals aligned as indicated in the battery compartment.
- **Replace batteries:** If batteries are old or depleted, replace them with fresh AAA batteries.
- **Clear line of sight:** Ensure there are no obstructions between the remote control and the TV's infrared sensor. The sensor is typically located on the front panel of the TV.
- **Test with another device:** If you have another compatible TV, test the remote to determine if the issue is with the remote or the TV.

Limited Functionality

- **Verify compatibility:** Confirm your TV model is listed as compatible with the Azwok RC3000M11 remote. Refer to the "Compatible Models" section in this manual.
- **TV settings:** Some advanced functions might require specific TV menu navigation. Consult your TV's original manual for specific feature usage or to enable certain remote functions.

6. Specifications

Product Specifications

- **Product Dimensions:** 8.27 x 1.77 x 0.59 inches
- **Item Weight:** 2.96 ounces
- **Batteries Required:** 2 x AAA (not included)
- **Compatible Devices:** Television
- **Special Feature:** No Programming Required
- **Color:** Black
- **Model Number:** AU-RC3000M11-TL023

7. Warranty and Support

Warranty Information

This Azwok remote control comes with a 12-month replacement warranty from the date of purchase. If the remote control does not function as expected with your compatible device, returns are accepted for refund or exchange.

Customer Support

For further assistance, compatibility inquiries, or warranty claims, please contact the seller or manufacturer. Providing your TV model number will help expedite support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question