**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**VGR V-947**

# VGR V-947 Professional Hair Trimmer User Manual

Model: V-947

## 1. Safety Information

Please read all safety instructions carefully before using the VGR V-947 Professional Hair Trimmer. Keep this manual for future reference.

- This appliance is suitable for individuals aged 8 years and above, provided they are supervised or have been instructed on safe use and understand the potential hazards.
- Children should not play with the appliance. Cleaning and user maintenance should not be performed by children without supervision.
- Keep the trimmer dry. Do not use it near water or in wet conditions.
- Do not tamper with the battery. Improper handling may lead to fire or explosion.
- Store the trimmer and its accessories safely, out of reach of children.
- Dispose of the lubricating oil bottle properly according to local regulations.
- Charge the device only with the provided Type-C USB cable.
- Do not disassemble the trimmer. For repairs, contact authorized service personnel.

## 2. Product Overview

The VGR V-947 is a professional hair trimmer designed for precision grooming. It features stainless steel blades, a powerful lithium battery, and an LED display for optimal control.

### 2.1. Package Contents

Ensure all items are present in the box:

- 1x VGR V-947 Hair Trimmer
- 3x Cutting Guide Combs (1.5mm, 3mm, 4.5mm)
- 1x Protection Cap
- 1x Cleaning Brush
- 1x Lubricating Oil Bottle
- 1x Type-C USB Cable
- 1x User Manual




Image: All components included in the VGR V-947 Professional Hair Trimmer package. This includes the trimmer unit, three guide combs, a protection cap, a cleaning brush, a small bottle of lubricating oil, a USB-C charging cable, and the user manual.

## 2.2. Key Features

- **Precision T-Blade:** Ensures smooth, accurate, and safe trimming without pulling or irritation.
- **Extended Runtime:** 2000mAh lithium battery provides up to 500 minutes of cordless use on a 4-hour charge.
- **USB Type-C Charging:** Convenient charging from various USB sources.
- **Cord/Cordless Use:** Offers flexibility for uninterrupted performance.
- **LED Display:** Shows real-time battery level and maintenance alerts.
- **Guide Combs:** Three combs (1.5mm, 3mm, 4.5mm) for versatile trimming lengths.
- **Ergonomic Design:** Lightweight body with a comfortable grip.

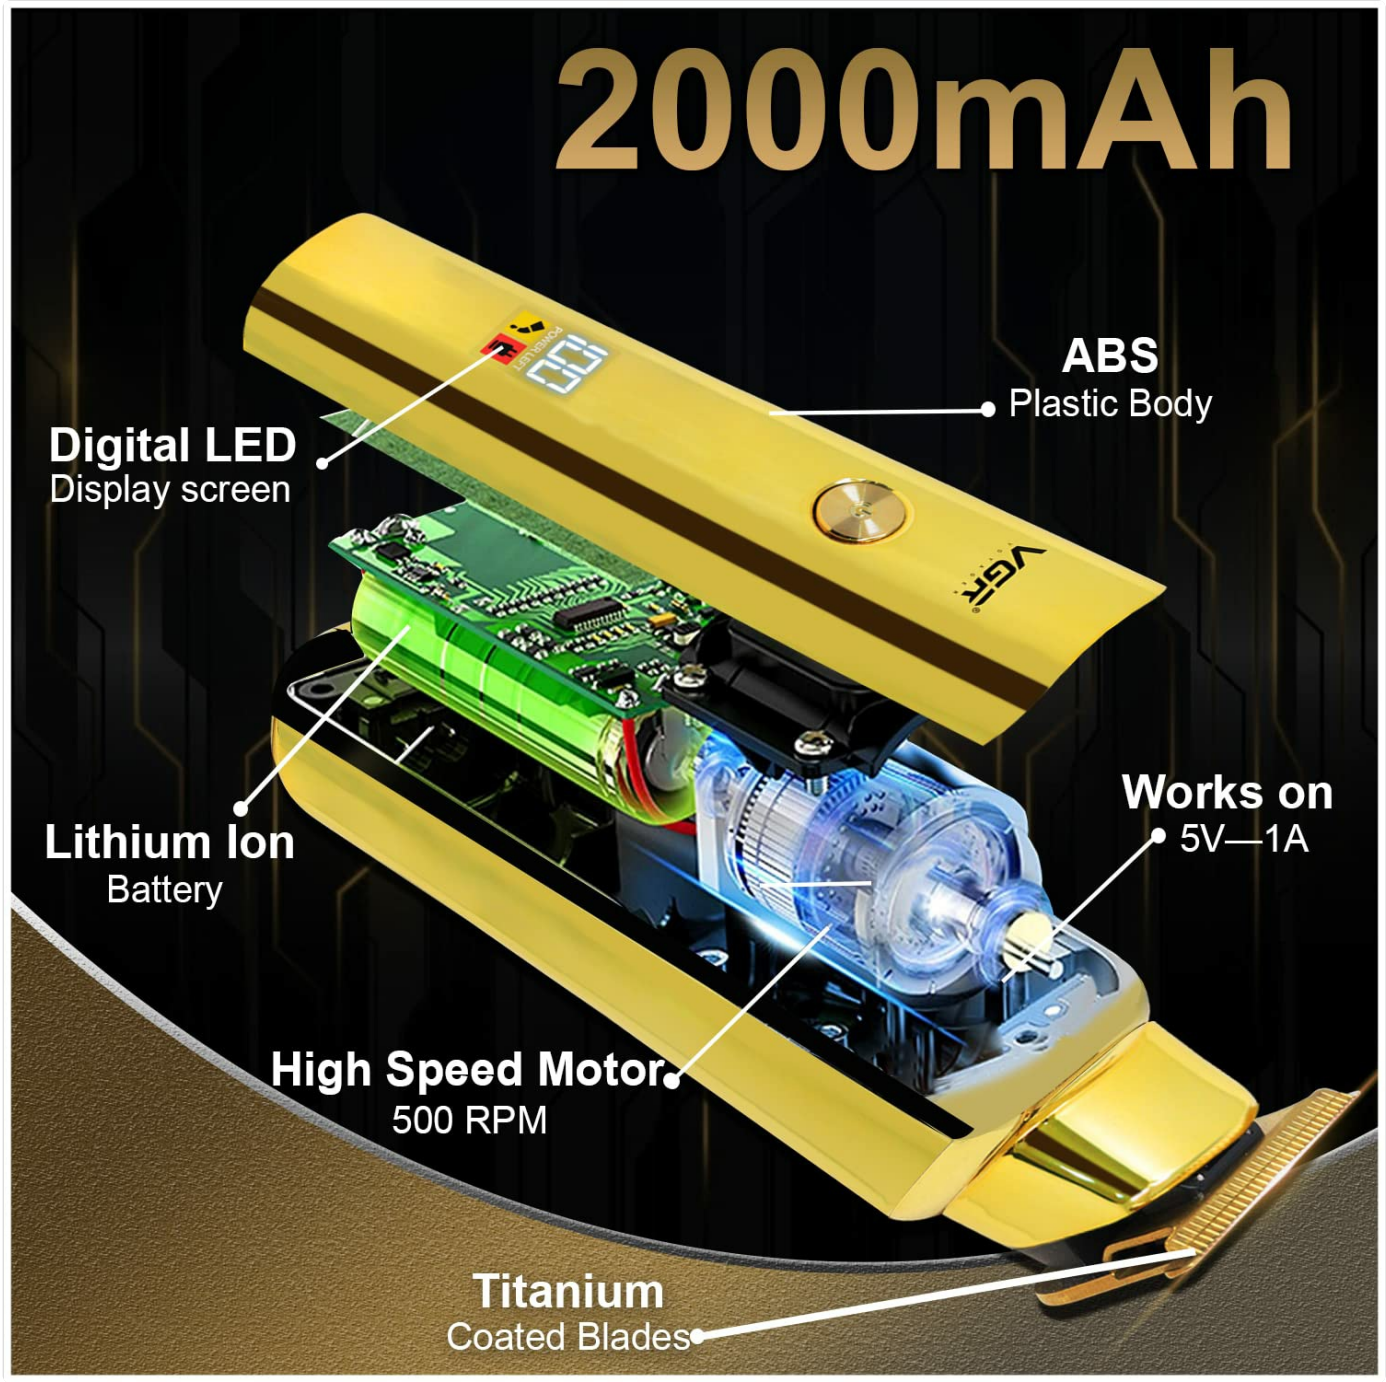



Image: An exploded view of the VGR V-947 trimmer, highlighting its internal components. Visible parts include the 2000mAh Lithium-Ion battery, high-speed motor, digital LED display screen, ABS plastic body, and titanium-coated blades. The diagram also indicates it works on 5V-1A power.

## 3. Setup

### 3.1. Charging the Trimmer

1. Before first use, fully charge the trimmer.
2. Insert the Type-C end of the USB cable into the charging port at the bottom of the trimmer.
3. Connect the USB-A end of the cable to a compatible USB power source (e.g., laptop, power bank, USB wall adapter).
4. The LED display will indicate charging status. A full charge takes approximately 4 hours and provides up to 500 minutes of runtime.




Image: A hand holding the VGR V-947 trimmer while a USB Type-C cable is being plugged into its charging port. The image highlights the 500 minutes runtime, 4 hours charging time, and Type-C USB charging capability.

## 3.2. Attaching Guide Combs

1. Ensure the trimmer is turned off.
2. Select the desired guide comb (1.5mm, 3mm, or 4.5mm) for your preferred trimming length.
3. Align the comb with the trimmer blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.




Image: Close-up view of the VGR V-947 trimmer's self-sharpened titanium-coated blades, alongside the three included guide combs (1.5mm, 3mm, 4.5mm). The image emphasizes that these combs are suitable for various hair styles and lengths.

## 4. Operation

### 4.1. Basic Trimming

1. Ensure your hair or beard is clean and dry.
2. Attach the desired guide comb if you need a specific length. For a closer trim, use without a comb.
3. Press the power button to turn on the trimmer.
4. Hold the trimmer with the blade flat against the skin and move it slowly against the direction of hair growth.
5. Trim from bottom to top for best results.
6. After use, press the power button to turn off the trimmer.




Image: A man using the VGR V-947 Professional Hair Trimmer to groom his beard, demonstrating its use for achieving a precise look.

### 4.2. Corded and Cordless Use

The VGR V-947 can be used both cordlessly and while plugged in. If the battery runs low during use, you can connect the USB-C cable and continue trimming.

### 4.3. LED Display Indicators

The LED display provides important information:

- **Battery Percentage:** Shows the remaining battery charge.
- **Charging Indicator:** Illuminates when the trimmer is charging.
- **Maintenance Alerts:** May display icons for oiling or cleaning reminders.

## 5. Maintenance

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your trimmer.

### 5.1. Cleaning the Blades

1. Turn off the trimmer and disconnect it from the power source.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to brush away hair clippings from the blades and the trimmer head.
4. The blades are detachable for easier cleaning. Carefully detach them and rinse under running water if necessary (ensure the main body of the trimmer does not get wet). Dry thoroughly before reattaching.
5. Reattach the protection cap after cleaning.

### 5.2. Lubricating the Blades

1. After cleaning, apply 1-2 drops of the provided lubricating oil onto the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.
4. Lubricating the blades regularly (e.g., after every few uses) helps maintain their sharpness and smooth operation.

### 5.3. Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Always place the protection cap on the blades when not in use.

## 6. Troubleshooting

If you encounter any issues with your VGR V-947 trimmer, refer to the following common solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Trimmer does not turn on | Battery is depleted | Charge the trimmer fully. |
| Trimmer pulls hair or cuts poorly | Blades are dull or clogged with hair; Blades need lubrication | Clean the blades thoroughly; Apply lubricating oil to the blades. |
| Trimmer is not charging | USB cable or power source is faulty; Poor connection | Check the USB cable and try a different power source; Ensure the cable is securely connected. |
| Excessive noise or vibration | Blades are not properly aligned or lubricated | Ensure blades are correctly attached; Lubricate the blades. |

If the problem persists, please contact VGR customer support.

## 7. Specifications

| Feature | Detail |
|---|---|
| Model Number | V-947 |
| Blade Material | Stainless Steel |
| Battery Type | Lithium Ion |
| Battery Capacity | 2000mAh |

| Feature | Detail |
|---|---|
| Runtime | Up to 500 minutes |
| Charging Time | Approximately 4 hours |
| Charging Interface | USB Type-C |
| Cutting Lengths (with combs) | 1.5mm, 3mm, 4.5mm |
| Minimum Cutting Length | 0.5mm (without comb) |
| Product Dimensions | 16 x 4 x 3.5 cm |
| Item Weight | 170 g |
| Country of Origin | China |

## 8. Warranty and Support

### 8.1. Manufacturer Warranty

The VGR V-947 Professional Hair Trimmer comes with a 1-Year Brand Warranty. This warranty is valid only on products sold by authorized sellers. For warranty claims or product-related queries, please refer to the contact information below.




Image: A graphic promoting VGR's 2-year extended warranty, with a QR code to scan for registration. The QR code links to https://www.canvaqr.com/RGGmrTYMne.

### 8.2. Customer Support

For any assistance, please contact VGR customer care:

- **Email:** customercare@vgrofficial.in
- **Phone:** 9667796740
- **Website:** www.vgrofficial.in

Customer support hours: 10:00 AM to 6:00 PM, Monday to Saturday.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

**Open the live page**

**https://manuals.plus/asin/B0BRDFWYNK**

More documents and user manuals: **https://manuals.plus/**