Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CalExotics SE-0615-15-3

CalExotics Jack Rabbit Elite Thrusting Rabbit Vibrator SE-0615-15-3 User Manual

Model: SE-0615-15-3

Introduction

This manual provides comprehensive instructions for the safe and effective use, maintenance, and troubleshooting of the CalExotics Jack Rabbit Elite Thrusting Rabbit Vibrator, model SE-0615-15-3. Please read these instructions carefully before first use and retain for future reference.



Image: The CalExotics Jack Rabbit Elite Thrusting Rabbit Vibrator in purple, showcasing its overall design.

Product Features

- Powerful thrusting and vibrating shaft with dual flickering rabbit ears.
- Equipped with dual motors for enhanced performance.
- Constructed from premium silicone material.
- Offers 3 speeds of intense thrusting action and vibration in the main shaft.
- Features 10 functions of vibration, pulsation, and escalation in the stimulator.
- Includes a memory chip that resumes on the last function used.
- Security travel lock feature: hold for 3 seconds to turn on or off.
- USB rechargeable; charging cord included.
- Complete charge in 2 hours.
- Runs for 60 minutes on high speed and 120 minutes on low speed.

Setup

Charging the Device

Before first use, fully charge the device. Locate the charging port, typically at the base of the device. Insert the provided USB charging cord into the port and connect the other end to a compatible USB power source (e.g., computer, USB wall adapter).

- A full charge takes approximately 2 hours.
- The device operates for up to 60 minutes on high speed and 120 minutes on low speed per charge.



Image: The vibrator connected to its USB charging cable, illustrating the charging process.

First Use and Cleaning

Clean the device thoroughly before its first use and after each subsequent use. Use a toy cleaner or warm water with mild soap. Rinse thoroughly and pat dry with a lint-free cloth. Ensure the charging port is completely dry before charging or storing.

Operating Instructions

The CalExotics Jack Rabbit Elite features intuitive push-button controls for easy operation.

Power On/Off and Travel Lock

- To turn the device **ON** or **OFF**, press and hold the power button for 3 seconds. This also activates or deactivates the security travel lock feature.



Jack Rabbit®



3 SPEEDS OF **INTENSE THRUSTING ACTION** AND **VIBRATION**

FLICKERING RABBIT EARS WITH **10 INTENSE FUNCTIONS** OF **VIBRATION, PULSATION & ESCALATION**

- EASY **PUSH-BUTTON** CONTROL - HOLD FOR **3 SECONDS** TO TURN **ON** OR **OFF**
- **DUAL MOTORS**
- **PURE SILICONE**
- **INDEPENDENTLY OPERATED SHAFT** AND **STIMULATOR**
- **MEMORY CHIP** RESUMES ON **LAST FUNCTION** USED
- **SECURITY TRAVEL LOCK** FEATURE
- **ONE YEAR** WARRANTY

SHAFT: 5.25" X 1.5"/13.25 CM X 3.75 CM
STIMULATOR: 2.5" X 1"/6.25 CM X 2.5 CM
OVERALL: 9.25" X 1.5"/23.5 CM X 3.75 CM



MASSAGER WILL RUN FOR:
60 Minutes on High Speed
120 Minutes on Low Speed
Complete Charge in 2 Hours

****INSTRUCTIONS INCLUDED****



USB RECHARGEABLE
WITH SELF-SEALING PORT
CHARGING CORD INCLUDED

©2022 California Exotic Novelties, LLC, Ontario, CA. Made in China.
Product Registration: calexotics.com/warranty Material: Silicone (massager, buttons), ABS with Metallic Plating (decor). All rights reserved. The shape





Image: A detailed view of the control buttons, including the power button, on the device.

Adjusting Thrusting and Vibration Functions

- The device offers 3 speeds of intense thrusting action and vibration in the main shaft. Use the dedicated thrusting control button to cycle through these speeds.
- The stimulator features 10 functions of vibration, pulsation, and escalation. Use the dedicated vibration control button to explore these patterns.
- The memory chip ensures the device resumes on the last function used when powered on again.

Instructional Videos

Your browser does not support the video tag.

Video: An instructional video demonstrating the features and operation of the CalExotics Jack Rabbit Elite. This video provides a visual guide to using the device's various functions.

Your browser does not support the video tag.

Video: A detailed video showcasing the thrusting and dual vibration capabilities of the CalExotics Jack Rabbit Elite. This visual aid helps users understand the device's dynamic movements.

Maintenance

Cleaning

To maintain hygiene and prolong the life of your device, clean it thoroughly after each use. Use a specialized toy cleaner or warm water with a mild, antibacterial soap. Apply the cleaner to a soft cloth and gently wipe down the entire surface of the device. Rinse thoroughly under warm water, ensuring no soap residue remains. Pat dry with a lint-free cloth. Do not submerge the entire device in water, especially the charging port area, unless explicitly stated as fully waterproof.

Storage


Store the device in a clean, dry place away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation or reactions. Ensure the device is fully charged before long-term storage to maintain battery health.


Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted or travel lock is active.	Charge the device for at least 2 hours. Press and hold the power button for 3 seconds to deactivate the travel lock.


Problem	Possible Cause	Solution
Device does not charge.	Charging cable or port issue.	Ensure the USB cable is securely connected to both the device and the power source. Try a different USB port or power adapter. Inspect the charging port for debris.
Functions are not changing.	Buttons not pressed correctly or device malfunction.	Ensure buttons are pressed firmly. If the issue persists after charging, contact customer support.

Specifications

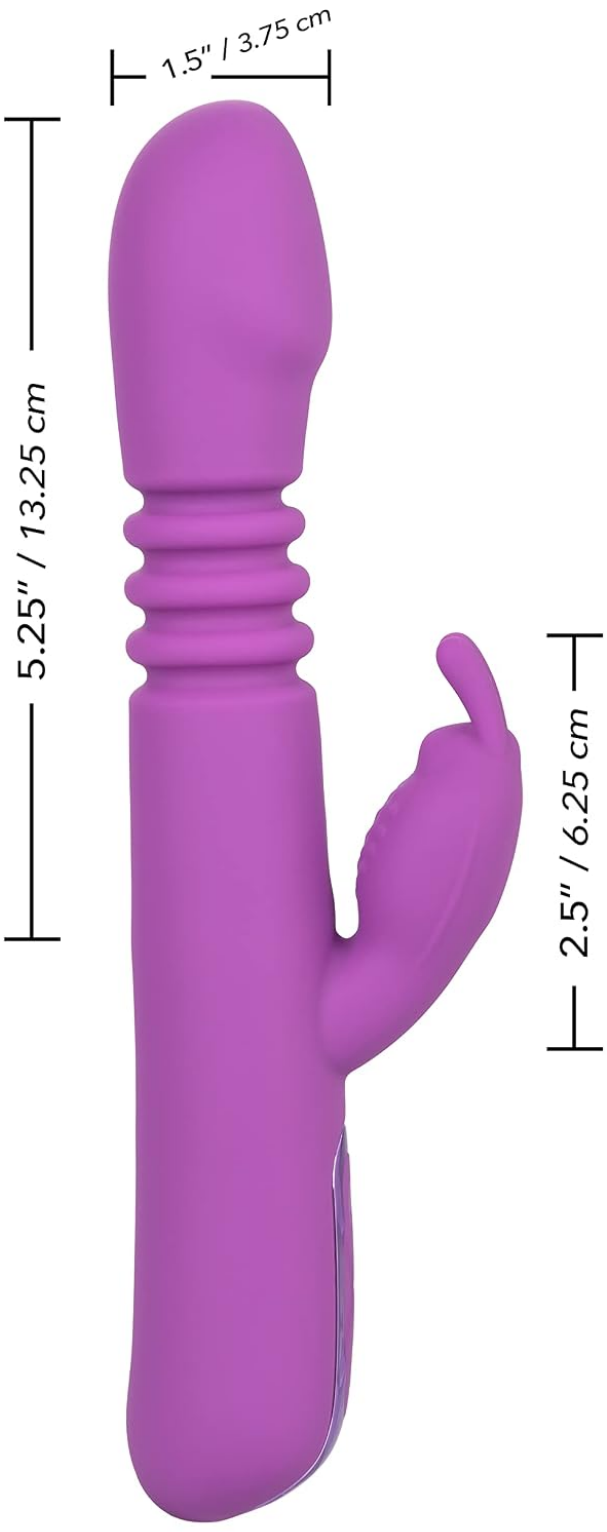

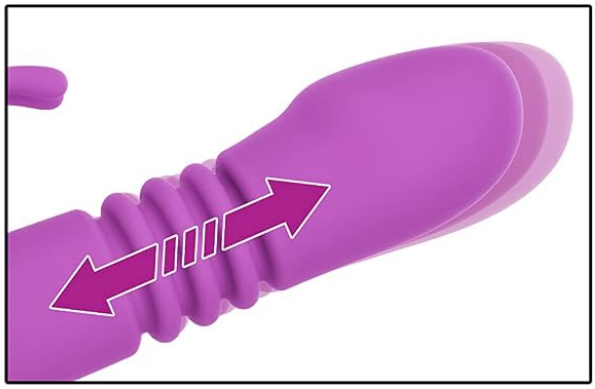

3 speeds of intense **thrusting action** and **vibration**

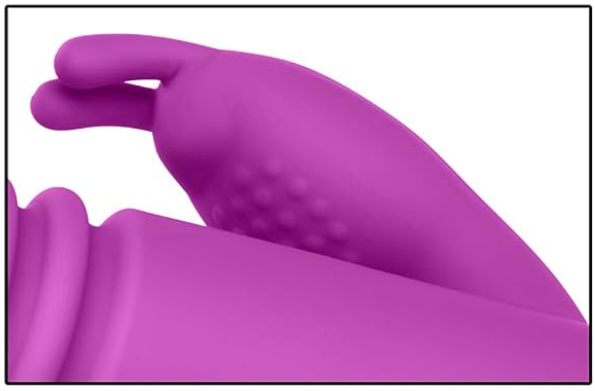

Flickering bunny ears with **10 fun functions** that take you to a new level of pleasure



Easy to use with push-button controls

Image: The vibrator shown with its key dimensions, including length and width measurements.

Feature	Detail
Model Number	SE-0615-15-3
Product Dimensions	9 x 2.5 x 1.75 inches (approx. 22.86 x 6.35 x 4.45 cm)
Weight	13.76 ounces (approx. 390 grams)
Material	Premium Silicone
Color	Purple
Battery Type	1 Lithium Polymer battery (included)
Charging Time	2 hours for a complete charge
Run Time (High Speed)	60 minutes
Run Time (Low Speed)	120 minutes
Thrusting Speeds	3
Vibration Functions	10 (vibration, pulsation, escalation)

Warranty Information

This CalExotics product is backed by a **1-year limited manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Support and Contact

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact CalExotics customer support. Refer to the product packaging or the official CalExotics website for the most current contact information.
Official Website: www.calexotics.com

© 2023 CalExotics. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BSP62YKF

More documents and user manuals: **https://manuals.plus/**