**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## CalExotics SE-4349-25-3

# CalExotics California Dreaming Huntington Beach Heartbreaker Vibrator

Model: SE-4349-25-3

## Introduction

This manual provides essential information for the safe and effective use of your CalExotics California Dreaming Huntington Beach Heartbreaker Vibrator. Please read these instructions thoroughly before first use and retain for future reference.

## Safety Information

- This product is intended for adult use only.
- Discontinue use immediately if you experience any discomfort, pain, or irritation. Consult a medical professional if symptoms persist.
- Do not use on swollen or inflamed areas of the skin.
- Keep out of reach of children.
- Do not immerse the charging port in water. Ensure the charging port is completely dry before charging.

## Setup

### Unpacking

Carefully remove the vibrator and all accessories from the packaging. Inspect the device for any visible damage.




Image: The Huntington Beach Heartbreaker Vibrator shown in its retail box, highlighting key features.

## Initial Charging

Before first use, fully charge your device. Locate the USB charging port on the vibrator. Connect the included USB charging cable to the device and a compatible USB power source (e.g., computer, USB wall adapter). The LED light will flash while charging and glow solid when fully charged. A complete charge takes approximately 2.5 hours.




Image: The vibrator connected to a USB charging cable, illustrating the charging process.

## Cleaning

Clean the vibrator thoroughly before its first use and after each subsequent use. Use warm water and a toy cleaner or mild soap. Rinse thoroughly and pat dry with a lint-free cloth.

## Operating Instructions

The Huntington Beach Heartbreaker features powerful dual motors, offering 3 speeds of vibration in the shaft and 10 functions of intimate suction in the stimulator. It also includes a memory chip and a security travel lock.






Image: A visual guide to the vibrator's features, including vibration speeds, suction functions, and button controls.

## Power On/Off and Travel Lock

- To turn the device **ON** or **OFF**, press and hold the top power button for 3 seconds.
- The device features a security travel lock. To activate or deactivate the travel lock, press and hold the top power button for 3 seconds.

### Vibration and Suction Control

- The shaft offers **3 speeds of independent vibration**. Use the designated button to cycle through these speeds.
- The stimulator provides **10 functions of independent intimate suction**. Use the designated button to cycle through these functions.
- The memory chip ensures the device resumes on the last function used when powered on.



Image: Detailed view of the control buttons for power, vibration, and suction functions.

### Product Overview Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and operation of the CalExotics California Dreaming Huntington Beach Heartbreaker.

## Maintenance

### Cleaning

The vibrator is waterproof, making cleaning simple. After each use, wash the device with warm water and a toy cleaner or mild soap. Rinse thoroughly to remove all soap residue. Ensure the charging port is dry before storing or recharging.



Image: The vibrator submerged in water, illustrating its waterproof capability for easy cleaning.

### Storage

Store the vibrator in a clean, dry place away from direct sunlight and extreme temperatures. Avoid storing with other toys made of different materials to prevent material degradation.

## Troubleshooting

### Device Not Turning On

- Ensure the device is fully charged. Refer to the 'Initial Charging' section.
- Check if the travel lock is activated. Press and hold the power button for 3 seconds to deactivate it.

### Weak Performance

- The battery may be low. Recharge the device fully.

## SPECIFICATIONS

| | |
|---|---|
| **Model Number** | SE-4349-25-3 |
| **Material** | Silicone |
| **Color** | Purple |
| **Motors** | Dual Motors |
| **Vibration Speeds** | 3 (independent in shaft) |
| **Suction Functions** | 10 (independent in stimulator) |
| **Battery Type** | 1 Lithium Polymer (included) |
| **Charging Time** | 2.5 hours (full charge) |
| **Run Time** | 40 minutes (high speed), 90 minutes (low speed) |
| **Waterproof** | Yes |
| **Dimensions** | 8.4 x 5.4 x 2.6 inches (Package) |

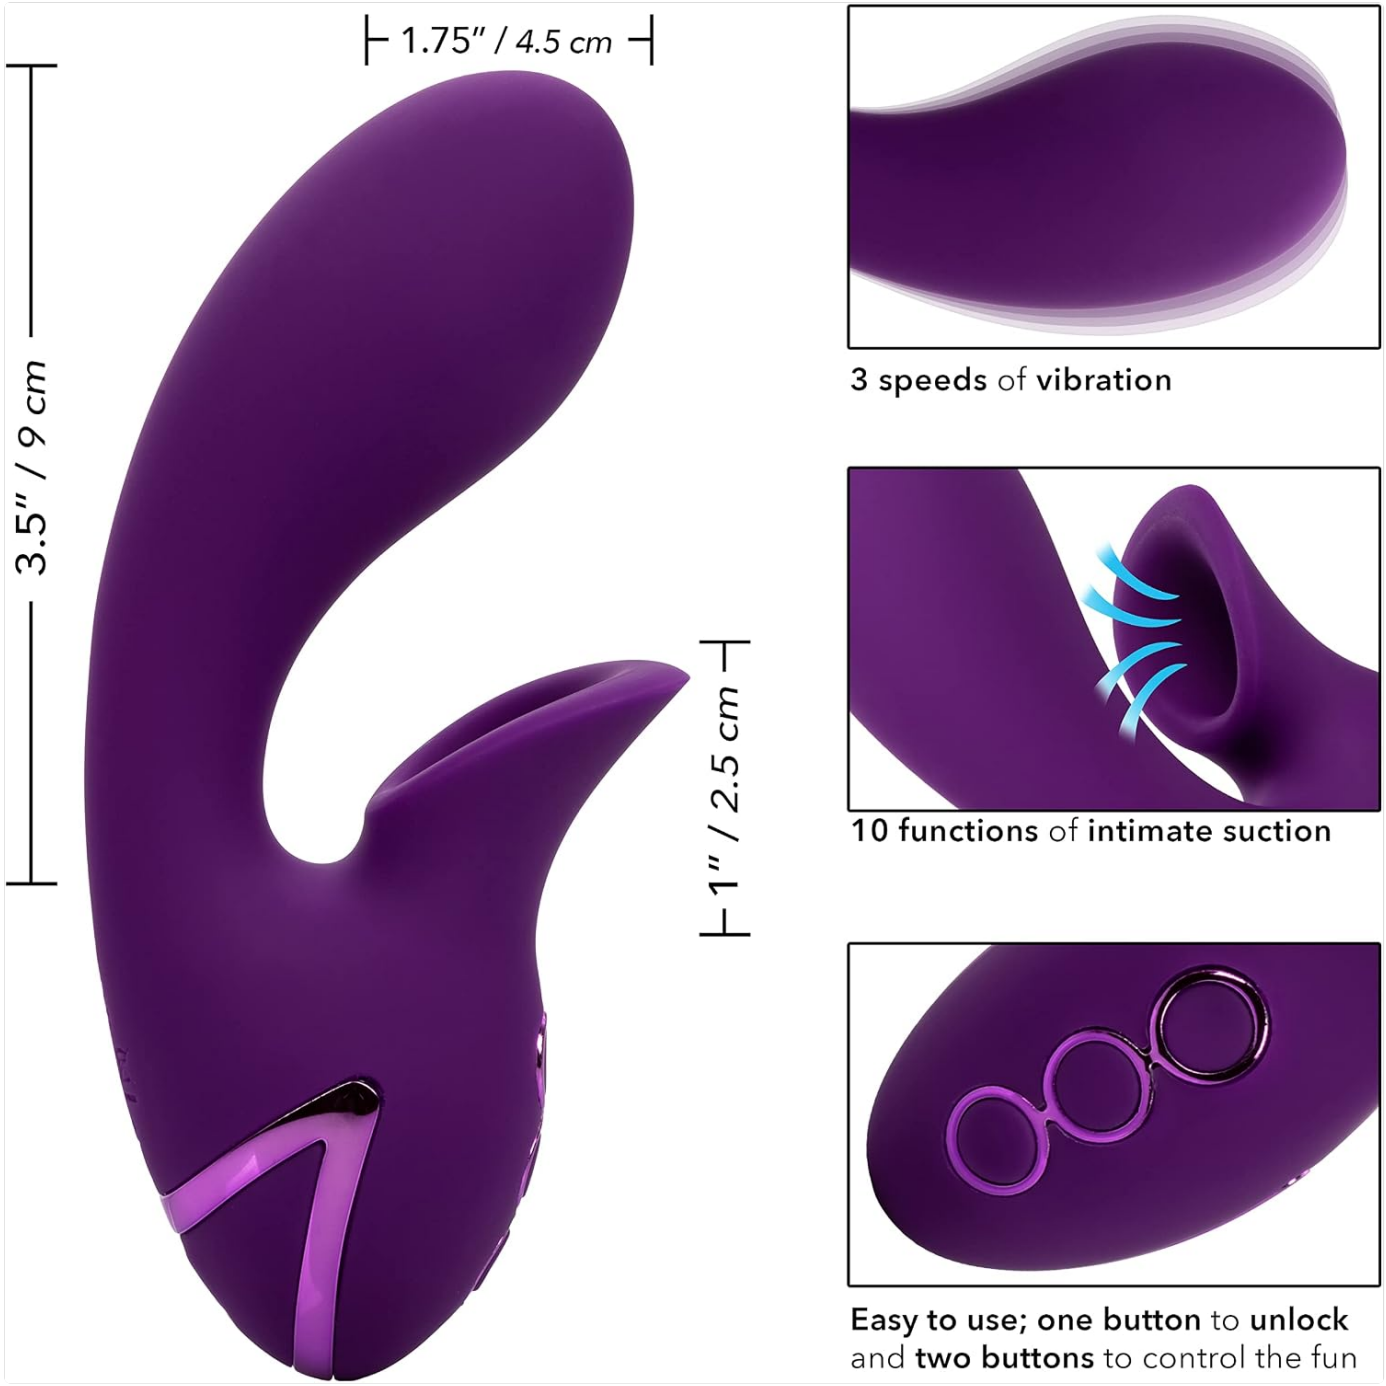



Image: The vibrator with key dimensions indicated for the shaft and stimulator.

## Warranty

This product is covered by a **1-year manufacturer warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

## Support

For further assistance, troubleshooting, or warranty inquiries, please contact CalExotics customer support. Visit the official CalExotics website for contact information: www.calexotics.com

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0BSP6YRS1**

More documents and user manuals: **https://manuals.plus/**