Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY QYSY-KT1946-NYGP-QYSY

ALLIMITY Replacement Remote Control User Manual

Brand: ALLIMITY | Model: QYSY-KT1946-NYGP-QYSY

1. Introduction

This manual provides comprehensive instructions for the ALLIMITY Replacement Remote Control, model QYSY-KT1946-NYGP-QYSY. This remote is designed to replace your original remote control for various RCA and ODL television models, offering immediate functionality without the need for complex programming.

The remote control covers all functions of your original remote. Simply insert batteries, and it is ready for use.





Figure 1.1: Front view of the ALLIMITY Replacement Remote Control.

2. Setup: Battery Installation

The ALLIMITY Replacement Remote Control requires two AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for immediate use with compatible devices. No programming or pairing is required.



Figure 2.1: Side view of the remote control, showing its ergonomic design.

3. Operating Instructions

This remote control is designed for intuitive operation, mirroring the functionality of your original remote. Point the remote directly at the infrared receiver on your television for optimal performance.

3.1. Button Functions Overview



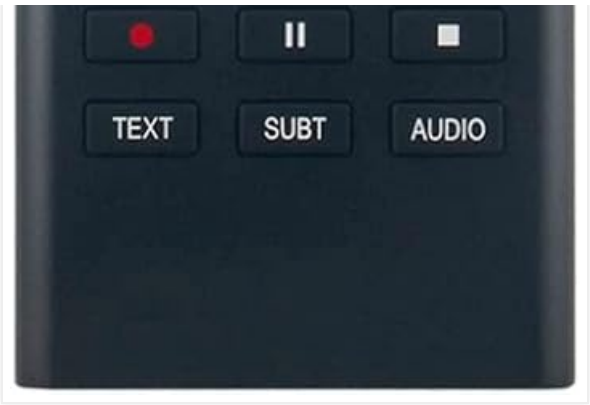


Figure 3.1: Detailed view of the remote control buttons.

Button	Function
Power ( )	Turns the television on or off.
Number Buttons (0-9)	Direct channel selection.
INFO	Displays current program information.
GUIDE	Accesses the electronic program guide.
Netflix, YouTube, Google Play, Prime Video	Direct access buttons for streaming services.
HOME	Returns to the main home screen or smart TV interface.
MENU	Opens the television's main menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections or enters sub-menus.
BACK	Returns to the previous screen or menu.
EXIT	Exits current menu or application.
VOL +/-	Adjusts the volume level.
Mute ( )	Mutes or unmutes the audio.
CH ^/v	Changes channels up or down.
SOURCE	Selects input source (HDMI, AV, etc.).
Color Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications.
Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop, Record)	Controls media playback.
TEXT	Accesses teletext services.
SUBT	Toggles subtitles on or off.
AUDIO	Selects audio tracks or modes.

4. Compatible Models

This ALLIMITY Replacement Remote Control is compatible with a wide range of RCA and ODL television models. A comprehensive list of compatible models includes:

- RCA Models: RS42, RS32H2, RS43F2, RS50U2, RS65U2, RS43F3, RS32F3, RS55U2, RS42F2, RS50U2-EU, RS43F3-UK, RS32F3-UK, RS65U2-EU, RS55U2-EU, RS42F2-EU, RS43F2-EU, RS32H2-EU, RS32F3-EU
- ODL Models: ODL 24760HN-TAB, ODL 32772HN-TAB, ODL 24771HN-TAB, ODL 40761FN-TAB, ODL 24772HN-TAB, ODL 32761HN-TAB, ODL 32771HN-TAB

If your television model is listed above, this remote control should function without any additional setup.

5. Troubleshooting

If you encounter issues with your ALLIMITY Replacement Remote Control, please refer to the following common problems and solutions:

- **Remote is unresponsive:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old or depleted batteries with new AAA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the television's infrared sensor.
  - Confirm you are within the effective operating range (up to 10 meters).
- **Certain buttons do not work:**
  - Verify that the button's function is applicable to your specific television model. Some buttons may be specific to certain smart TV features or inputs.
  - Clean the remote control's surface and buttons with a soft, dry cloth to remove any dirt or debris that might be obstructing button presses.
- **Remote works intermittently:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure consistent line of sight to the TV's IR receiver.

If the issue persists after trying these steps, please contact customer support.

6. Specifications

Feature	Detail
Brand	ALLIMITY
Model Number	QYSY-KT1946-NYGP-QYSY
Special Feature	Universal compatibility, No programming required
Compatible Devices	RCA and ODL televisions (specific models listed in Section 4)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Number of Buttons	Standard TV remote buttons, including dedicated streaming service buttons.
Maximum Range	10 Meters (approximately 33 feet)
Battery Description	Alkaline (AAA batteries, not included)
Country of Origin	China

7. Warranty and Support

Specific warranty information for this product is not provided in the available documentation. For any product-related inquiries, technical assistance, or support, please contact the manufacturer, ALLIMITY, or your point of purchase.

Please retain your purchase receipt as proof of purchase for any potential warranty claims or support requests.

© 2024 ALLIMITY. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BTM5SQZF

More documents and user manuals: **https://manuals.plus/**