MiLESEEY PF260

MiLESEEY PF260 Golf Rangefinder User Manual

Rechargeable Range Finder with Slope Switch, Flag Lock, Vibration

Introduction

This user manual provides comprehensive instructions for the MiLESEEY PF260 Golf Rangefinder. The PF260 is a high-precision laser rangefinder designed for golf, featuring a slope on/off switch for tournament legality, flag lock with pulse vibration, and a magnetic strip for convenient attachment. It offers accurate distance measurements to enhance your game.



Figure 1: MiLESEEY PF260 Golf Rangefinder with included accessories.

What's in the Box

Upon unboxing your MiLESEEY PF260 Golf Rangefinder, please verify that all the following items are included:

- Golf rangefinder
- Premium carrying pouch with hook
- Rechargeable CR2 battery
- Microfiber cleaning cloth
- User manual



Figure 2: All items included in the MiLESEEY PF260 package.

Product Features

The MiLESEEY PF260 Golf Rangefinder is equipped with several key features designed to enhance your golfing experience:

1. Slope On/Off Switch

The physical slope switch allows you to easily toggle the Angle Range Compensation (ARC) system. When slope is on, the device provides accurate angle-compensated distances for incline/decline. When off, it provides line-of-sight distance, making it legal for tournament play.



Figure 3: Illustration of the slope switch and its effect on distance display.

2. Flag Pin Lock with Pulse Vibration

This feature provides a short vibrating pulse to confirm that the rangefinder has successfully locked onto the flag, ensuring you get the correct distance. It supports flagpole locking up to 250 yards and works with both slope on and off modes.



Figure 4: Visual representation of the flag lock and vibration function.

3. Integrated Magnetic Strip

The built-in magnet allows you to securely attach the rangefinder to a golf cart frame or other metallic surfaces, keeping it easily accessible and preventing drops.



Figure 5: The rangefinder attached to a golf cart bar using its magnetic strip.

4. Rechargeable & Removable Battery

The PF260 supports two power supply modes: a rechargeable CR2 battery (included) and non-rechargeable CR2 batteries. The included rechargeable battery can be charged via a Type-C cable.



Figure 6: Illustration of the rechargeable and removable battery compartment and Type-C charging port.

5. Faster Focus System

Equipped with premium, ultra-clear, multilayered optical lenses, the rangefinder provides a clear view and quick focus for precise targeting.



Figure 7: The adjustable eyepiece for focusing the optical lens.

6. Golf Slope Adjusted Mode

This mode utilizes angle range compensation to provide the accurate distance for uphill and downhill shots, helping you select the correct club and improve shot accuracy.

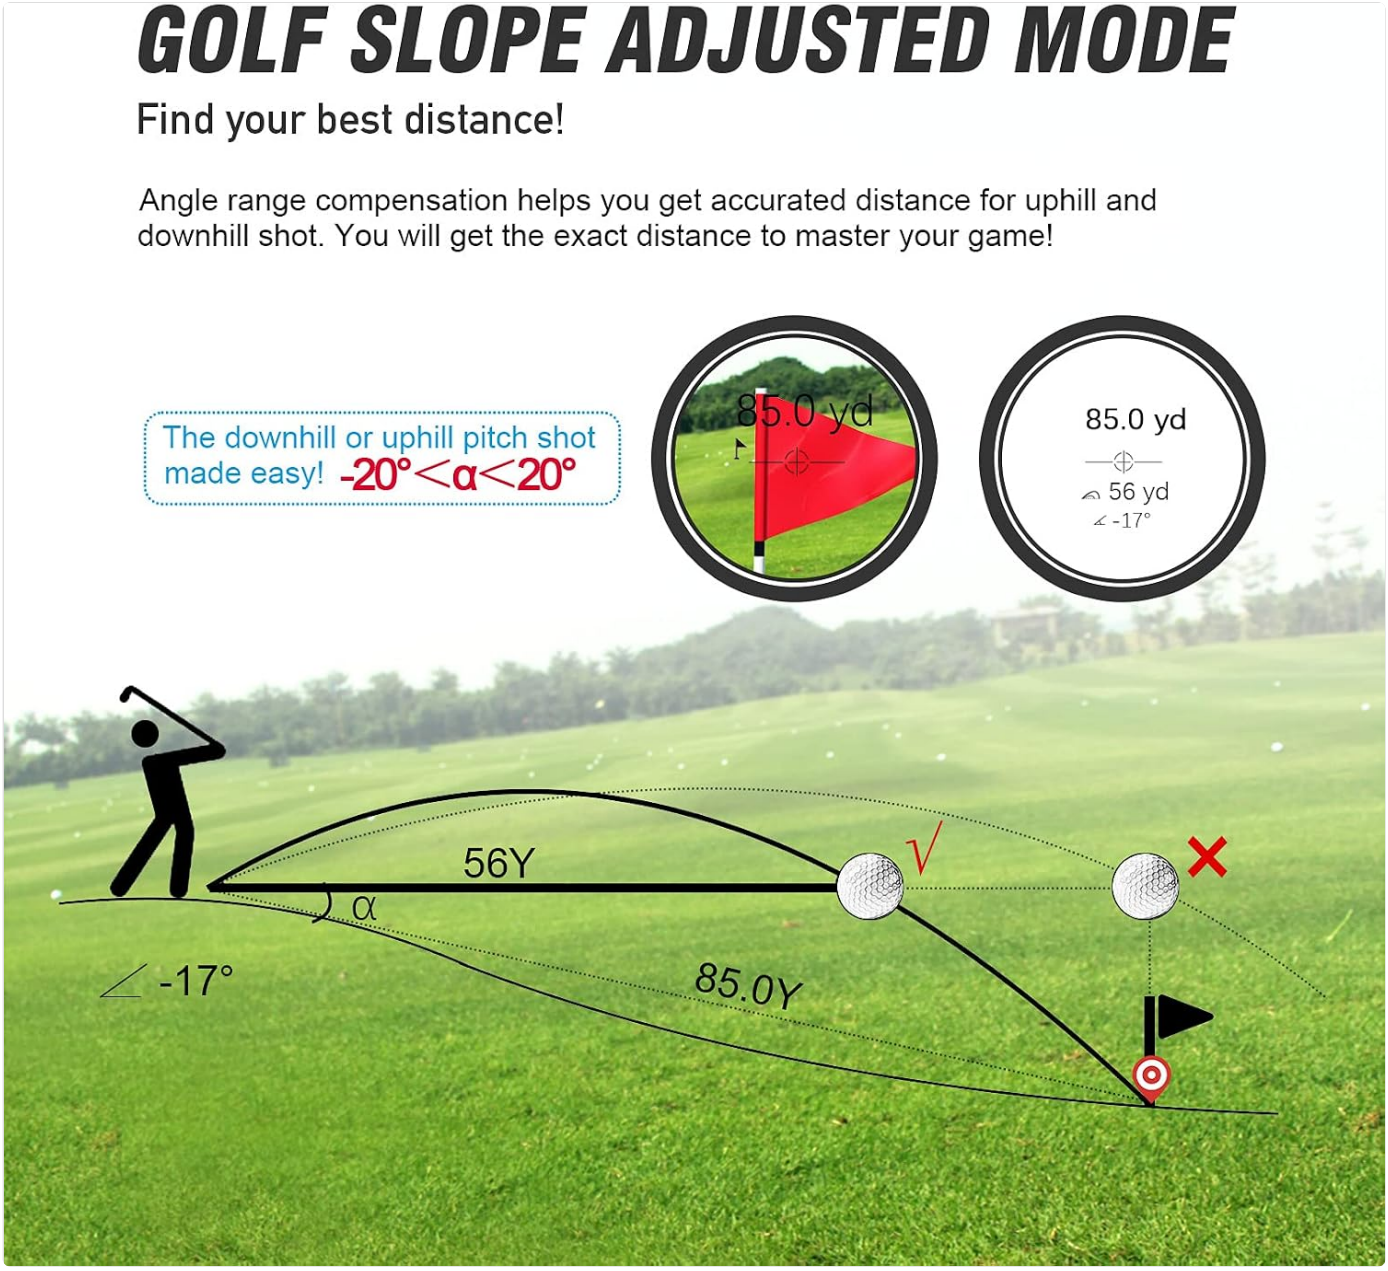


Figure 8: Diagram illustrating how slope adjustment calculates effective distance.

Product Overview Video

Watch this official video for a visual overview of the MiLESEEY PF260 Golf Rangefinder's features and usage.

Your browser does not support the video tag.

Video 1: MILESEEY recharging golf range finder with magnet. This video demonstrates the rangefinder's magnetic attachment, slope switch, flag lock, and overall use on a golf course.

Setup

1. Battery Installation

The MiLESEEY PF260 uses a CR2 battery. Before first use, ensure you remove any plastic wrapping from the included rechargeable CR2 battery. Open the battery compartment, insert the battery with the correct polarity, and close the compartment securely.

2. Charging the Battery

To charge the rechargeable CR2 battery, connect the provided Type-C USB cable to the rangefinder's charging port and

the other end to a suitable USB power source. The indicator light will turn green once fully charged. **Warning:** Do not attempt to charge non-rechargeable CR2 batteries directly within the device.



Figure 9: Red light indicates charging, green light indicates fully charged.

Operating Instructions

1. Power On/Off

Press the power button (usually the main measurement button) to turn on the device. The display will activate. The device will automatically power off after a period of inactivity to conserve battery.

2. Adjusting Focus

Rotate the eyepiece to adjust the focus until the display and target appear clear and sharp.

3. Switching Measurement Modes

The PF260 offers various measurement modes. Press the 'M' (Mode) button to cycle through them:

- **Distance Measuring (Slope Off Mode):** Provides direct line-of-sight distance.
- **Slope Compensation:** Calculates and displays angle-compensated distance.
- **Flag Lock & Vibration:** Locks onto the nearest target (flagpole) and vibrates.
- **Horizontal Distance Measuring:** Measures horizontal distance.
- **Vertical Height Measuring:** Measures the height between two points.



Figure 10: Overview of different measurement modes available on the rangefinder.

4. Using the Slope Switch

To enable or disable the slope compensation feature, slide the physical switch located on the side of the rangefinder. Ensure the switch is in the desired position before taking a measurement, especially for tournament play.

Maintenance

Proper maintenance will ensure the longevity and accuracy of your MiLESEEY PF260 Golf Rangefinder:

- **Cleaning:** Use the provided microfiber cleaning cloth to gently wipe the lenses and the body of the rangefinder.

Avoid using abrasive materials or chemical cleaners.

- **Storage:** Store the device in its protective carrying pouch when not in use. Keep it in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** If storing for extended periods, remove the battery. Recharge the battery regularly to maintain its health, even if not frequently used.

Troubleshooting

If you encounter issues with your MiLESEEY PF260, refer to the following common troubleshooting steps:

- **Device not powering on:** Check if the battery is correctly installed and charged. Ensure the plastic wrapping has been removed from the battery.
- **Inaccurate readings:** Ensure the lenses are clean. Make sure you are targeting a clear object and not obstructions. Verify the correct measurement mode is selected.
- **Flag lock not working:** Ensure there are no significant obstructions between the rangefinder and the flag. Try scanning slowly around the flag.
- **Display unclear:** Adjust the eyepiece focus. Clean the lenses with the microfiber cloth.

If problems persist, please contact customer support.

Specifications

Attribute	Value
Model Number	PF260
Color	Blue
Material Type	Plastic
Sport	Golf
Product Dimensions	11 x 6.5 x 3.8 cm
Item Weight	200 g
Battery Type	1 CR2 Lithium-Ion (included)
Laser Class	Class 1 laser, wavelength 905nm

Warranty and Support

MiLESEEY offers comprehensive support for your PF260 Golf Rangefinder:

- **Warranty:** Enjoy a 24-month warranty after online registration.
- **Customer Support:** Lifetime customer support is available for any queries or assistance you may need.

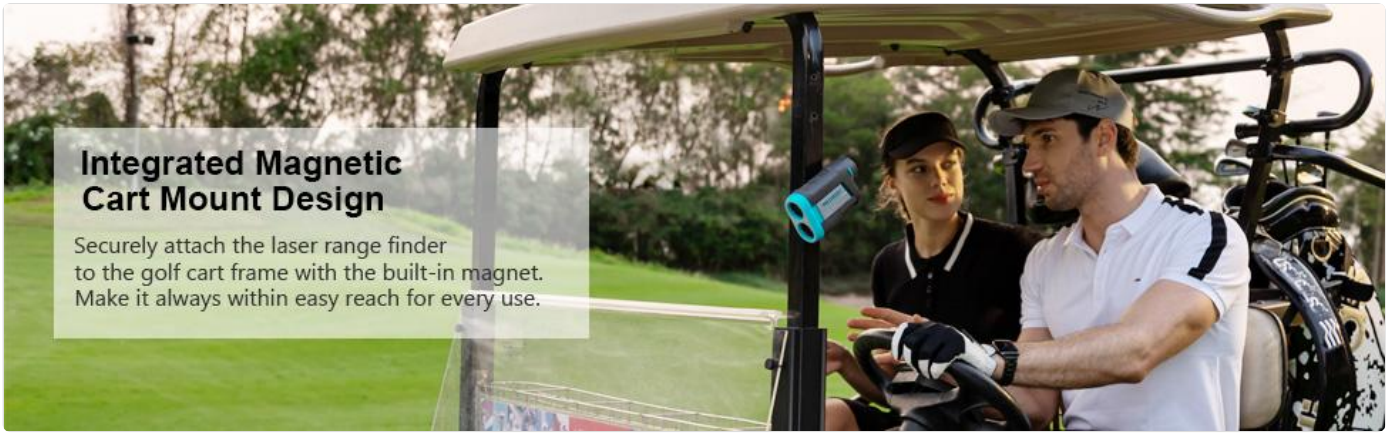


Figure 11: MiLESEEY warranty and customer support details.

For further assistance, please refer to the contact information provided in your user manual or visit the official MiLESEEY website.

© 2024 MiLESEEY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question