ZdalaMit NE219UD

ZdalaMit NE219UD Replacement Remote Control User Manual

For Magnavox TV DVD Combo Models: MWC13D5, MWC13D5A, MWC13D5DF, MSD520FF, MSD513F

1. Introduction

This manual provides instructions for the ZdalaMit NE219UD replacement remote control. This remote is designed to function as a direct replacement for original remote controls used with specific Magnavox TV DVD Combo models. No programming is required for operation.

Key Features:

- Direct replacement, no programming needed.
- Compatible with various Magnavox TV DVD Combo models.
- Requires two 1.5V AAA alkaline batteries (not included).





Image 1: Front view of the ZdalaMit NE219UD Replacement Remote Control. The remote is black with white and red buttons, clearly showing the layout of power, number, channel, volume, playback, and menu controls.

2. Setup

2.1 Battery Installation

The ZdalaMit NE219UD remote control requires two (2) 1.5V AAA alkaline batteries for operation. Batteries

are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use without any additional programming.

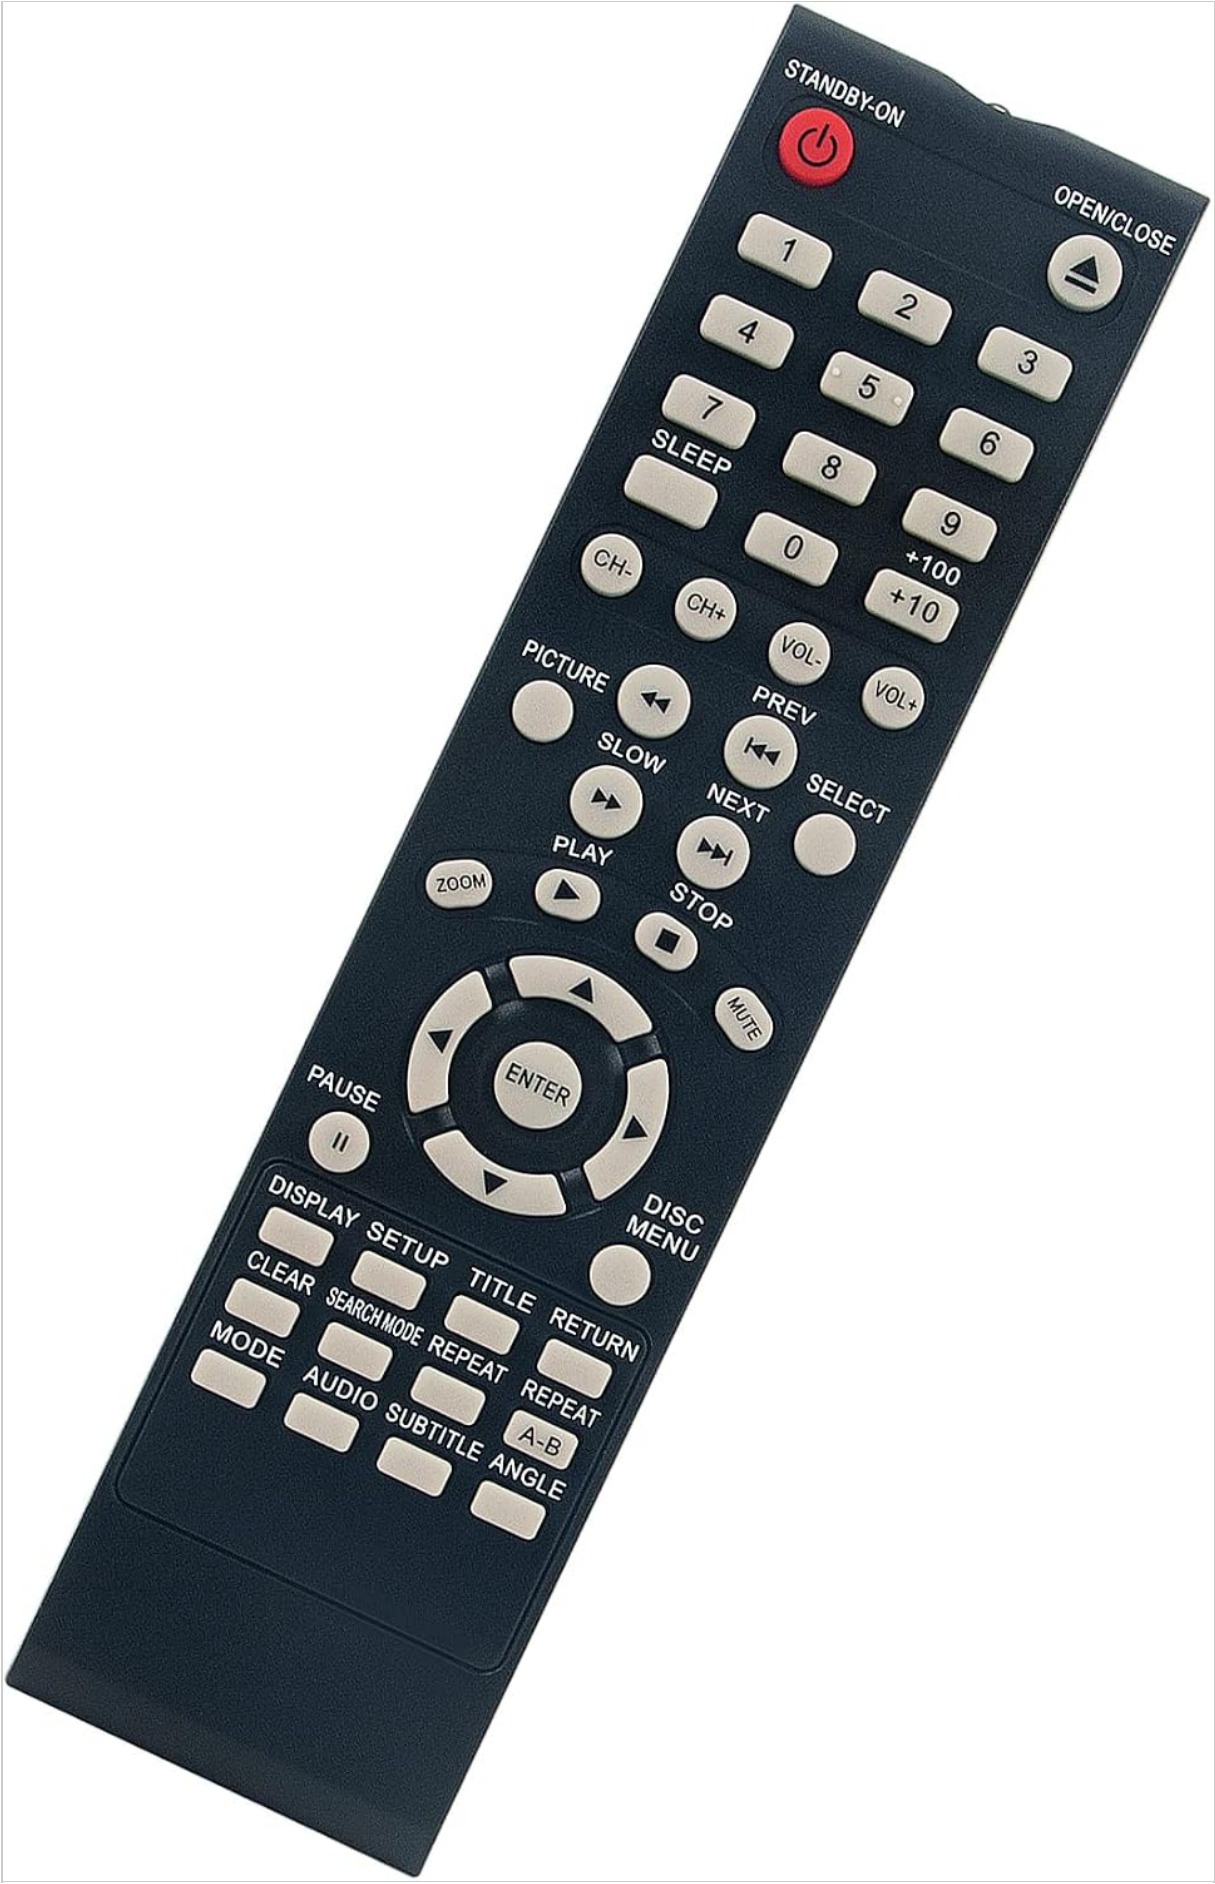


Image 2: Angled view of the ZdalaMit NE219UD Replacement Remote Control, highlighting its ergonomic design and button layout from a different perspective.

3. Operating Instructions

This remote control is designed to replicate the functions of your original Magnavox TV DVD Combo remote. Simply point the remote at your device and press the desired button.

3.1 Compatible Models

The NE219UD remote control is compatible with the following Magnavox TV DVD Combo models:

- MWC13D5
- MWC13D5A
- MWC13D5DF
- MSD520FF
- MSD513F

3.2 Button Functions Overview

The remote features standard controls for TV and DVD combo units. Common button functions include:

- **STANDBY-ON (Red Button):** Powers the device on or off.
- **OPEN/CLOSE:** Opens or closes the DVD tray.
- **Number Buttons (0-9, +10, +100):** Direct channel selection or input for menu options.
- **CH+/CH-:** Changes TV channels up or down.
- **VOL+/VOL-:** Adjusts volume up or down.
- **MUTE:** Silences the audio output.
- **PLAY, PAUSE, STOP, PREV, NEXT, SLOW:** Controls for DVD playback.
- **Directional Arrows (Up, Down, Left, Right) & ENTER:** Navigates menus and confirms selections.
- **DISC MENU, TITLE, RETURN:** DVD menu navigation.
- **DISPLAY, SETUP, MODE, AUDIO, SUBTITLE, ANGLE:** Accesses various settings and features.

Refer to your Magnavox TV DVD Combo's original manual for specific functions of each button if further detail is required.

4. Maintenance

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

5. Troubleshooting

If you experience issues with your ZdalaMit NE219UD remote control, consider the following troubleshooting steps:

1. **Remote Not Responding:**

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new 1.5V AAA alkaline batteries.
- Check for any obstructions between the remote and the device's infrared sensor.
- Ensure you are within the effective range and line of sight of the device.

2. **Specific Buttons Not Working:**
   - Clean the remote's surface, especially around the non-functioning buttons, to remove any debris.
   - If only a few buttons are unresponsive after checking batteries, the remote may be damaged.
3. **Remote Does Not Control Device:**
   - Verify that your Magnavox TV DVD Combo model is listed in the "Compatible Models" section (Section 3.1). This remote is a direct replacement and does not require programming for the specified models.
   - If your model is not listed, this remote may not be compatible.

6. Specifications

Model Number	NE219UD
Brand	ZdalaMit
Power Supply	2 x 1.5V AAA Alkaline Batteries
Product Dimensions	5 x 1.5 x 0.5 inches
Item Weight	1.41 ounces
Compatible Devices	Magnavox TV DVD Combo (MWC13D5, MWC13D5A, MWC13D5DF, MSD520FF, MSD513F)
Special Feature	Ergonomic design

7. Support

For further assistance or inquiries regarding your ZdalaMit NE219UD replacement remote control, please refer to the retailer or manufacturer's support channels where the product was purchased.
Ensure you have your product model number (NE219UD) and the specific Magnavox TV DVD Combo model ready when contacting support.