Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

The Cut Buddy 2006

The Cut Buddy Cordless Hair & Beard Trimmer: Instruction Manual

Model: 2006

1. Introduction

Thank you for choosing The Cut Buddy Cordless Hair & Beard Trimmer. This device is designed for precise and comfortable grooming, suitable for various hair types and lengths. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

2. What's Included

Your Cut Buddy Clipper & Grooming Set includes the following items:

- Cordless Hair & Beard Trimmer
- 7 Guard Combs (various lengths)
- Travel Case
- Barber Grade Scissors
- Comb
- USB Charger
- Lubricant Oil
- Cleaning Brush
- Protective Cap



Image: The complete Cut Buddy Cordless Hair & Beard Trimmer kit, including the trimmer, various guard combs, scissors, comb, and travel case.

3. Product Features

- **Titanium-Ceramic Blades:** Durable blades designed to stay cool, quiet, and sharp.
- **Adjustable Blade Length:** Integrated collar allows adjustment from 0.8mm to 2.0mm for precise cutting.
- **Custom Speed Control:** Choose from 3 RPM levels (6000, 6500, 7000) for personalized grooming.
- **High-Capacity Li-Ion Battery:** Provides up to 200 minutes of cordless operation on a single charge.
- **Waterproof Design (IPX6):** The clipper is water-resistant, allowing for easy cleaning under running water.
- **LED Display:** Shows battery percentage and selected speed.
- **3-Second Lock Feature:** Prevents accidental activation during travel or storage.
- **Quiet Operation:** Engineered for low noise and vibration for a comfortable grooming experience.



Image: The Cut Buddy Trimmer showcasing the seven included guard combs and the adjustable blade length ring, which prevents hair pulling and blade snags.



Image: A user trimming their beard with The Cut Buddy Trimmer, emphasizing its high-capacity Li-Ion battery (200 minutes cordless shaving) and three RPM power speeds (6000, 6500, 7000).

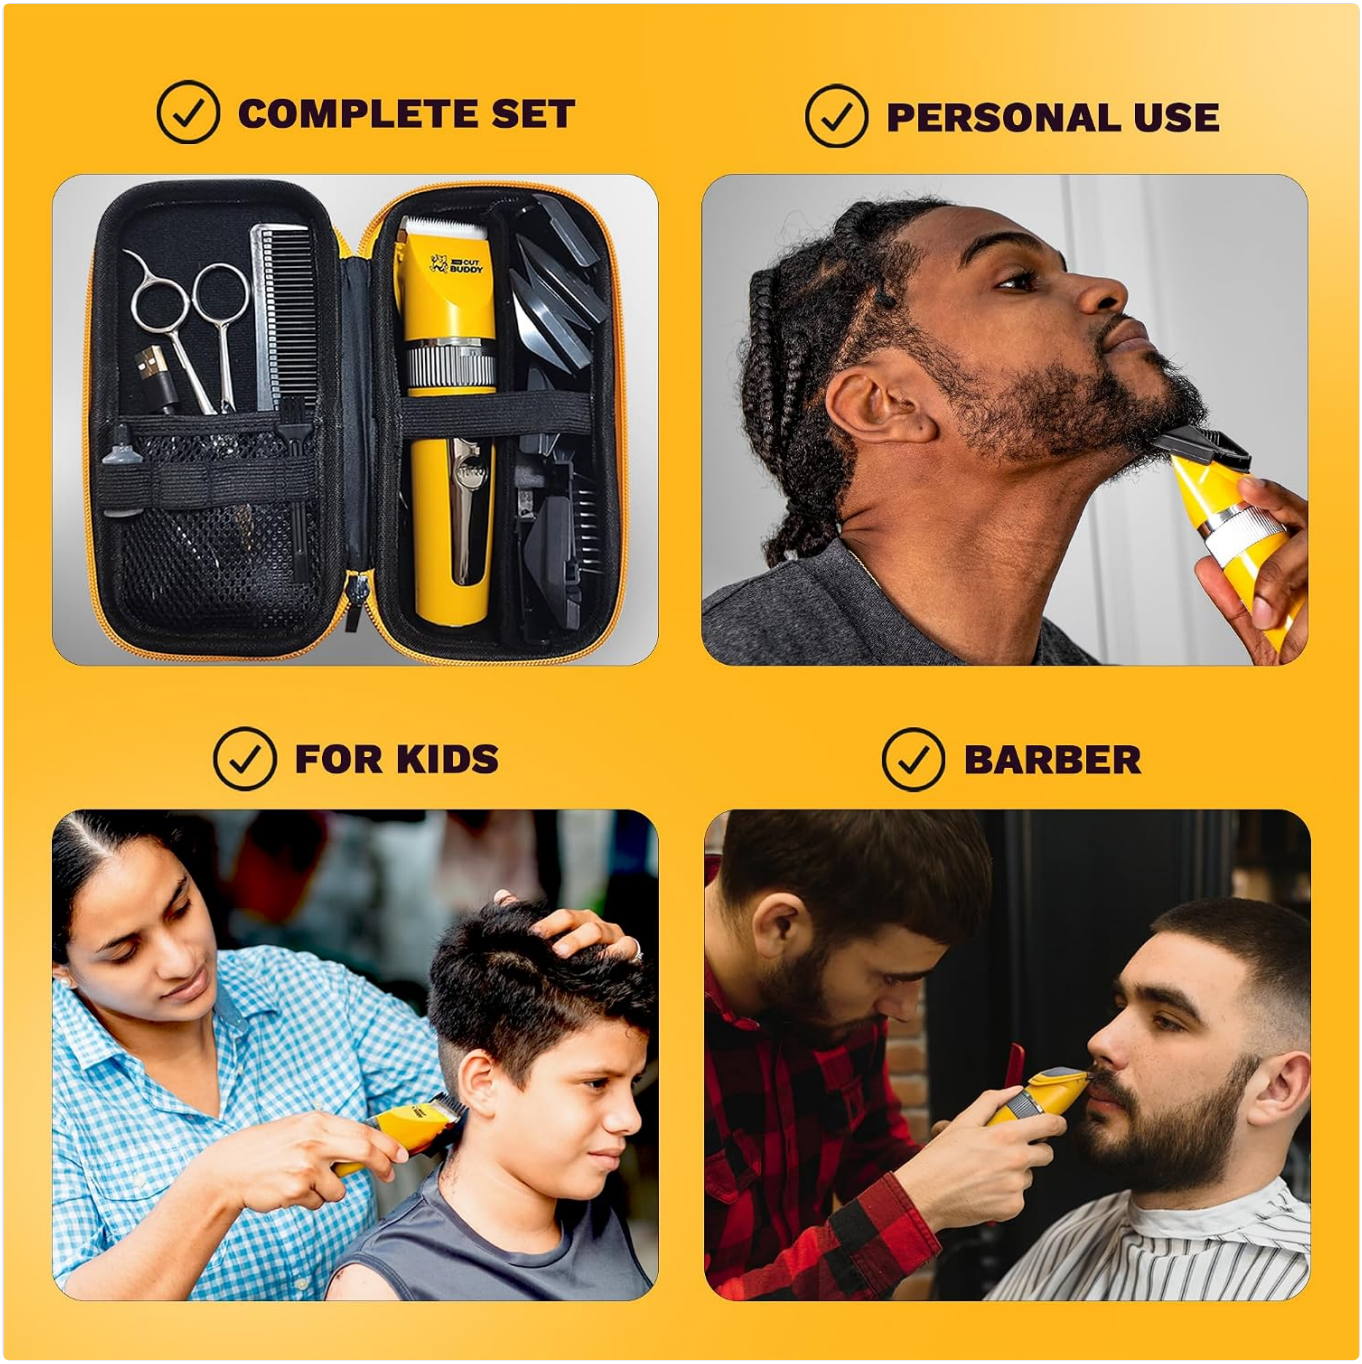


Image: A detailed view of The Cut Buddy Trimmer, highlighting the 0.8mm-2.0mm adjustable ring, ceramic cutting blade, Turbo speed button, 3-second lock feature, battery display, and charging port.

Video: Official product video demonstrating the ultra-quiet operation of The Cut Buddy Clippers, a key feature for a comfortable grooming experience.

4. Setup

1. **Initial Charge:** Before first use, fully charge the hair clipper using the provided USB charging cord. The LED display will indicate the battery level.
2. **Unlock Device:** If the lock icon is displayed, press and hold the power button for 3 seconds to unlock the clipper.
3. **Select Blade Length:** Rotate the adjustable collar to select your desired blade length (0.8mm to 2.0mm).
4. **Attach Guard Comb (Optional):** For longer cuts, select the appropriate guard comb and securely attach it over the blade. Ensure it clicks into place.

5. Operating Instructions

1. **Power On/Off:** Press the power button once to turn the clipper on. Press it again to turn it off.
2. **Adjust Speed:** While the clipper is on, press the 'Turbo' button to cycle through the three available speed settings (6000, 6500, 7000 RPM).
3. **Begin Trimming:** Hold the clipper firmly and move it against the direction of hair growth for an even cut. Use a comb to guide the hair if needed.
4. **Facial Hair/Body Grooming:** The adjustable blade and various guards make it suitable for precise beard trimming, detailing, and body grooming.
5. **Lock Feature:** To prevent accidental activation, press and hold the power button for 3 seconds until the lock icon appears on the LED display. Repeat to unlock.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your clipper.

1. **Cleaning:** After each use, turn off the clipper and remove any attached guard. Use the provided cleaning brush to remove loose hairs from the blades. Since the clipper is IPX6 waterproof, you can rinse the blades under running water. Ensure the clipper is completely dry before storage.
2. **Oiling:** Apply a small drop of the included lubricant oil to the blades after every few uses, or as needed. Turn the clipper on for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.
3. **Storage:** Store the clipper and all accessories in the provided travel case in a cool, dry place.



Image: The Cut Buddy Trimmer being rinsed under running water, demonstrating its IPX6 waterproof rating for easy cleaning.

7. Troubleshooting

Problem	Possible Cause	Solution
Clipper not turning on	Low battery; Device locked	Charge the clipper; Press and hold power button for 3 seconds to unlock.
Clipper stops holding a charge	Excess oil clogging motor; Faulty battery	Clean the motor area; Contact customer support for warranty claim.
Poor cutting performance	Dull blades; Hair buildup; Incorrect blade adjustment	Clean and oil blades; Adjust blade length or use appropriate guard.
Excessive noise or vibration	Lack of lubrication; Hair caught in blades	Apply lubricant oil to blades; Clean blades thoroughly.

8. Specifications

- **Model:** 2006
- **Blade Material:** Titanium, Ceramic
- **Power Source:** Battery Powered (Li-Ion)
- **Operating Time:** Up to 200 minutes cordless
- **RPM Speeds:** 6000, 6500, 7000 RPM
- **Adjustable Blade Length:** 0.8mm - 2.0mm
- **Water Resistance:** IPX6
- **Item Weight:** 0.54 Kilograms (approx. 1.19 Pounds)
- **Color:** Yellow
- **UPC:** 850026954142
- **Manufacturer:** The Cut Buddy
- **Date First Available:** February 9, 2023

9. Warranty and Support

The Cut Buddy Cordless Hair & Beard Trimmer comes with a**1-year manufacturer's warranty**. A **lifetime warranty** is provided for Veterans. For warranty claims, technical support, or any product-related inquiries, please contact The Cut Buddy customer service directly. Refer to the product packaging or official website for contact details.

© 2023 The Cut Buddy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BV97CHVJ

More documents and user manuals: **https://manuals.plus/**