Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WiZ Connected 604561

WiZ Connected LED Color Changing Outdoor Spotlight Starter Kit (2 Pack) Instruction Manual

Model: 604561

1. Product Overview

The WiZ Connected LED Color Changing Outdoor Spotlight Starter Kit provides smart, weatherproof lighting for your outdoor spaces. This kit includes two low-voltage spotlights designed for easy installation and control via the WiZ app, voice assistants, and smart home systems.

Key Features:

- **Easy Setup:** Connects directly to your existing 2.4GHz Wi-Fi network; no additional hub required.
- **16 Million Colors:** Offers a wide spectrum of colors and tunable white light (warm to cool) to create various ambiances.
- **Smart Control:** Manage lights remotely with the WiZ app, or integrate with Google Home, Alexa, and Siri Shortcuts for voice control.
- **Weatherproof Design:** Constructed with high-quality aluminum, IP44 rated for outdoor use, resistant to water, UV, and wind.
- **Low Voltage:** Safe and simple DIY installation.



Image: Overview of WiZ Outdoor Spotlight features, highlighting tunable white light, 16 million colors, remote control, weatherproof design, and voice control capabilities.

2. What's in the Box

Verify that all components are present before beginning installation:

- 2 x WiZ Connected LED Outdoor Spotlights
- 2 x Ground Spikes
- 1 x Power Supply Unit
- Connection Cables and Connectors
- Mounting Screws (if applicable for surface mounting)



Image: Contents of the Starter Kit box, including two black spotlights, two ground spikes, connection cables, and a power adapter.

3. Setup and Installation

Before You Begin:

1. Ensure your Wi-Fi router is powered on and broadcasting a 2.4GHz network. WiZ products require a 2.4GHz Wi-Fi connection for pairing and operation.
2. Have your Wi-Fi network name (SSID) and password ready.
3. Download the WiZ Connected app from the App Store (iOS) or Google Play Store (Android) on your smartphone or tablet.

Image: Step 1, showing the WiZ app icon and text instructing to download the WiZ Connected App.

Installation Steps:

1. **Assemble Spotlights:** Attach the ground spikes to the base of each spotlight. If surface mounting, use appropriate screws (not included) to secure the base.
2. **Position Lights:** Place the spotlights in your desired outdoor locations. Ensure they are within range of your 2.4GHz Wi-Fi network.
3. **Connect Cables:** Connect the spotlights to each other and to the power supply unit using the provided low-voltage cables. Ensure connections are secure. The system is designed for simple, safe DIY installation.
4. **Power On:** Plug the power supply unit into a suitable outdoor power outlet. The lights should illuminate.

Image: Step 2, illustrating the installation of a light and powering it on.

Pairing with WiZ App:

1. **Open WiZ App:** Launch the WiZ Connected app on your device.
2. **Grant Permissions:** The app may request location and local network permissions. Grant these to allow the app to discover and connect to your lights.
3. **Connect to 2.4GHz Wi-Fi:** Ensure your smartphone is connected to your home's 2.4GHz Wi-Fi network. This is crucial for successful pairing.
4. **Follow In-App Instructions:** The app will guide you through the pairing process. This typically involves searching for new devices and confirming their connection.
5. **Customize Settings:** Once paired, you can name your lights, assign them to rooms, and begin customizing their settings.

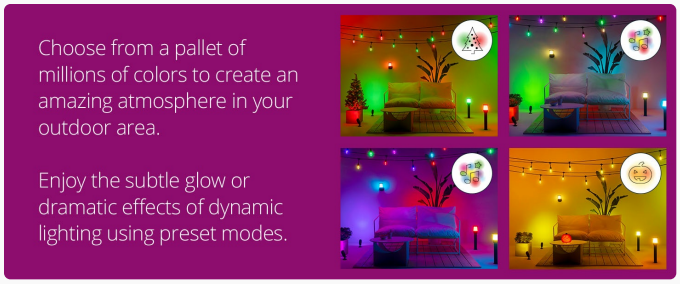


Image: Step 3, displaying a phone screen with app permissions and emphasizing the need for a 2.4GHz Wi-Fi connection for pairing.



Image: Step 4, illustrating a phone screen within the WiZ app where users can choose light settings for different rooms.

4. Operating Instructions

Controlling Your Lights:

- **WiZ App:** Use the WiZ app to turn lights on/off, change colors, adjust brightness, set schedules, and apply dynamic light modes.
- **Voice Control:** Integrate your WiZ lights with Google Home, Amazon Alexa, or Apple Siri Shortcuts for hands-

free control. Follow the instructions in your respective smart assistant app to link your WiZ account.

- **Smart Switches/Sensors:** WiZ offers compatible smart switches and motion sensors (sold separately) for additional control options.



Image: Control options for WiZ lights, including remote control, scheduling, voice commands, and compatibility with smart home platforms like Google Home, Alexa, and Siri Shortcuts.

Customizing Your Lighting:

- **Color and Brightness:** Select from 16 million colors or various shades of white light to match any mood or occasion. Adjust brightness levels from 1% to 100%.
- **Scenes:** Create and save custom light scenes within the WiZ app. These scenes can be activated with a single tap or integrated into schedules.
- **Schedules:** Automate your lights to turn on/off, change colors, or activate scenes at specific times of day or night.
- **Dynamic Modes:** Explore pre-set dynamic light modes that offer subtle glows or dramatic effects, perfect for holidays or special events.

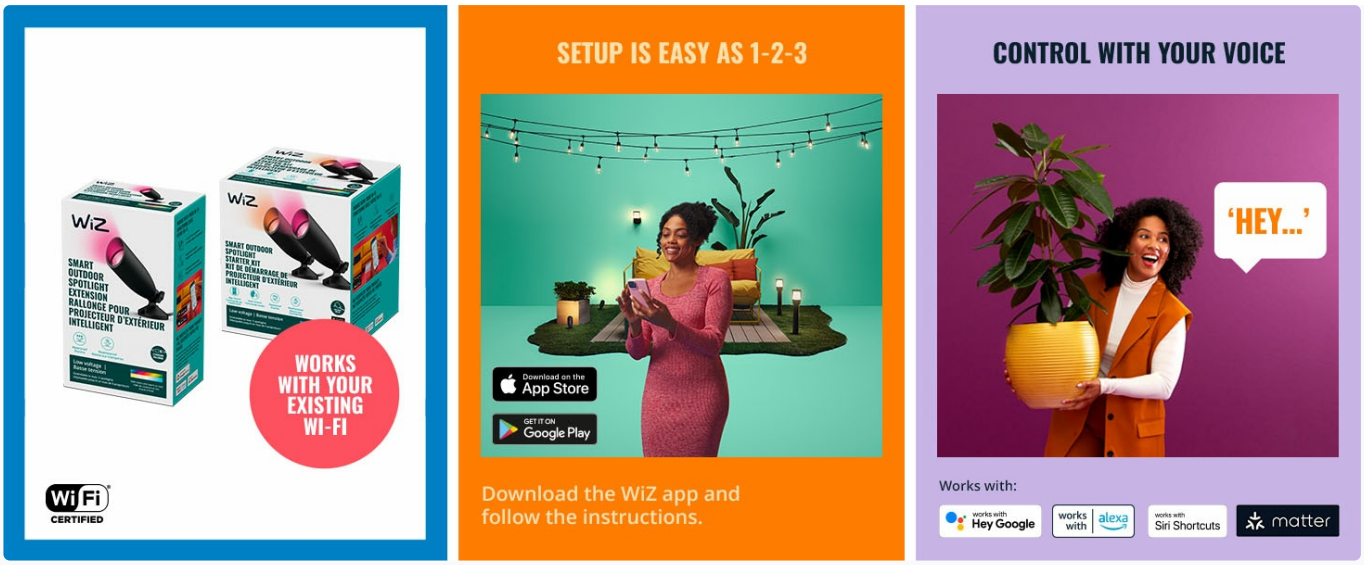


Image: Examples of outdoor lighting with WiZ spotlights, showcasing millions of colors and dynamic effects for different atmospheres.

5. Maintenance

The WiZ Outdoor Spotlights are designed for durability and require minimal maintenance.

- **Cleaning:** Periodically wipe the spotlights with a soft, damp cloth to remove dirt or debris. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Regularly check cables and connections for any signs of wear or damage. Ensure all connections remain secure and waterproof.
- **Environmental Factors:** While weatherproof, extreme weather conditions (e.g., severe storms, prolonged heavy snow) may warrant temporary removal or additional protection to prolong product life.

6. Troubleshooting

If you encounter issues with your WiZ Outdoor Spotlights, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights do not turn on.	No power, loose connection, or faulty unit.	Check power outlet, ensure all cables are securely connected. Try plugging into a different outlet. If still unresponsive, contact support.
Lights cannot be paired with the WiZ app.	Incorrect Wi-Fi band (not 2.4GHz), weak Wi-Fi signal, app permissions not granted, or device defect.	Ensure your phone is connected to a 2.4GHz Wi-Fi network. Move lights closer to the router. Grant all necessary app permissions. Try resetting the lights (power cycle them 3 times). If issues persist, contact support.
Lights constantly lose connection.	Weak Wi-Fi signal, network interference, or router issues.	Improve Wi-Fi coverage (e.g., use a Wi-Fi extender), reduce interference from other devices, or restart your router. Ensure lights are within optimal range.

Problem	Possible Cause	Solution
Colors or brightness do not change.	Connection issue, app glitch, or light malfunction.	Check Wi-Fi connection. Restart the WiZ app. Power cycle the affected light(s). If the problem continues, contact support.

7. Specifications

Feature	Detail
Brand	WiZ Connected
Model Name	WiZ 2pk Ground Spot Starter Kit
Item Model Number	604561
Light Type	LED
Wattage	5 watts per spotlight
Brightness	950 Lumens (total for 2 spotlights)
White Brightness	450 Lumens
Voltage	12 Volts (low voltage system)
Accepted Voltage Frequency	100 to 120 Volts and 60 Hertz (for power supply)
Light Color	Multicolor (16 million colors)
Special Feature	Waterproof, Weatherproof (IP44 rated)
Material	Synthetic Polymer (PMMA), Aluminum
Indoor/Outdoor Usage	Outdoor
Power Source	Corded Electric
Control Method	App (WiZ App)
Product Dimensions	2.91 x 2.44 x 7.99 inches (per spotlight)
Item Weight	0.634 ounces (per spotlight)
UPC	046677604561

8. Warranty Information

This WiZ Connected product is covered by a**2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper installation.

For detailed warranty terms and conditions, please refer to the official WiZ Connected website or contact customer support.

9. Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official WiZ Connected website or contact their customer service department. You can typically find contact information, FAQs, and additional resources on the brand's support pages.

Online Resources: www.wizconnected.com

© 2023 WiZ Connected. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BVGSX1PK

More documents and user manuals: **https://manuals.plus/**