Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Funsicle P4A3216L1

Funsicle Oasis Designer Rectangular Above Ground Swimming Pool

Model: P4A3216L1

Introduction

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Funsicle Oasis Designer Rectangular Above Ground Swimming Pool. Please read all instructions carefully before beginning installation and retain this manual for future reference. Proper installation and maintenance are crucial for the longevity and safe use of your pool.

Safety Information

WARNING: Failure to follow these safety guidelines can result in serious injury or death.

- **Adult Supervision Required:** Always supervise children and non-swimmers.
- **No Diving or Jumping:** This is an above-ground pool. Do not dive or jump into the pool.
- **Electrical Safety:** Ensure all electrical components, including the pump, are connected to a Ground Fault Circuit Interrupter (GFCI) outlet. Do not use extension cords.
- **Clear Area:** Keep the area around the pool clear of obstacles and ensure adequate space for safe entry and exit.
- **Chemical Handling:** Handle pool chemicals according to manufacturer instructions. Store chemicals safely away from children and pets.
- **Ladder Safety:** Use the provided SureStep ladder for entry and exit. Do not allow climbing on the pool walls.
- **Emergency Preparedness:** Keep emergency equipment (e.g., life preserver, first aid kit) readily accessible.

Package Contents

Verify that all components listed below are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Rectangular Pool Liner (Dark Herringbone print)
- Ultra-Strong Oval Metal Frame Poles
- 12-inch Sand Filter Pump (110-120V, 1600 GPH) with JetMaxx Aeration feature

- SureStep Ladder
- Pool Cover
- Ground Cloth
- Maintenance Kit (includes skimmer net, brush, vacuum head, pole)
- Repair Patch



Figure 1: Complete Pool Set Components

This image illustrates the main components included in your Funsicle Oasis Designer Rectangular Above Ground Swimming Pool set. It shows the pool structure, the sand filter pump, the SureStep ladder, the pool cover, the ground cloth, and the maintenance kit.

Setup Instructions

Assembly typically requires two people and can take several hours. Follow these steps for proper installation.



Figure 2: Quick Start Guide for Pool Setup

This quick start guide image outlines the four main steps for setting up your Funsicle Oasis pool: site preparation, pool assembly, initial water filling, and pump installation.

Step 1: Prepare the Site

1. Choose a flat, firm, and level surface. Uneven ground can cause structural stress and potential collapse.
2. Clear the area of any sharp objects, rocks, or debris that could puncture the liner.
3. Position the pool 10-21 feet from the nearest electrical outlet for filtration systems, ensuring the pump cable can reach without an extension cord.
4. Lay down the ground cloth in the chosen area to protect the pool liner.

Step 2: Assemble the Pool

1. Unfold the pool liner and spread it evenly over the ground cloth.
2. Assemble the metal frame by connecting the ultra-strong oval poles. Refer to the detailed diagrams in the separate

assembly guide for specific pole connections.

3. Ensure the liner is securely connected to the frame as per the assembly instructions. The matte finish on the poles helps prevent scratches and corrosion.

Step 3: Add the Water

1. Begin filling the pool with approximately one inch of water.
2. Carefully smooth out any wrinkles in the bottom of the liner by walking around the pool.
3. Continue filling the pool, ensuring the liner remains taut and evenly distributed as the water level rises.

Step 4: Install the Pump

1. Install the suction and return fittings into the pool liner.
2. Connect the hoses from the pool fittings to the sand filter pump.
3. Follow the specific instructions provided with the sand filter pump for its setup and initial operation. Ensure all connections are tight to prevent leaks.

Operating Instructions

Sand Filter Pump Operation

Your Funsicle Oasis pool includes a 12-inch sand filter pump with a 1600 GPH flow rate and JetMaxx Aeration feature for cleaner water. The pump features an easy-to-use 6-function handle.

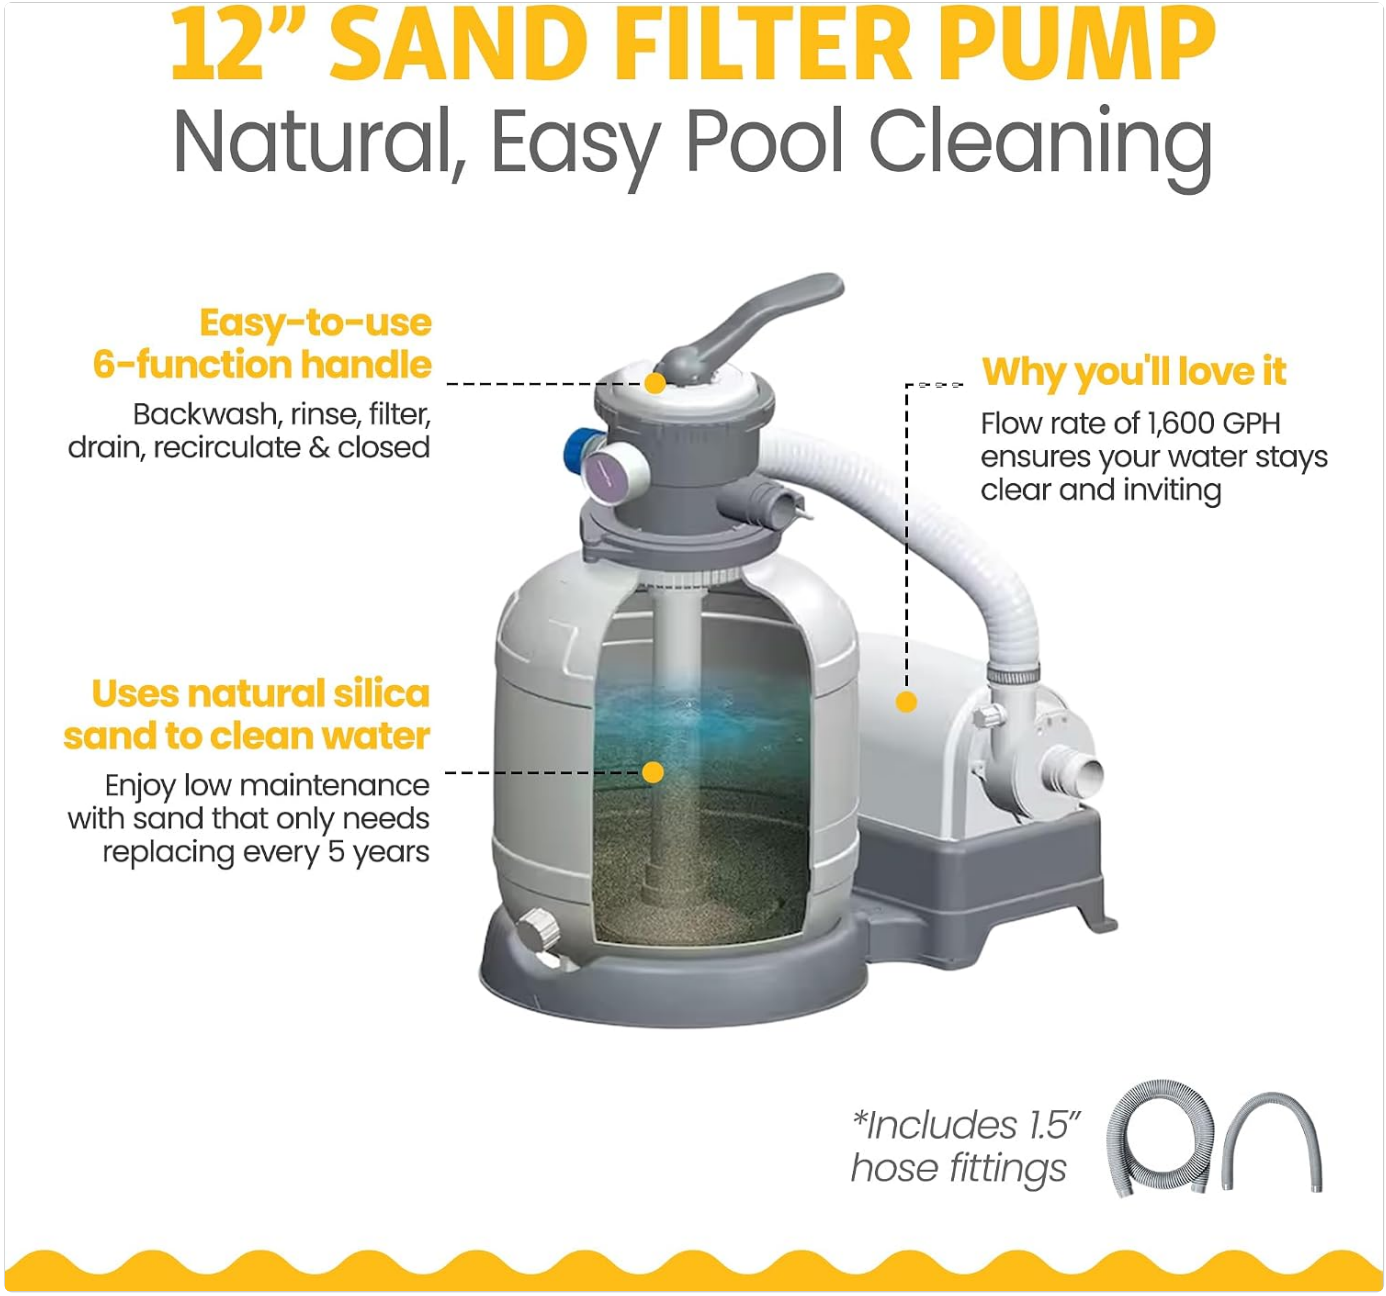


Figure 3: Sand Filter Pump Details

This image provides a detailed view of the sand filter pump, illustrating its 6-function handle for various modes (backwash, rinse, filter, drain, recirculate, closed), its 1600 GPH flow rate, and its use of natural silica sand for effective water filtration.

- **Filter:** Normal operation for continuous water filtration.
- **Backwash:** Cleans the sand filter by reversing water flow. Perform when pressure gauge indicates high pressure or flow rate decreases.
- **Rinse:** Used after backwashing to flush out dirty water before returning to filter mode.
- **Drain:** Drains water directly from the pool.
- **Recirculate:** Circulates water without filtering (e.g., for chemical distribution).
- **Closed:** Shuts off flow to the filter.

Always turn off the pump before changing the handle position. Consult the separate pump manual for detailed operating instructions and safety warnings.

Water Chemistry

Maintain proper water chemistry for a safe and clean swimming environment. Regularly test your pool water and adjust

chemical levels as needed. Key parameters include pH, chlorine, and alkalinity.

Maintenance

Daily/Weekly Maintenance

- **Skimming:** Use the included skimmer net to remove leaves and debris from the water surface.
- **Vacuuming:** Use the included vacuum head and pole to clean the pool floor.
- **Brushing:** Brush the pool walls to prevent algae buildup.
- **Filter Cleaning:** Backwash and rinse the sand filter as needed, typically once a week or when the pressure gauge indicates. Sand replacement is recommended every 5 years.
- **Water Testing:** Test water chemistry daily and adjust chemicals to maintain recommended levels.

Seasonal Maintenance (Winterization)

Before winter, properly close your pool to prevent damage:

- Clean the pool thoroughly.
- Drain the water to below the skimmer and return jets.
- Disconnect and store the pump, hoses, and ladder in a dry, protected area.
- Cover the pool with the provided pool cover, securing it tightly.



Figure 4: Drainage Plug for Easy Disassembly

This image demonstrates the 2-in-1 drainage plug, which allows for convenient draining of the pool without requiring additional tools, simplifying disassembly and winterization.

Troubleshooting

Problem	Possible Cause	Solution
Water is cloudy	Insufficient filtration, improper chemical balance, high bather load	Run pump longer, backwash filter, test and adjust chemicals, shock treat pool
Pump not running	No power, clogged impeller, air in system	Check power connection/GFCI, clear impeller, prime pump
Water leaking from pool	Puncture in liner, loose hose connection	Locate and repair puncture with patch kit, tighten hose clamps

Problem	Possible Cause	Solution
Poor water circulation	Clogged skimmer/strainer, dirty filter sand	Clean skimmer basket/strainer, backwash filter

Specifications

- **Model:** P4A3216L1
- **Dimensions:** 32 ft L x 16 ft W x 52 in H (384"L x 192"W x 52"H)
- **Shape:** Rectangular
- **Material:** Durable 3-ply Toughmesh liner, Metal frame
- **Pump Type:** 12-inch Sand Filter Pump
- **Pump Flow Rate:** 1600 Gallons Per Hour (GPH)
- **Voltage:** 110-120V
- **Included Accessories:** SureStep ladder, pool cover, ground cloth, maintenance kit, repair patch
- **Assembly:** Required
- **Intended Use:** Outdoor



Figure 5: Pool Dimensions Overview

This image provides a visual representation of the Funsicle Oasis Designer Rectangular Pool, clearly indicating its dimensions of 32 feet in length, 16 feet in width, and 52 inches in height.

Warranty and Support

Your Funsicle Oasis Designer Rectangular Above Ground Swimming Pool, pump, and ladder are covered by a**1-year manufacturer warranty** from the date of purchase. This warranty covers manufacturing defects under normal use and service.

For warranty claims, technical assistance, or to order replacement parts, please contact Funsicle customer support. Keep your proof of purchase (receipt) readily available as it will be required for any warranty service.

Official Product Video

Watch the official product video for a visual guide on the Funsicle Oasis Rectangle Outdoor Above Ground Swimming Pool.

Your browser does not support the video tag.

Video: Funsicle Oasis Rectangle Outdoor Above Ground Swimming Pool. This video provides an overview and visual instructions for the Funsicle Oasis pool.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BVTBW953

More documents and user manuals: **https://manuals.plus/**