**STARSIKI STARSIKI**

# STARSIKI Metal Timed Lock Box Instruction Manual

Model: STARSIKI

## Introduction

This instruction manual provides comprehensive guidance for the setup, operation, and maintenance of your STARSIKI Metal Timed Lock Box. Designed for enhancing self-control and securing various items, this durable metal container features a programmable timer, emergency unlocking capabilities, and audio prompts for user convenience. Please read this manual thoroughly before using the product to ensure optimal performance and safety.



Figure 1: Overview of the STARSIKI Metal Timed Lock Box.

## Setup

### 1. Powering the Device

The STARSIKI Timed Lock Box can be powered by 4 AA batteries (not included) or via an external Type-C USB connection. It is recommended to use batteries for portability and the USB-C connection as a backup or for continuous power.




Figure 2: Location of battery compartment and USB-C port.

### Battery Installation:

1. Open the lid of the lock box.
2. Locate the battery compartment on the underside of the lid.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

### USB-C Connection:

- Connect a Type-C USB cable to the external port located on the side of the lock box.
- Connect the other end of the cable to a suitable power source (e.g., wall adapter, computer USB port).

Your browser does not support the video tag.

Video 1: Demonstrates battery installation and general features of the lock box.

## 2. Child Lock Feature

The device includes a child lock button to prevent accidental changes to settings or premature unlocking by children. When activated, the main control buttons will not respond.

- To activate the child lock: Locate the small button on the side of the lock box, near the hinge. Press this button once. A small face icon will appear on the display, indicating the child lock is active.
- To deactivate the child lock: Press and hold the child lock button for 3 seconds until the face icon disappears from the display.

# Operating Instructions

## 1. Setting the Timer

The lock box allows you to set a locking duration from minutes up to 365 days. The display shows the remaining time in Days:Hours:Minutes format.

1. Press any button to light up the screen.
2. Press the **Setting** button (gear icon) to cycle through Day, Hour, and Minute settings. The active segment will blink.
3. Use the **Up** (▲) and **Down** (▼) buttons to adjust the time for the blinking segment.
4. Once the desired time is set, press the**Lock** button (padlock icon) to initiate the locking sequence.




Figure 3: Control panel for setting the timer.

## 2. Audio Prompts

The lock box provides audio cues to inform you of its status:

- **Pre-lock Warning:** The timer locker will emit a "Di" sound 7 times when locking is about to activate. You can press any button during this period to cancel the lock.
- **Unlock Notification:** A single "Di" sound will be heard when the set locking time is over, indicating the box is unlocked.




Figure 4: Explanation of audio prompt functions.

## 3. Extending Lock Time

Once locked, you can extend the remaining time before unlocking. This feature is useful for reinforcing self-discipline.

1. Press any button to light up the screen.
2. Hold the **Setting** button (gear icon) for 5 seconds.
3. Press the **Setting** button to choose Day/Hour/Minute.
4. Press the **Up** (▲) button to increase the time.*Note: Time cannot be decreased once set.*
5. Press the **Lock** button (padlock icon) to confirm the extended time.




Figure 5: Steps to extend the lock time.

## 4. Emergency Unlocking

In rare cases where emergency unlocking is required, follow these steps:

1. Press the **Up** (▲), **Down** (▼), and Child Lock buttons simultaneously.
2. A 6-digit device ID will appear on the display.
3. Contact customer support via Amazon with this 6-digit device ID. They will provide instructions for remote unlocking.

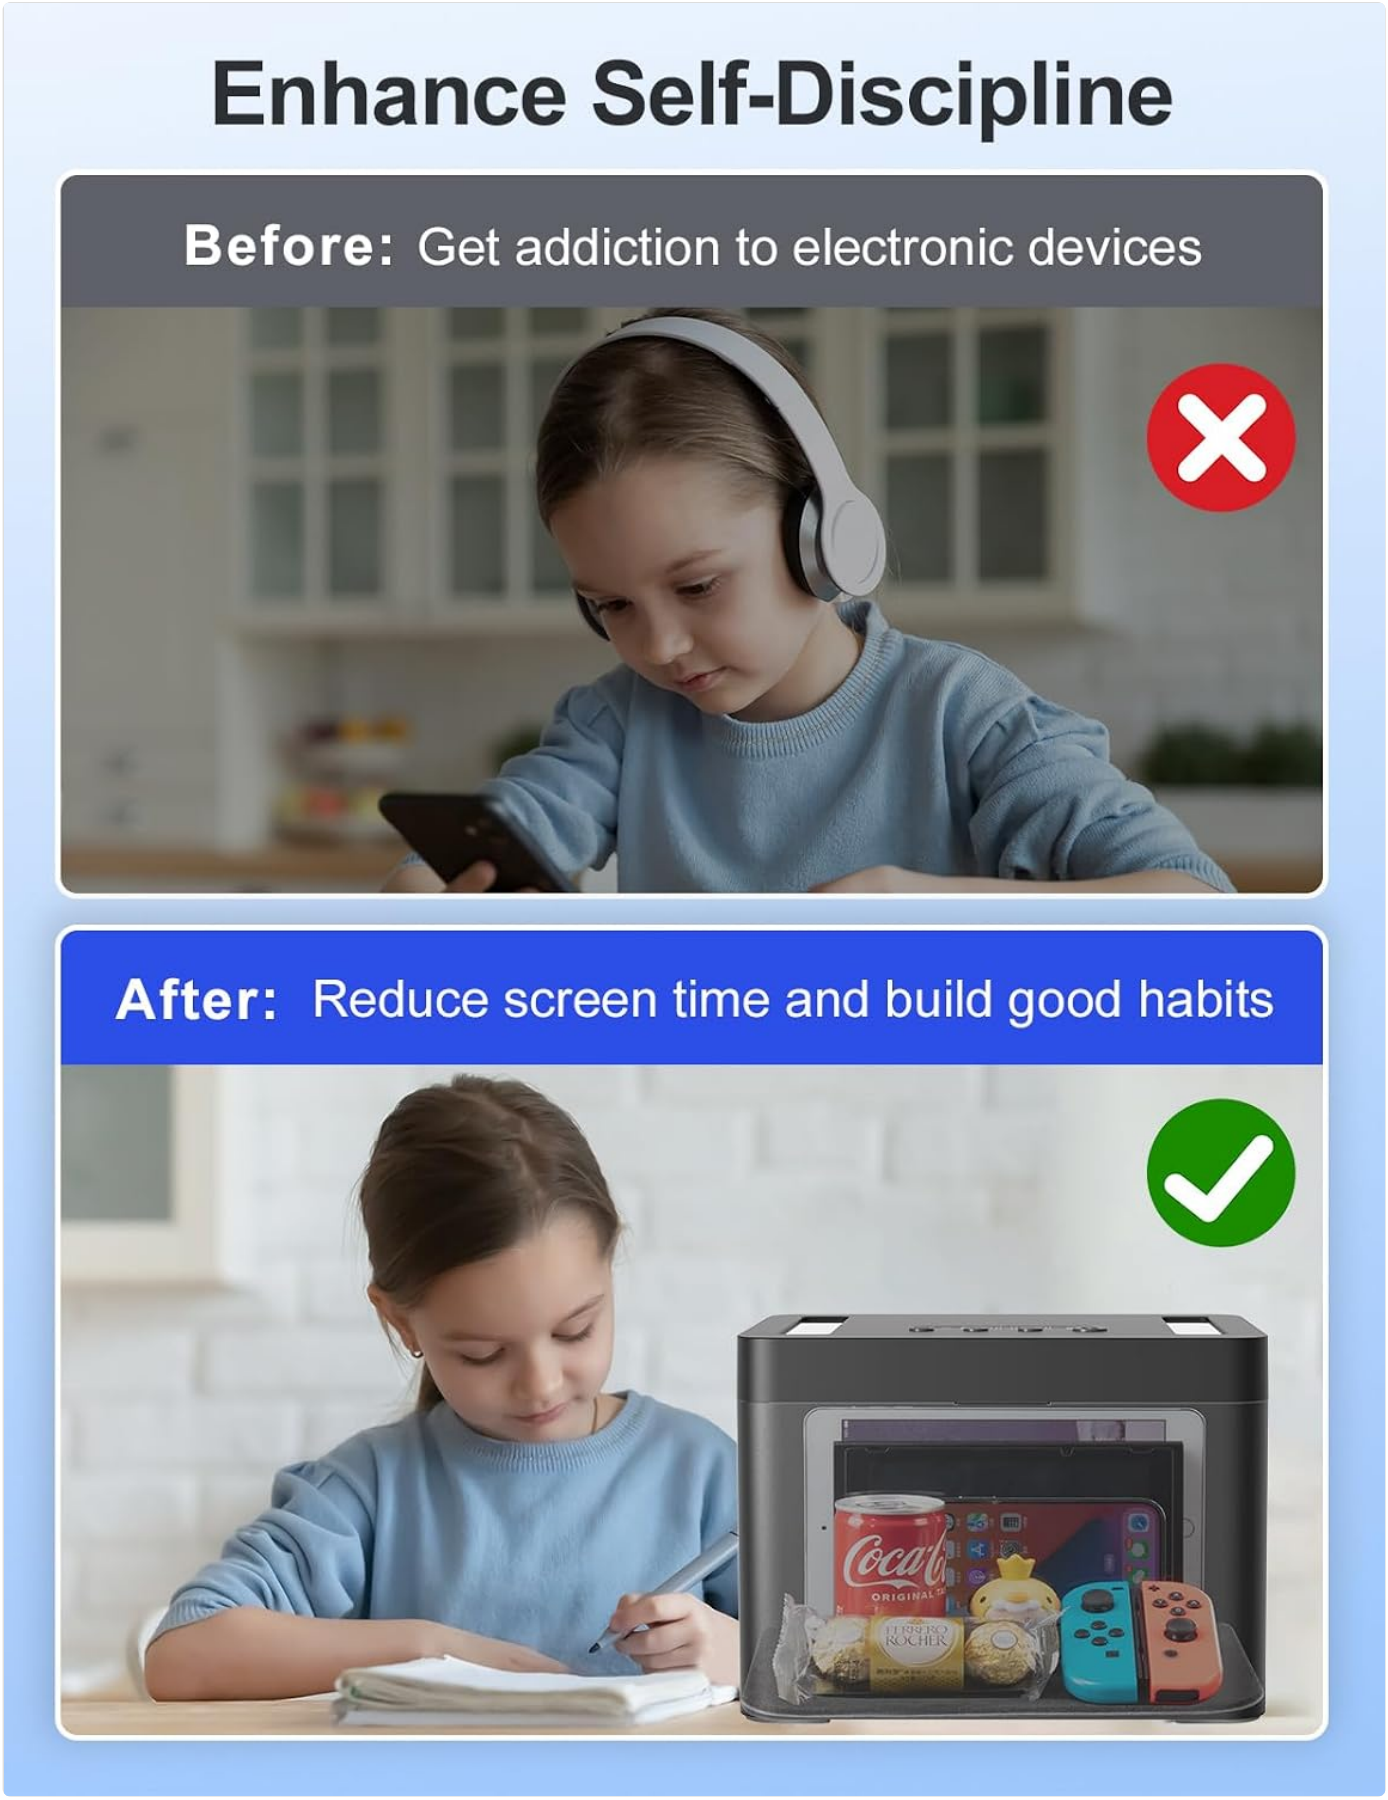



Figure 6: Emergency unlocking procedure.

## 5. Charging Devices While Locked

The lock box features a charging cable hole, allowing you to charge electronic devices (e.g., cellphones, iPad Mini) while they are secured inside.

- Simply route your device's charging cable through the designated hole on the side of the box before closing the lid.

- This ensures your devices remain charged and ready for use once the lock time expires.

Your browser does not support the video tag.

Video 2: Demonstrates charging a device while it is inside the locked box.

### 6. Memory Function

The lock box has a memory function that records the last 5 settings of lock time, making it convenient for recurring schedules without needing to re-enter the full duration each time.

## Maintenance

- **Cleaning:** Wipe the exterior of the lock box with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the metal finish or electronic components.
- **Storage:** Store the lock box in a dry place away from extreme temperatures and direct sunlight when not in use.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears on the display to ensure continuous functionality.

## Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| Box does not power on or display is blank. | Dead batteries or no power connection. | Replace AA batteries or connect the USB-C cable to a power source. |
| Box is locked and cannot be opened. | Timer is still active. | Wait for the timer to expire. If urgent, use the emergency unlocking procedure. |
| Buttons are unresponsive. | Child lock is active. | Deactivate the child lock by pressing and holding its button for 3 seconds. |
| Cannot decrease set time. | This is a design feature. | The device is designed to only allow increasing time once set, to reinforce discipline. |

## Specifications

**Brand:** STARSIKI

**Model:** STARSIKI

**Product Dimensions:** 6.07"D x 8.35"W x 5.91"H

**Lock Type:** Key (Digital Timer)

**Color:** Black

**Capacity:** 2.6 Liters (Interior size: 8.03" x 5.33" x 4.72")

**Material:** Metal

**Power Source:** 4xAA Batteries (not included) or USB Type-C

**Item Weight:** 2.79 Pounds

**Special Features:** Durable, Audio Prompt, Extendable Lock Time, Child Lock, Charging Cable Hole, Memory Function.

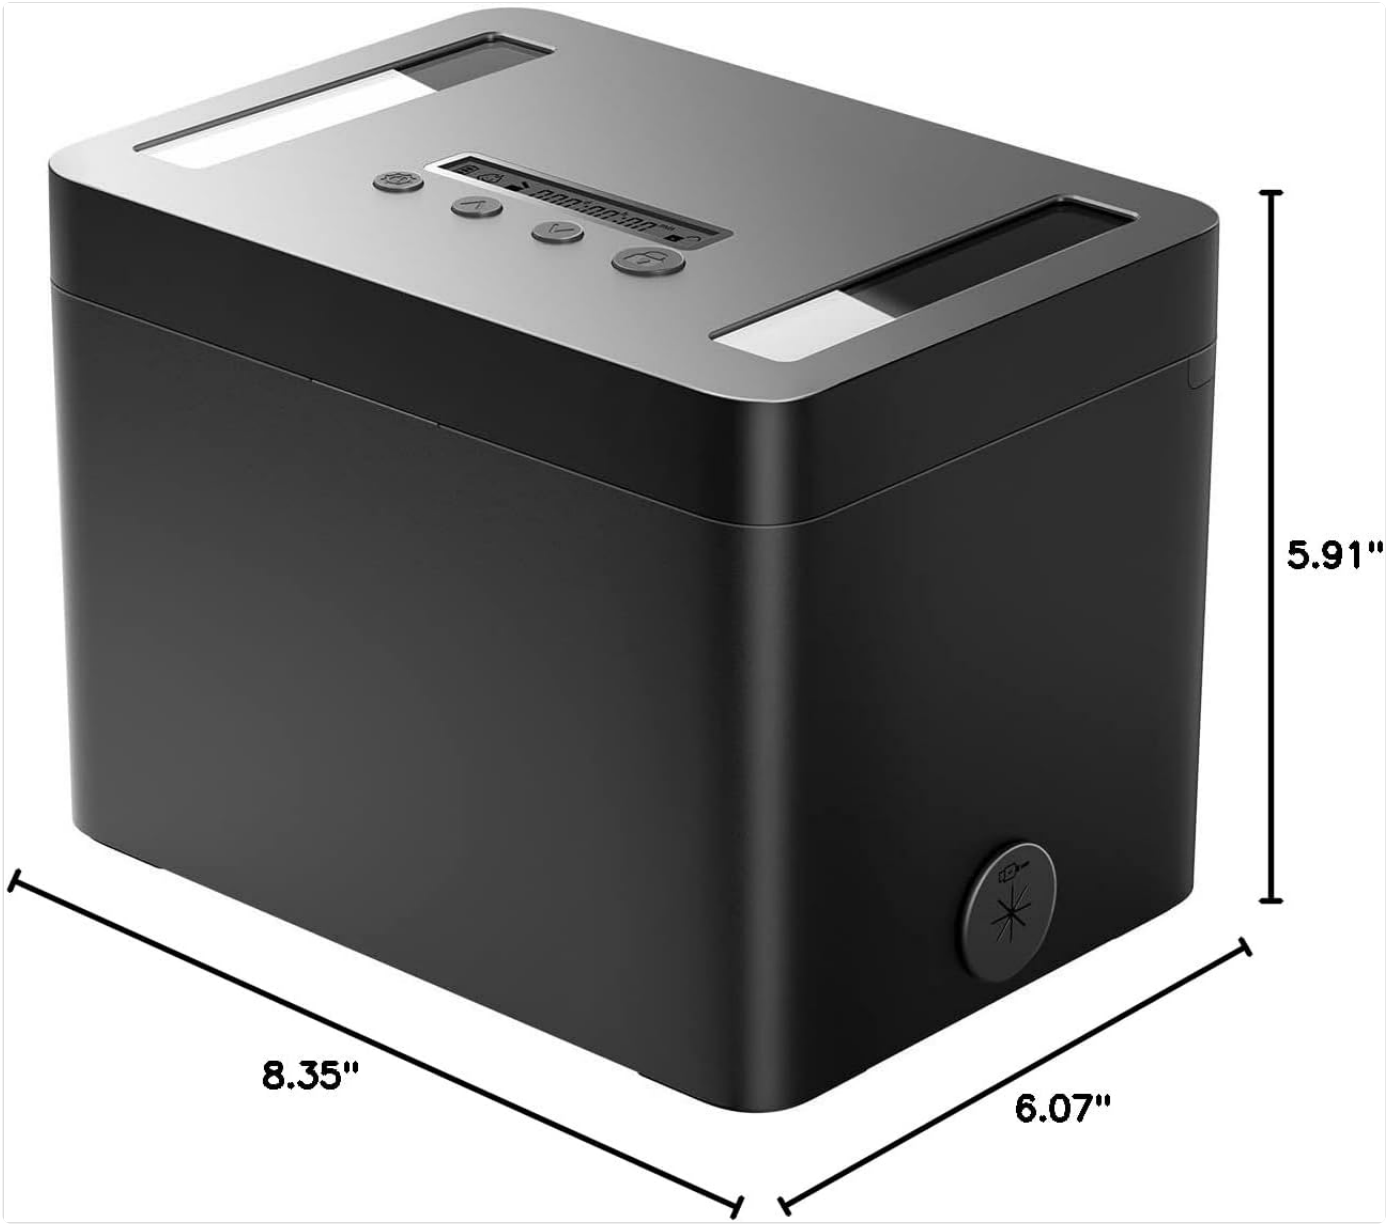



Figure 7: Product dimensions.

## Warranty and Support

STARSIKI is committed to providing high-quality products and excellent customer service. While specific warranty terms are not detailed in this manual, the brand emphasizes a "Worry-Free Replacement" policy and customer-centric support.

- For any product inquiries, technical assistance, or warranty claims, please contact STARSIKI customer support through the platform where you purchased the product (e.g., Amazon).
- Ensure to provide your product model number (STARSIKI) and any relevant purchase details for faster service.

STARSIKI: Professional, Reliable, High Quality.

© 2023 STARSIKI. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question