GreenPan CC006243-001

GreenPan Elite 7-in-1 Multi-Function Contact Grill & Griddle User Manual

Model: CC006243-001

Brand: GreenPan

Introduction Safety Information Features Components Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

Discover a world of flavor on your counter with the GreenPan Elite Multi Grill, Griddle, and Waffle Maker. This versatile appliance offers an endless array of possibilities—from classic paninis to perfect Belgian waffles. Its independent temperature controls allow you to dial in your desired setting, and the waffle plate option provides control over the shade of your waffles. Cleaning up is simple thanks to Thermolon™ Volt, GreenPan's pioneering ceramic nonstick coating, specially designed for kitchen appliances. This coating is free of PFAS, PFOA, lead, and cadmium, ensuring healthy, toxin-free cooking. The plates are also dishwasher safe for added convenience.



Image: The GreenPan Elite 7-in-1 Multi-Function Contact Grill & Griddle with waffle plates installed and a set of grill/griddle plates beside it.

2. Important Safety Information

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Ensure plates are properly installed before use.

3. Product Features

- **REVOLUTIONARY CERAMIC NONSTICK:** Thermolon Volt, a ceramic nonstick coating specially designed to withstand the strain of modern appliances—this diamond-infused ceramic nonstick is extra tough, cleans easily, and makes any meal healthier.
- **7-IN-1 DESIGN:** Functions as a contact grill, panini press, grill and griddle, grill on one side, griddle on the other, plus real waffles.
- **TOXIN-FREE:** Our signature ceramic nonstick coating is free of PFAS, PFOA, lead or cadmium.
- **AMPLE SURFACE AREA:** The versatile design opens flat for a larger cooking area and multi-surface grilling.
- **ADJUSTABLE COVER:** Top cover locks in four height positions for everything from maximum contact to melt.
- **CAST PLATES:** Interchangeable and ultra-durable plates deliver optimal heat conduction and superior performance.
- **ONE-TOUCH SEAR CONTROL:** Provides the perfect finish on any steak, burger, and more.
- **REMOVABLE DRIP TRAY:** Collects grease to make cleaning even easier.
- **SHADE CONTROL:** Our unique shade control setting lets you dial in the perfect temperature.
- **EASY STORAGE:** The lockable, adjustable cover and cord wrap make storage simple.

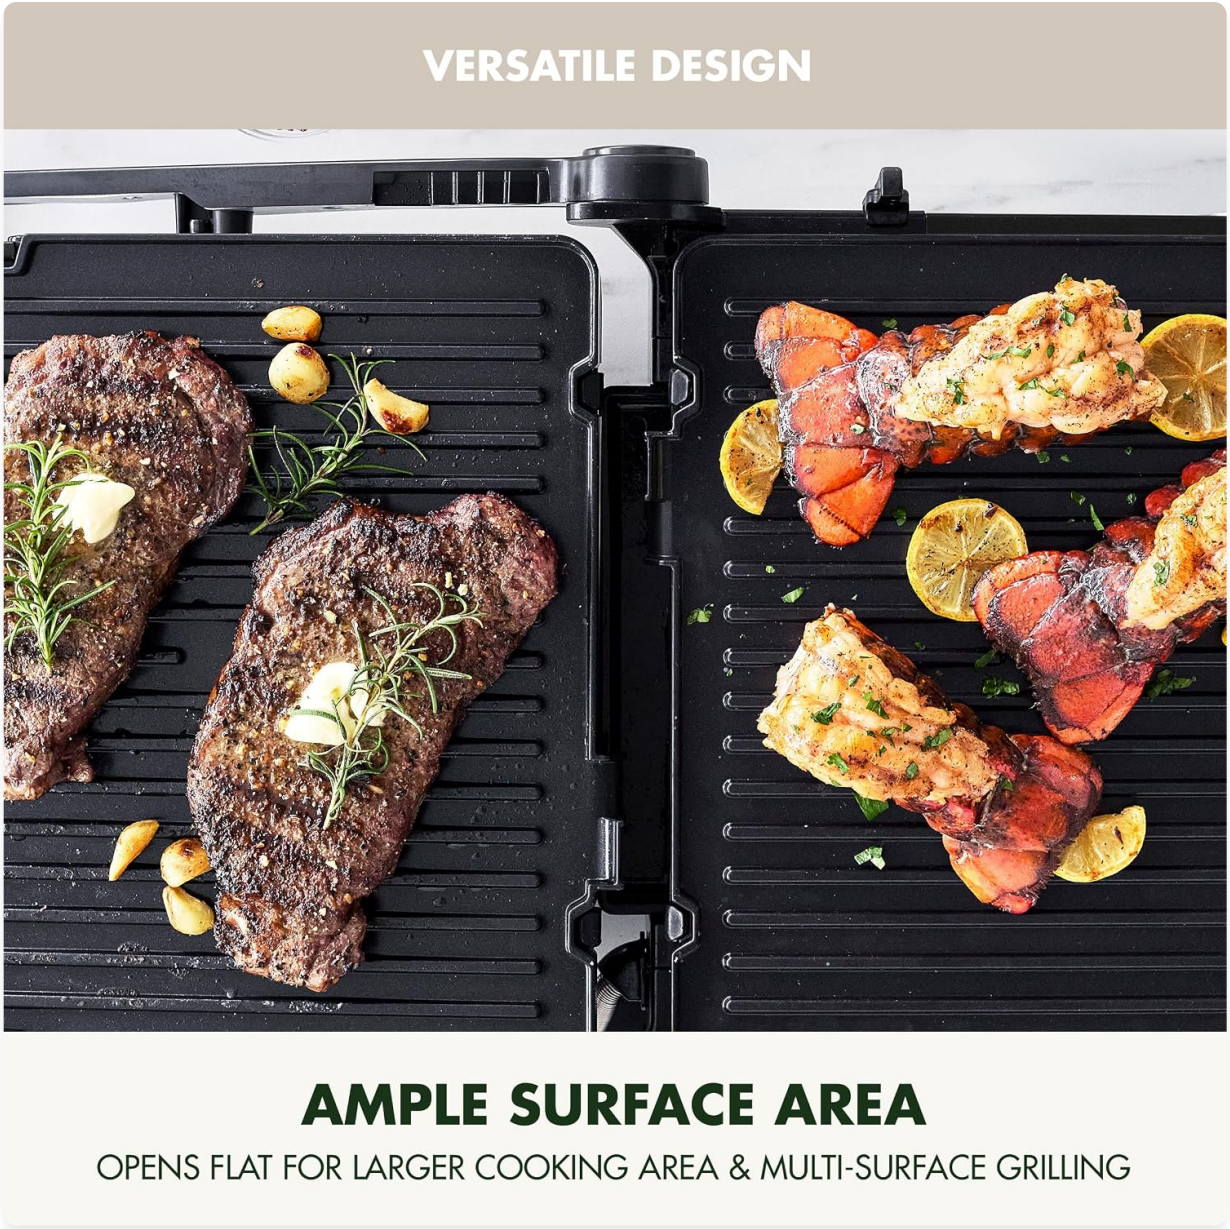


Image: An exploded view of the GreenPan Elite Multi-Function Grill, highlighting its key features such as Thermolon Volt Ceramic Nonstick, Adjustable Cover, Dual-Zone Heating, Dishwasher Safe Plates, Integrated Drip Tray, Easy-to-Read LED Display, Shade Control, One-Touch Sear Power, and being Free of PFAS & PFOA.

4. Product Components

Your GreenPan Elite 7-in-1 Multi-Function Contact Grill & Griddle includes the following main components:

- Main Unit with Control Panel and LED Display
- Two Reversible/Removable Grill/Griddle Plates
- Two Waffle Plates (interchangeable)
- Removable Drip Tray
- Power Cord



Image: The GreenPan Elite Multi-Function Grill shown with both grill plates installed, ready for use.

5. Setup Guide

1. **Unpack:** Carefully remove all packaging materials and any promotional labels or stickers from your appliance.
2. **Clean Plates:** Before first use, wash the removable plates and drip tray in warm, soapy water. Rinse thoroughly and dry completely. The plates are dishwasher safe.
3. **Install Plates:** Ensure the appliance is unplugged and cool. Insert the desired cooking plates (grill/griddle or waffle) into the designated slots on the upper and lower heating elements. Press firmly until they click into place.
4. **Position Drip Tray:** Slide the removable drip tray into its slot at the front or side of the unit to collect any excess grease or liquids during cooking.
5. **Placement:** Place the appliance on a clean, dry, flat, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
6. **Power Connection:** Plug the power cord into a standard 220V electrical outlet. The LED display will illuminate.



Image: A side view of the GreenPan Elite Multi-Function Grill, showcasing its compact design and the handle for opening and closing.

6. Operating Instructions

The GreenPan Elite offers versatile cooking modes. Always preheat the unit before adding food for best results.

6.1. General Operation

1. **Power On:** Press the "Start/Stop" button to turn on the appliance.
2. **Select Plate:** Use the "Plate Select" dial to choose between "Upper", "Lower", or "Both" plates for heating.
3. **Set Temperature:** Use the "Temp/Shade" dial to adjust the desired cooking temperature. The LED display will show the selected temperature.
4. **Set Time:** Use the "Time" dial to set the cooking duration.
5. **Preheat:** Allow the unit to preheat until the display indicates it has reached the set temperature.
6. **Add Food:** Carefully place your food onto the preheated plates.
7. **Close/Open:** For contact grilling or panini pressing, close the lid. For open-flat grilling or griddling, open the lid fully.

8. **Monitor:** The display will show the remaining cooking time.
9. **Finish:** Once cooking is complete, carefully remove the food using heat-resistant utensils. Press "Start/Stop" to turn off the appliance.



Image: The GreenPan Elite Multi-Function Grill in its open-flat griddle configuration, cooking pancakes and sausages, demonstrating its toxin-free ceramic nonstick surface.

6.2. Specific Cooking Modes

- **Contact Grill / Panini Press:**
  Install the grill plates. Close the lid to cook both sides simultaneously. The adjustable cover allows for different food thicknesses.



Image: The GreenPan Elite Multi-Function Grill in contact grill mode, cooking two steaks with garlic cloves, showcasing its efficient grilling capability.

- **Grill and Griddle (Open Flat):**
  Open the unit fully to lay flat. You can use one grill plate and one griddle plate, or two of the same. This provides a larger cooking surface for multiple items.



Image: The GreenPan Elite Multi-Function Grill opened flat, showing one grill plate cooking steak and one griddle

plate cooking lobster, demonstrating its versatile dual-surface cooking.

- **Waffle Maker:**
  Install the waffle plates. Use the "Temp/Shade" dial to select your desired waffle shade. Pour batter onto the preheated plates and close the lid.



Image: The GreenPan Elite Multi-Function Grill with waffle plates installed, cooking four square waffles, highlighting its dedicated waffle-making function.

7. Cleaning and Maintenance

Proper cleaning ensures the longevity and performance of your GreenPan Elite appliance.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Remove Plates and Drip Tray:** Press the release buttons to remove the cooking plates. Carefully slide out the drip tray.
3. **Clean Plates:** The cooking plates are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Do not use metal scouring pads or abrasive cleaners, as these can damage the nonstick coating.
4. **Clean Drip Tray:** Wash the drip tray in warm, soapy water. It is also dishwasher safe.
5. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
6. **Storage:** Ensure all parts are clean and dry before storing. The appliance can be stored upright to save space, and the cord can be wrapped for neat storage.



Image: Hands washing a removable grill plate from the GreenPan Elite Multi-Function Grill under running water, illustrating the ease of cleaning its dishwasher-safe plates.

8. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; "Start/Stop" button not pressed.	Ensure power cord is securely plugged into a working outlet. Press the "Start/Stop" button.
Food sticks to plates.	Plates not properly preheated; insufficient oil/butter; damaged nonstick coating.	Allow full preheat. Lightly spray or butter plates before adding food. Ensure plates are clean and undamaged.
Uneven cooking.	Food not evenly distributed; incorrect temperature setting.	Distribute food evenly. Adjust temperature settings as needed for specific foods. Ensure both plates are selected if cooking with the lid closed.

Problem	Possible Cause	Solution
Smoke or unusual odor during use.	Food residue on heating elements; excessive oil/grease; first-time use (normal).	Unplug and allow to cool. Clean plates and heating elements thoroughly. Ensure drip tray is empty. A slight odor on first use is normal.

9. Product Specifications

Brand: GreenPan

Model Number: CC006243-001

Color: Cream White

Material: Aluminum (Plates), BPA Free, Cadmium Free, Lead Free, PFAS Free, PFOA Free, PFOS Free (Coating)

Product Dimensions: 16.7"D x 11.5"W x 16.9"H

Item Weight: 2.95 pounds (1.34 Kilograms)

Wattage: 2200.0 W

Voltage: 220 Volts

Number of Settings: 7 (referring to 7-in-1 design)

UPC: 885837032512

Date First Available: February 17, 2023

10. Warranty and Support

The GreenPan Elite 7-in-1 Multi-Function Contact Grill & Griddle comes with a**Limited Warranty**. For specific details regarding the warranty period, coverage, and terms, please refer to the warranty card included with your product or visit the official GreenPan website.
For customer support, technical assistance, or to inquire about replacement parts, please contact GreenPan customer service through their official website or the contact information provided in your product packaging.
Optional extended protection plans may be available for purchase:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect (monthly plan covering eligible purchases)

Please retain your proof of purchase for warranty claims.

© 2023 GreenPan. All rights reserved.