Ikea IK.992.818.12

IKEA BEKANT Sit/Stand Desk User Manual

Model: IK.992.818.12

1. Introduction

This user manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your IKEA BEKANT Sit/Stand Desk. Please read this manual carefully before using the product to ensure safe and efficient operation. Keep this manual for future reference.



Figure 1.1: The IKEA BEKANT Sit/Stand Desk, 160 x 80 cm, Black Stained Ash Veneer/Black.

2. Safety Information

Always follow basic safety precautions when using electrical appliances and furniture to reduce the risk of fire, electric shock, and personal injury.

- Ensure all components are securely fastened before use.
- Do not overload the desk. Refer to the specifications for maximum weight capacity.
- Keep hands and objects clear of moving parts (e.g., legs) when adjusting the desk height.
- Do not allow children to operate the desk's height adjustment mechanism unsupervised.
- Only use the desk indoors in dry environments.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. Package Contents

Before assembly, verify that all parts are present and undamaged. The package should contain:

- Desk tabletop (Black Stained Ash Veneer)
- Adjustable leg frames (Black, Steel Alloy)
- Control unit and power cable
- Cable management net
- Assembly hardware (screws, bolts, etc.)
- Assembly instructions (separate document, if applicable)

4. Setup and Assembly

Assembly typically requires two people. Follow the detailed assembly instructions provided with your product. Basic tools such as a screwdriver and Allen wrench may be required.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Leg Frames:** Attach the adjustable leg frames to the tabletop according to the provided diagrams. Ensure all screws are tightened securely.
3. **Install Control Unit:** Mount the control unit and connect the power cable to the motor and the main power supply.
4. **Attach Cable Management Net:** Secure the cable management net under the tabletop to organize cables.
5. **Initial Test:** Plug the desk into a power outlet and perform a test run of the height adjustment to ensure proper function.



Figure 4.1: The integrated cable management net helps keep your workspace tidy.

5. Operating Instructions

The IKEA BEKANT Sit/Stand Desk allows you to easily switch between sitting and standing positions for improved ergonomics and comfort.

5.1 Adjusting Desk Height

The desk height is adjusted using the control switch located on the underside of the tabletop.



Figure 5.1: The height adjustment control switch is conveniently located for easy access.

- **To Raise the Desk:** Press and hold the **UP** arrow button (▲) on the control switch. The desk will move upwards. Release the button when the desired height is reached.
- **To Lower the Desk:** Press and hold the **DOWN** arrow button (▼) on the control switch. The desk will move downwards. Release the button when the desired height is reached.

The desk has a height range of approximately 65 cm (25 5/8") to 125 cm (49 1/4").

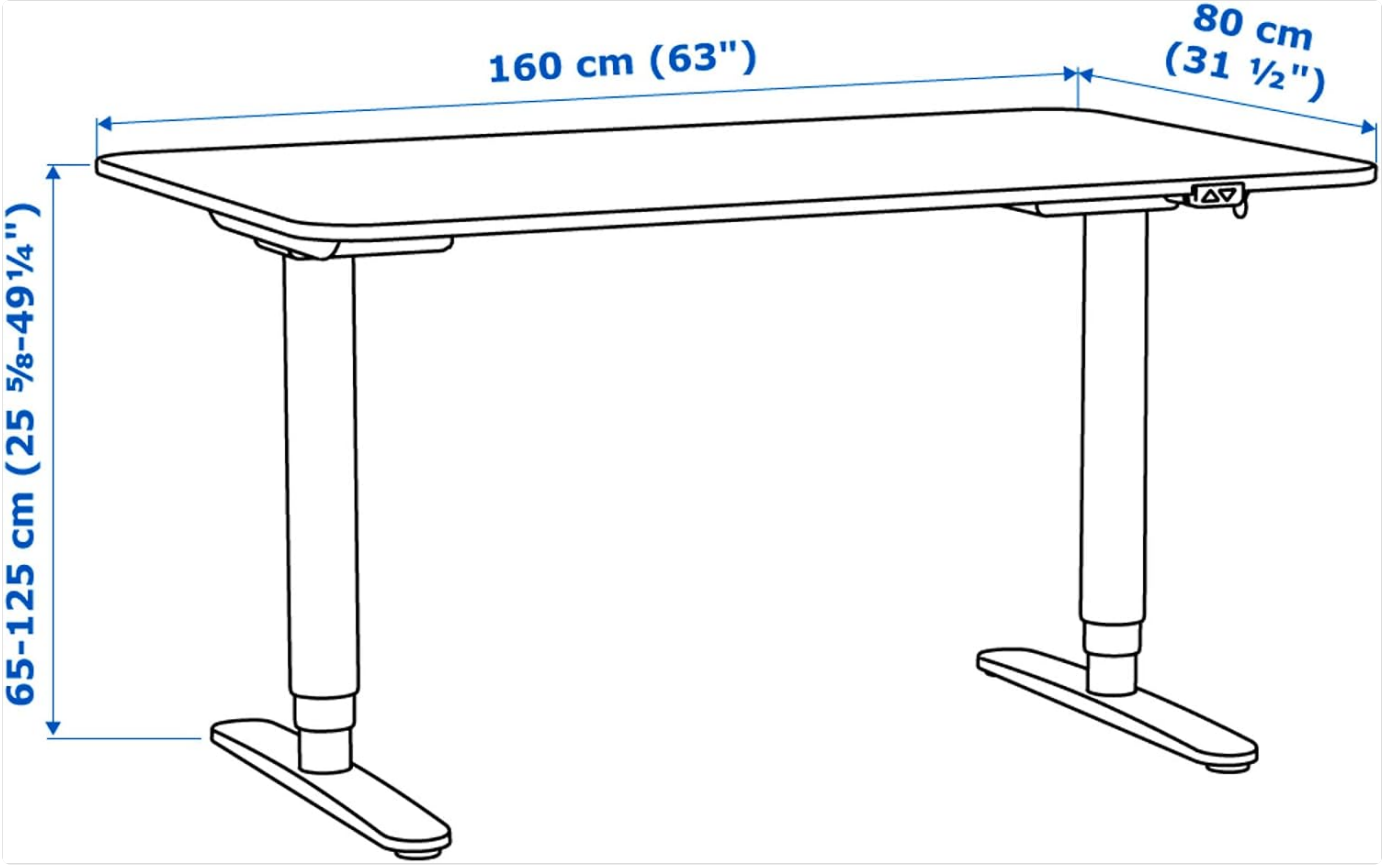


Figure 5.2: Dimensions of the IKEA BEKANT Sit/Stand Desk.

6. Maintenance and Care

Proper care will extend the life and appearance of your IKEA BEKANT desk.

- **Cleaning:** Wipe the desk surface clean with a damp cloth and a mild cleaner. Dry thoroughly with a clean cloth. Do not use abrasive cleaners or strong chemicals.
- **Spills:** Immediately wipe up any spills to prevent damage to the veneer surface.
- **Inspection:** Periodically check all screws and fittings to ensure they are tight. Retighten if necessary.
- **Cable Management:** Ensure cables are neatly organized in the net and not pinched or tangled, which could affect desk movement or cause damage.



Figure 6.1: The black stained ash veneer surface is durable but requires proper care.

7. Troubleshooting

If you encounter issues with your IKEA BEKANT Sit/Stand Desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk does not move.	No power, loose connection, motor overload.	Check power cable connection to outlet and desk. Ensure no objects are obstructing movement. Unplug for 30 minutes and try again.
Desk moves unevenly or makes unusual noises.	Uneven load, loose fittings, obstruction.	Distribute weight evenly on the desk. Check and tighten all assembly screws. Remove any obstructions.

Problem	Possible Cause	Solution
Desk stops mid-movement.	Overload protection activated, thermal protection.	Reduce weight on the desk. Allow the motor to cool down for 20-30 minutes before attempting to adjust again.

If the problem persists after attempting these solutions, please contact IKEA customer support.

8. Specifications

Detailed technical specifications for the IKEA BEKANT Sit/Stand Desk:

Feature	Detail
Brand	IKEA
Model Number	IK.992.818.12
Color	Black
Product Dimensions (L x W x H)	160 cm x 80 cm x 65-125 cm (63" x 31.5" x 25.6"-49.2")
Desk Design	Sit/Stand Desk
Shape	Rectangular
Top Material Type	Wood (Black Stained Ash Veneer)
Base Material	Steel Alloy
Finish Type	Brushed
Number of Drawers	1
Drawer Type	Utility Drawer
ASIN	B0BW8VCCFC
Manufacturer	IKEA
Date First Available on Amazon.com.be	15 February 2023

Note: Dimensions are approximate and may vary slightly.

9. Warranty and Support

For information regarding warranty coverage, spare parts availability, or technical support, please refer to the warranty card included with your product or visit the official IKEA website. You can also contact IKEA customer service directly for assistance.
IKEA Official Website: www.ikea.com

© 2023 IKEA. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question