innioasis G1

innioasis G1 MP3 Player User Manual

Model: G1

1. Setup

1.1 Unboxing and Initial Inspection

Upon opening the package, ensure all components are present and in good condition. The standard package includes:

- innioasis G1 MP3 Player
- 64GB SD Card (pre-installed or separate)
- USB-C Cable
- Wired Headphones
- User Manual





Figure 1: innioasis G1 MP3 Player. This image displays the sleek design of the device, highlighting its compact size and full-touch screen interface.

1.2 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB-C cable to the device's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. A full charge typically takes approximately 70 minutes for the 1500mAh lithium battery.



Figure 2: Battery Life Illustration. This image visually represents the 1500mAh battery capacity and estimated usage times for music and video playback.

1.3 Initial Power On and Wi-Fi Connection

Press and hold the power button until the screen illuminates. Follow the on-screen prompts to complete the initial setup, including language selection and connecting to a Wi-Fi network. Wi-Fi connectivity is essential for accessing streaming services and system updates.

1.4 Transferring Music and Media

The device comes with 80GB of storage (16GB ROM + 64GB TF card) and supports external storage expansion up to 1TB via Micro SD, Micro SDHC, or Micro SDXC cards. You can transfer music, videos, and pictures directly from your computer using the USB-C cable or utilize the pre-installed file transfer application.



Figure 3: Expandable Storage. This image highlights the device's capability to expand storage up to 1TB using a Micro SD card.

2. Operating the Device

2.1 Basic Navigation

The innioasis G1 features a 4-inch full-touch LCD screen for intuitive navigation. Swipe left or right to browse through applications and settings. Tap on an icon to open the corresponding application.

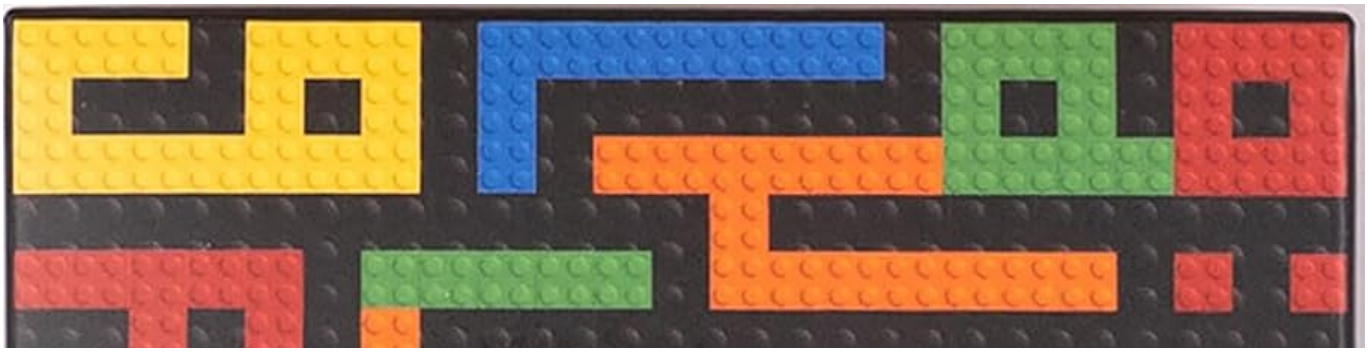




Figure 4: Device Interface. This image shows the main screen with various application icons, including Spotify Kids, Gallery, Ebook, FM Radio, Recorder, Calculator, Clock, Calendar, Chrome, File Transfer, File Manager, and Settings.

2.2 Music Playback

The powerful local music playing app supports most music formats, including MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, and MP2. Organize your music by Title, Folder, Artist, Album, or Genre. Playback options include sequential play, loop single, list loop, and shuffle all.



Figure 5: Local Music Player. This image illustrates the music playback interface, showing song title, artist, and various playback controls.

2.3 Streaming Applications

The device comes pre-installed with popular online music apps such as Spotify, Pandora, Tidal, Deezer, and Amazon Music. It also includes Audible and Kindle for audiobooks and e-books. Ensure you are connected to Wi-Fi to use these streaming services.



Figure 6: Streaming Music Apps. This image displays the device's screen with icons for various pre-installed streaming services like Spotify, Pandora, Tidal, Amazon Music, and Deezer.

2.4 Video Playback

Equipped with a HiFi sound module, the G1 supports 720p and 1080p HD video playback, offering an enhanced audio-visual experience.



Figure 7: Video Playback. This image shows the device displaying a high-definition video, demonstrating its MP4 player capabilities.

2.5 Bluetooth Connectivity

The device features a Bluetooth 4.2 chip for fast and stable connections with Bluetooth headphones, speakers, and car stereos. To pair, go to Settings > Connected Devices > Bluetooth and select your desired device.



Figure 8: Bluetooth Connectivity. This image illustrates the device connected wirelessly to headphones, showcasing its Bluetooth capabilities.

2.6 Parental Controls

The G1 digital player offers parental control features to manage usage. You can limit internet usage and overall device usage. These settings are password-protected to prevent unauthorized changes by children.

To access parental controls:

1. Swipe down twice from the top of the screen to access quick settings.
2. Tap the 'User' icon (typically a person icon) to switch to the 'Owner' profile. You may need to enter the owner's password.
3. Alternatively, from any user profile, navigate to 'Settings' (gear icon).
4. Scroll down and select 'System'.
5. Tap 'Parental control'. You will be prompted to enter the parental control password.
6. From here, you can set limits for 'Internet Usage' (e.g., 1 hour per day) and 'Device Usage'.

The device does not allow the installation of additional apps, providing a controlled environment. Pre-installed apps that are not frequently used can be uninstalled by the owner.



Figure 9: App Management. This image shows the device interface with an 'Uninstall' option, indicating the ability to remove pre-installed applications.

3. Maintenance

3.1 Battery Care

To maximize battery lifespan, avoid fully discharging the device frequently. Charge the 1500mAh battery when the low battery indicator appears. The device offers continuous playback of 15-25 hours for music (depending on wired/Bluetooth earbuds) or 4-5 hours for video.

3.2 Storage Management

Regularly manage the 80GB internal storage (16GB ROM + 64GB TF card) to ensure optimal performance. Delete unnecessary files or transfer them to external storage (up to 1TB via SDXC/SDHC card) to free up space.

3.3 Cleaning the Device

Use a soft, lint-free cloth to gently wipe the screen and body of the MP3 player. Avoid using abrasive cleaners or excessive moisture, which can damage the device.

4. Troubleshooting

4.1 Common Issues and Solutions

Issue	Possible Cause	Solution
Device not powering on	Low battery; system crash	Charge the device; perform a hard reset (refer to manufacturer's guide for specific steps).
Cannot connect to Wi-Fi	Incorrect password; out of range; parental control limits	Verify Wi-Fi password; move closer to router; check parental control settings for internet usage limits.
Limited internet access despite available time	Parental control timer miscalculation/stuck	Temporarily disable and re-enable parental controls to reset the timer.
Music/Video playback issues	Unsupported file format; corrupted file; insufficient storage	Ensure file format is supported; re-download/re-transfer file; free up storage space.
Bluetooth pairing failure	Device not in pairing mode; interference; incompatible device	Ensure both devices are in pairing mode; move away from other wireless devices; check device compatibility.

5. Specifications

- **Brand:** innioasis
- **Model Name:** G1
- **Product Dimensions:** 0.39 x 2.36 x 4.33 inches
- **Item Weight:** 4.8 ounces
- **Screen Size:** 4 Inches
- **Display Technology:** LCD
- **Memory Storage Capacity:** 80 GB (16GB ROM + 64GB TF card)
- **Expandable Storage:** Up to 1TB (Micro SD, Micro SDHC, Micro SDXC compatible)
- **Internal Memory:** 2GB RAM + 16GB ROM
- **Processor:** 8 core CPU 1.9GHz
- **Operating System:** Android OS
- **Battery Capacity:** 1500mAh Lithium Battery
- **Charging Time:** Approximately 70 minutes (Input: 5V=2A)
- **Music Playback Time:** 15 hours (Bluetooth earbuds) - 25 hours (Wired earbuds)
- **Video Playback Time:** 4-5 hours
- **Connectivity Technology:** Wi-Fi, Bluetooth 4.2
- **Supported Audio Formats:** MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2, etc.
- **Supported Video Playback:** 720p, 1080p HD
- **Special Features:** Equalizer, FM Radio, Video Playback, Voice Recorder

- **Manufacturer:** INNIOASIS

6. Warranty and Support

6.1 Warranty Service

The innioasis G1 MP3 Player comes with a**1-Year Warranty Service** from the date of purchase. Please retain your proof of purchase for warranty claims.

6.2 Customer Support

For any inquiries, technical assistance, or support, please contact innioasis customer service:

- **Email:** innioasis-csc@hotmail.com
- **Service Hours:** 7 days a week, 24 hours a day (7*24 Hours Customer Service)

You can also find support by logging into your Amazon account, navigating to 'Your orders', and selecting 'Ask Product Question' for the relevant purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question