
Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit C800W, C800, C800S, C800A

ZdalaMit Replacement Remote Control User Manual

FOR TOUMEI PROJECTOR MODELS: C800W, C800, C800S, C800A



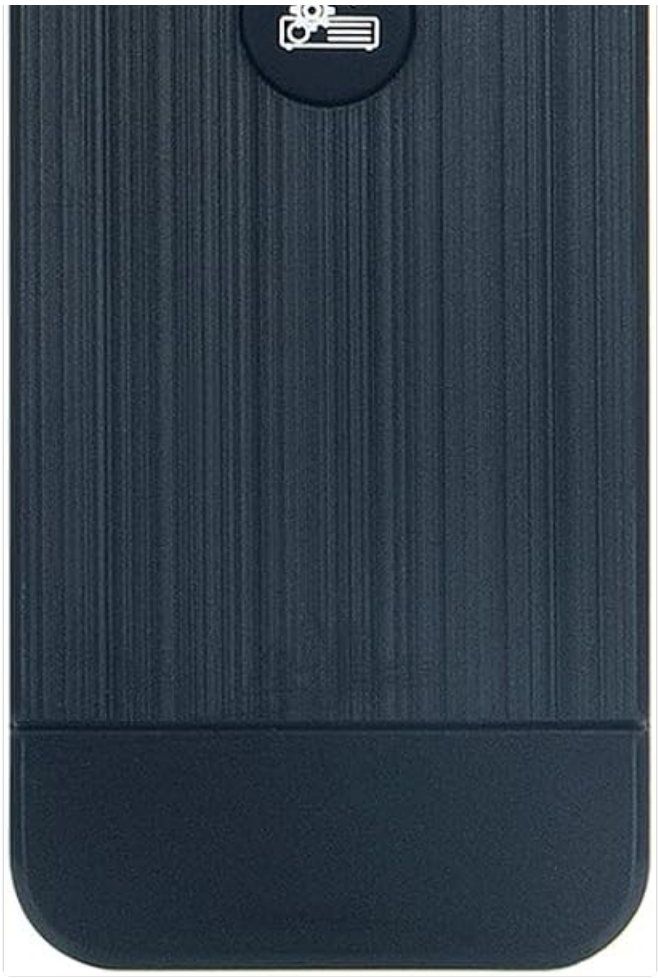

This image displays the front of the ZdalaMit replacement remote control, highlighting its ergonomic design and button layout. The remote is black with a textured finish.

1. Introduction

This manual provides instructions for the ZdalaMit replacement remote control, designed for use with Toumei Projector models C800W, C800, C800S, and C800A. This remote control offers a direct replacement solution, requiring no complex programming for operation.

2. Package Contents

- 1 x ZdalaMit Replacement Remote Control
- (Batteries are not included)

3. Setup: Battery Installation

To begin using your remote control, you must install two AAA alkaline batteries. Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Close the battery compartment cover by sliding it back into place until it clicks securely.



This image shows an angled view of the remote control, illustrating the typical location of the battery compartment on the rear side.

Note: No programming is required for this replacement remote control. Once batteries are correctly installed, it is ready for immediate use with compatible Toumei Projectors.

4. Operating Instructions

The remote control features standard buttons for navigating and controlling your Toumei Projector. Refer to the image below for button identification and their general functions:





This image provides a clear view of the remote control's front panel, detailing the layout and symbols of each button for easy identification.

- **Power Button (Red Circle with Line):** Turns the projector on or off.

- **Navigation Pad (Circular with OK in center):** Use the Up, Down, Left, Right arrows to navigate menus. The **OK** button confirms selections.
- **Back/Return Button (Curved Arrow):** Returns to the previous screen or menu.
- **Home Button (House Icon):** Accesses the projector's main home screen.
- **Menu/List Button (Three Horizontal Lines):** Opens the projector's menu or displays a list of options.
- **Volume Control (Speaker Icons with +/-):** Adjusts the audio volume.
- **Mute Button (Speaker with X):** Mutes or unmutes the audio.
- **Settings Button (Gear Icon):** Accesses projector settings.
- **Source/Input Button (Rectangle with Arrow):** Selects the input source.

Specific button functionalities may vary slightly depending on the firmware version of your Toumei Projector model.

5. Maintenance

To ensure optimal performance and longevity of your remote control, consider the following maintenance tips:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones.
- **Cleaning:** Use a soft, dry cloth to clean the remote control. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If not used for extended periods, remove the batteries to prevent leakage.

6. Troubleshooting

Problem	Possible Cause	Solution
Remote control is not working.	◦ Batteries are depleted or incorrectly installed. ◦ Obstruction between remote and projector. ◦ Remote control sensor on projector is blocked.	◦ Replace batteries with new AAA alkaline batteries, ensuring correct polarity. ◦ Ensure a clear line of sight between the remote and the projector. ◦ Check if anything is blocking the infrared sensor on the projector.
Remote control works intermittently.	◦ Low battery power. ◦ Interference from other electronic devices.	◦ Replace batteries. ◦ Move away from other devices that might cause interference.

7. Specifications

- **Product Dimensions:** 6 x 2 x 0.5 inches
- **Item Weight:** 1.13 ounces
- **Batteries Required:** 2 x AAA (Alkaline recommended)
- **Compatible Devices:** Toumei Projector C800W, C800, C800S, C800A
- **Color:** Black
- **Special Feature:** Ergonomic design

8. Warranty and Support

This product is a replacement remote control. For any questions or support regarding its functionality or compatibility, please contact the seller directly. Please refer to your purchase documentation for specific warranty information, if applicable.
For issues related to your Toumei Projector, please consult the projector's original user manual or contact Toumei customer support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question