Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

De'Longhi PACES72

De'Longhi Pinguino Compact PACES72 Portable Air Conditioner User Manual

Model: PACES72

1. Important Safety Information

Please read this manual carefully before installing and operating the appliance. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for indoor use only.
- Do not operate the appliance with a damaged cord or plug.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not block air inlets or outlets. Maintain a minimum distance of 20 cm from walls or other objects.
- Do not insert fingers or foreign objects into the air inlets/outlets.
- Always unplug the appliance before cleaning or servicing.
- This appliance contains R290 refrigerant. Do not puncture or burn.

2. Product Overview

The De'Longhi Pinguino Compact PACES72 is a portable 3-in-1 air conditioning unit designed for cooling, dehumidifying, and fan functions in rooms up to 60m³.



Front view of the De'Longhi Pinguino Compact PACES72 unit.

2.1 Included Components

Verify that all components are present in the packaging:



Diagram of components included in the box.

- Portable Air Conditioner Unit
- Remote Control
- Air Exhaust Hose (1.5m length)
- Hose Adapter
- Adapter for Wall Mounting / Window
- Window Kit (includes window bracket cap and wall flange with cap)

2.2 Unit Features

- Compact design with integrated handles and castor wheels for easy portability.
- Top-mounted control panel with digital display.
- Adjustable louvers for directing airflow.

3. Setup and Installation

Before first use, allow the unit to stand upright for at least 2 hours to ensure the refrigerant settles.

3.1 Positioning the Unit

Place the air conditioner on a flat, stable surface, ensuring there is at least 20 cm of clear space around the unit for proper airflow.



Unit positioned in a room with the exhaust hose directed towards a window.

3.2 Exhaust Hose Installation

The exhaust hose must be connected to expel hot air outside the room.

1. Screw the hose adapter onto one end of the air exhaust hose.
2. Connect the other end of the hose to the air outlet on the back of the air conditioner unit.
3. Insert the window adapter (or wall mounting adapter) into the hose adapter.
4. Extend the hose and position the window adapter outside through a window opening.




Two common window setup options for the exhaust hose.

For optimal performance, minimize the length and bends in the exhaust hose. Use the included window kit to seal the window opening as much as possible to prevent hot air from re-entering the room.

4. Operating Instructions

The unit can be controlled via the touch control panel on top of the unit or with the supplied remote control.

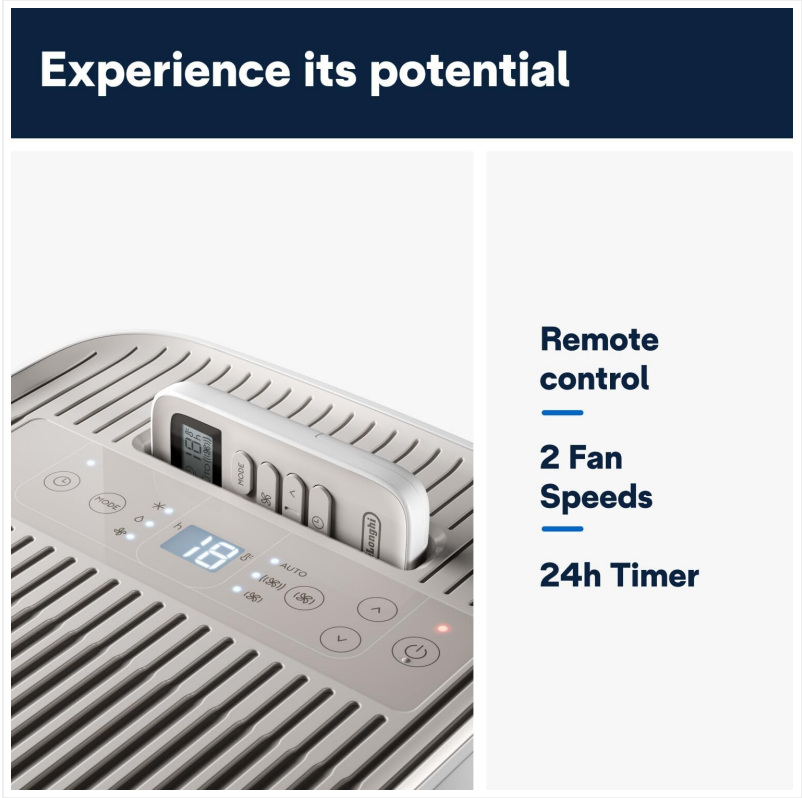

Control panel and remote control for the unit.

4.1 Power On/Off

Press the **ON/OFF** button to turn the unit on or off.

4.2 Mode Selection

Press the **MODE** button to cycle through the available functions:

- **Cooling Mode (Snowflake icon):** Provides cooling. Adjust temperature using the **+/-** buttons.
- **Dehumidifying Mode (Water drop icon):** Removes moisture from the air (up to 21 litres/24 hours). Fan speed is automatically set.
- **Fan Mode (Fan icon):** Circulates air without cooling. Select fan speed (low/high) using the fan speed button.

4.3 Temperature and Fan Speed Adjustment

- In Cooling Mode, use the **+/-** buttons to set the desired temperature.
- In Cooling or Fan Mode, press the **FAN SPEED** button to select between low and high fan speeds. The unit features a 50% noise reduction from max to min speed.

4.4 Timer Function

The 24-hour timer allows you to program the unit to turn on or off automatically.

- To set **Timer ON**: With the unit off, press the **TIMER** button, then use **+/-** to set the desired delay.

- To set **Timer OFF**: With the unit on, press the**TIMER** button, then use **+/-** to set the desired delay.

5. Maintenance

Regular maintenance ensures optimal performance and extends the life of your air conditioner. Always unplug the unit before performing any maintenance.

5.1 Cleaning the Air Filter

The air filter should be cleaned every two weeks or more frequently depending on usage and air quality.

1. Turn off the unit and unplug it from the power outlet.
2. Locate the air filter panel (usually at the back or side of the unit).
3. Remove the filter.
4. Clean the filter with a vacuum cleaner or wash it gently with lukewarm water (max 40°C) and a mild detergent.
5. Rinse thoroughly and allow the filter to dry completely before reinserting it.

5.2 Draining Condensed Water

During dehumidifying or cooling operations, water will accumulate inside the unit. The unit has an automatic evaporation system, but in high humidity conditions, manual draining may be required.

1. Turn off the unit and unplug it.
2. Place a shallow pan or container under the drain outlet (located at the bottom rear of the unit).
3. Remove the drain plug. Water will begin to flow out.
4. Once all water has drained, replace the drain plug securely.

5.3 Storage

If the unit will not be used for an extended period:

- Drain all condensed water.
- Clean the air filter.
- Unplug the unit and coil the power cord.
- Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.

6. Troubleshooting


Before contacting customer support, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
Unit does not turn on	No power supply Power cord not plugged in Full water tank	Check power outlet Ensure plug is fully inserted Drain the water tank
Unit does not cool effectively	Windows/doors open Air filter dirty Exhaust hose blocked/bent Room size too large	Close all windows and doors Clean the air filter Check and clear exhaust hose Ensure room size is within 60m³

Problem	Possible Cause	Solution
Unit is noisy	Unit not on a flat surface Fan speed too high	Place on a flat, stable surface Select a lower fan speed (note: some noise is normal for portable ACs)
Water leaking from unit	Drain plug not secure Unit tilted	Ensure drain plug is tightly closed Place unit on a level surface

7. Technical Specifications


Detailed specifications for the De'Longhi Pinguino Compact PACES72.

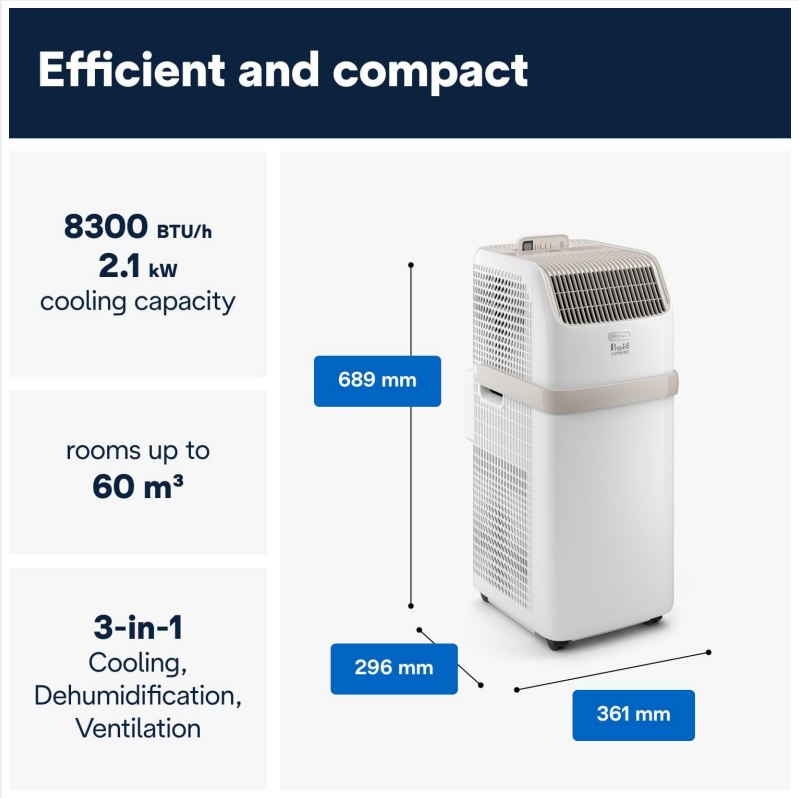

Key specifications and dimensions of the unit.

Specification	Value
Model Number	PACES72
Cooling Capacity	8,300 BTU/h (2.1 kW)
Recommended Room Size	Up to 60m³
Dehumidifying Capacity	21 litres/24 hours
Power Supply	240 Volts
Wattage	2.1 KW
Refrigerant	R290
Noise Level	65 dB (max)
Product Dimensions (HxWxD)	69.8 x 36.1 x 29.6 cm

Specification	Value
Item Weight	25.5 kg
Energy Efficiency Class	A

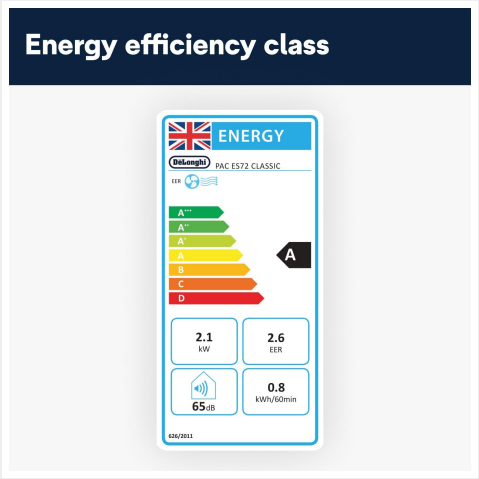

Energy efficiency label for the PACES72 model.

8. Warranty and Support

De'Longhi products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty, details of which are provided with your purchase documentation.

For technical assistance, spare parts, or to report a fault, please contact De'Longhi customer support. Have your product model number (PACES72) and purchase date ready when contacting support.

You can find contact information for your region on the official De'Longhi website: www.delonghi.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BX3R4674

More documents and user manuals: **https://manuals.plus/**