Xflyee 104

Xflyee Digital Wall Clock User Manual

Brand: Xflyee | Model: 104

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Xflyee Digital Wall Clock. This 13-inch digital clock features a high-definition LED screen with 4.3-inch bold fonts for excellent visibility. It includes an auto-dimmer, calendar, 25 alarm sounds, temperature display, and timer functions, making it a versatile addition to any bedroom, living room, or office.



Image: The Xflyee Digital Wall Clock displaying time, day, month, date, and temperature.

Package Contents

Upon opening your package, please verify that all the following items are included:

- One large digital clock
- One power adapter
- One power cord
- One wireless remote control
- One product manual (this document)

Setup

Initial Power-On and Placement

Connect the provided power adapter to the clock and plug it into a standard electrical outlet. The clock can be placed on a desk using its integrated stand or mounted on a wall. Ensure the clock is placed within 10 meters (32 feet) of where the

remote control will typically be used for optimal performance.



Image: The digital clock can be wall-mounted or used as a desk clock.



Image: A user operating the digital clock with the wireless remote control.

Remote Control Battery Installation

The remote control requires 2 AAA batteries (included). Open the battery compartment on the back of the remote and insert the batteries, observing the correct polarity (+/-). The clock itself has backup batteries (2 AA batteries, included) to remember settings during power outages, but it requires continuous power to display.

Operating Instructions

Time and Date Display

The clock prominently displays the time, day of the week, month, date, and indoor temperature. You can switch between 12-hour and 24-hour formats, and temperature can be displayed in Celsius (°C) or Fahrenheit (°F).



Image: Display options for 12/24 hour time and Celsius/Fahrenheit temperature.

Brightness Adjustment

The clock features four manual brightness levels and an auto-dimming function via a built-in light sensor. This ensures

comfortable viewing in various lighting conditions and helps protect eyesight. The display can also be turned off completely for a dark environment.



Image: Visual representation of auto and 4-level adjustable brightness settings.

Alarm Functions

The clock supports two independent alarm settings. You can choose from 25 unique alarm ringtones. Alarm modes include Everyday, Working Day (Monday-Friday), and Weekend (Saturday-Sunday).



Image: Selection of 25 alarm ringtones and dual alarm indicators.

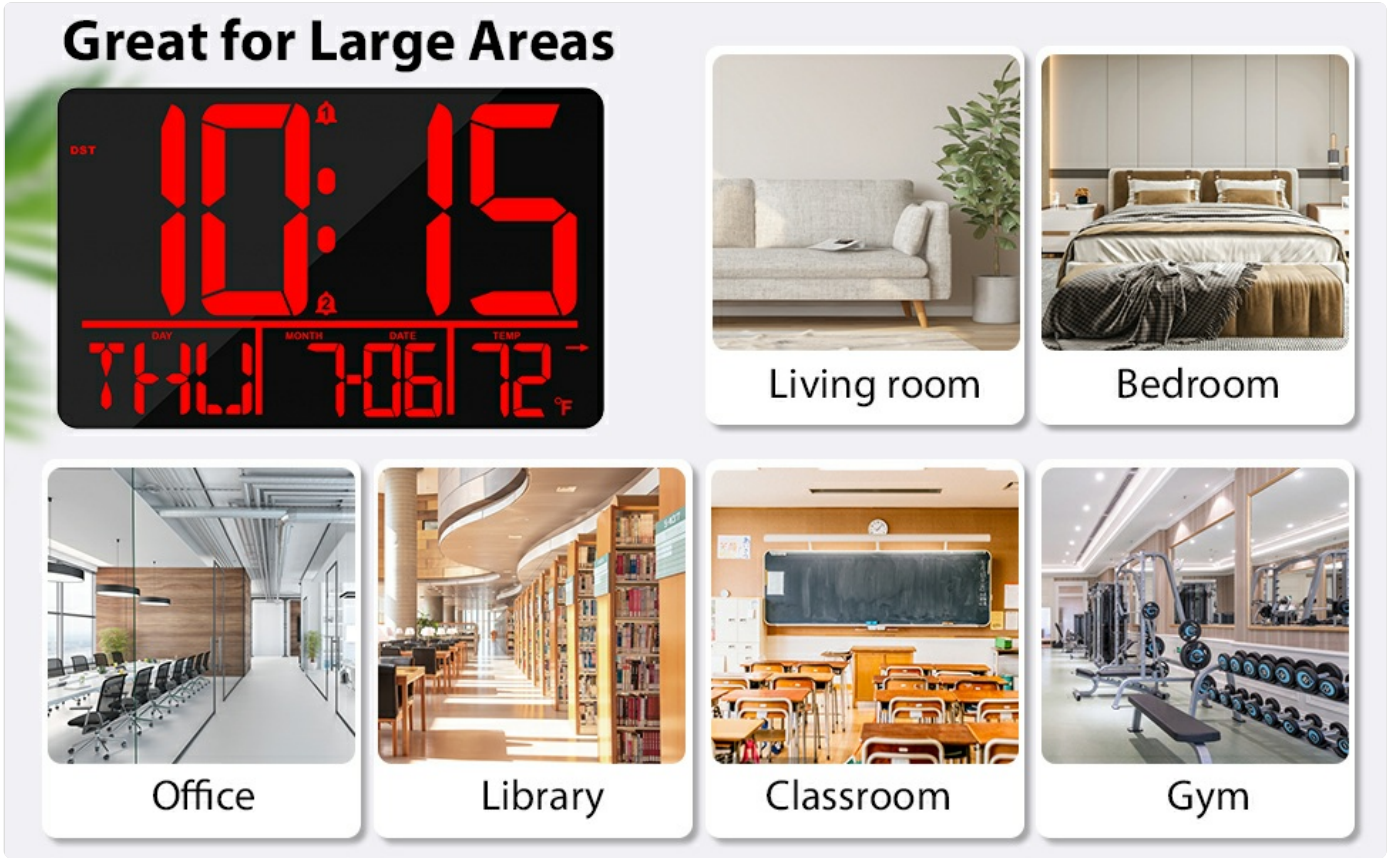


Image: Different alarm mode settings for daily, weekday, or weekend use.

To set an alarm, press the "ALARM" button on the remote or the clock's back. Use the navigation buttons to adjust the time and select your preferred ringtone and alarm mode. Press "SET" to confirm.

The snooze function allows for a temporary delay of the alarm. When the alarm sounds, press any button (except "OFF") to activate snooze. The alarm will sound again after the preset snooze interval.

Timer Function

The clock can function as a large digital timer, offering both count-up and countdown modes. This is useful for various activities such as cooking, exercise, or study sessions.



Image: Illustration of countdown and count-up timer modes.

Daylight Saving Time (DST)

The clock automatically adjusts for Daylight Saving Time (DST), eliminating the need for manual adjustments during spring forward or fall back.



Image: The clock's automatic adjustment feature for Daylight Saving Time.

Maintenance

To ensure the longevity and optimal performance of your digital wall clock, follow these simple maintenance guidelines:

- **Cleaning:** Gently wipe the display and casing with a soft, dry, or slightly damp cloth. Avoid using abrasive cleaners, solvents, or spray cleaners directly on the clock, as they may damage the surface.
- **Placement:** Place the clock in a location away from direct sunlight, extreme temperatures, and high humidity to prevent damage to electronic components and display fading.
- **Power Supply:** Always use the original power adapter provided with the clock. If the power cord becomes damaged, discontinue use and contact customer support for a replacement.
- **Battery Replacement:** While the clock has backup batteries for settings, replace them periodically (e.g., once a year) to ensure settings are retained during power interruptions. Replace remote control batteries when its responsiveness decreases.

Troubleshooting

If you encounter any issues with your Xflyee Digital Wall Clock, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Clock display is blank or not turning on.	No power supply; power adapter or cord damaged.	Ensure the power adapter is securely plugged into both the clock and a working electrical outlet. Check the power cord for any visible damage. Try a different outlet.
Display flickering or inconsistent brightness.	Interference with auto-dimmer; faulty unit.	If using auto-dimming, ensure the light sensor (located on the back/top right) is not obstructed or exposed to rapidly changing light conditions. Try switching to a manual brightness level. If the issue persists, contact customer service.
Remote control not responding.	Dead batteries; remote out of range; obstruction.	Replace the batteries in the remote control. Ensure you are within the 10-meter effective range and there are no major obstructions between the remote and the clock.
Temperature reading is inaccurate.	Sensor interference; placement near heat/cold source.	Ensure the clock is not placed directly near a heat source (e.g., radiator, direct sunlight) or a cold draft (e.g., air conditioner vent). Allow some time for the sensor to stabilize after relocation.
Alarm does not sound.	Alarm not set correctly; volume too low; incorrect alarm mode.	Verify that the alarm time is set correctly and the alarm is activated. Check the alarm volume level. Ensure the alarm mode (Everyday, Working Day, Weekend) matches your desired schedule.

If these steps do not resolve your issue, please contact Xflyee customer service for further assistance.

Specifications

Feature	Detail
Brand	Xflyee
Model Number	104
Display Type	Digital LED
Product Dimensions	10"W x 5"H
Special Features	Large Display, Snooze, Timer, Alarm, Auto Dimmable, Calendar, Temperature (°C/°F), DST, 12/24-hour format
Brightness Levels	4 manual levels + Auto Dimming
Alarm Ringtones	25 unique sounds
Power Source	Corded Electric
Remote Control Range	Up to 10 meters (32 feet)
Mounting Type	Wall Mount / Desk Stand
Material	Glass, Acrylonitrile Butadiene Styrene
Item Weight	1 Pounds

Warranty and Support

Xflyee stands behind the quality of its products. This digital wall clock comes with a standard manufacturer's warranty covering defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Xflyee website.

If you require technical support, have questions about product operation, or need to report an issue, please contact Xflyee customer service. Contact information can typically be found on the product packaging or the Xflyee brand store on Amazon.

We are committed to providing a satisfactory solution for any concerns you may have.

© 2023 Xflyee. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question