BLOW 30-450

BLOW Cinema 4.0 Soundbar Speaker User Manual

Model: 30-450

1. Introduction

Thank you for purchasing the BLOW Cinema 4.0 Soundbar Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.
The BLOW Cinema 4.0 is a 120W soundbar designed to enhance your audio experience, offering multiple connectivity options including Bluetooth, HDMI ARC, Optical, Coaxial, and AUX input.

2. Safety Instructions

- Read all instructions carefully before operating the soundbar.
- Do not expose the device to rain, moisture, or extreme temperatures.
- Ensure proper ventilation around the unit. Do not block any ventilation openings.
- Use only the power adapter supplied with the device.
- Do not open the casing. Refer all servicing to qualified personnel.
- Keep the soundbar away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Clean only with a dry cloth.

3. Package Contents

Please check that all items listed below are present in your package:

- BLOW Cinema 4.0 Soundbar Speaker
- Remote Control
- Power Adapter
- Audio Cables (e.g., Optical cable, RCA to 3.5mm AUX cable)
- User Manual (this document)



Image: Included accessories, showing the power adapter, an optical cable, and an RCA to 3.5mm AUX cable.

4. Product Features and Components

4.1 Front View



Image: Front view of the BLOW Cinema 4.0 Soundbar. The BLOW logo is visible on the left side of the speaker grille.

The front of the soundbar features the speaker grille and a discreet display panel (usually behind the grille) that shows current input mode and volume level.

4.2 Rear Panel Connections

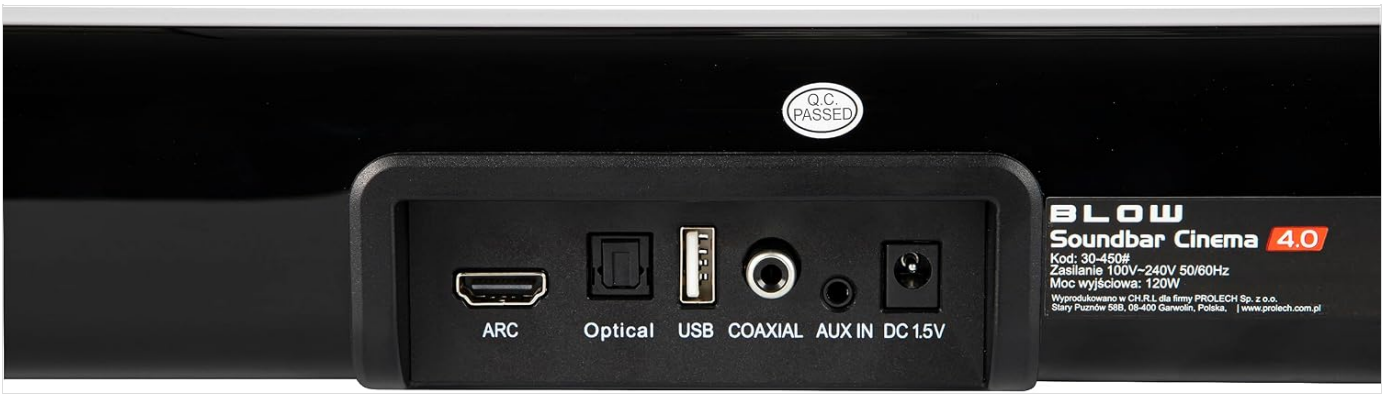


Image: Rear panel of the BLOW Cinema 4.0 Soundbar, displaying the input ports. From left to right: HDMI ARC, Optical, USB, Coaxial,

AUX IN, and DC 1.5V power input.

- **ARC (HDMI ARC)**: Connect to a TV's HDMI ARC port for audio return channel functionality.
- **Optical**: Digital audio input for connecting to TVs or other devices with an optical output.
- **USB**: For playing audio files from a USB storage device.
- **COAXIAL**: Digital audio input for connecting to devices with a coaxial output.
- **AUX IN**: Analog audio input for connecting to devices with a 3.5mm or RCA audio output.
- **DC 1.5V**: Power input for the supplied power adapter.

5. Setup

5.1 Placement

Place the soundbar on a stable, flat surface directly in front of your television, or mount it on a wall (mounting hardware not included). Ensure there are no obstructions blocking the front of the soundbar for optimal sound projection.



Image: The BLOW Cinema 4.0 Soundbar positioned on a media console beneath a television, with its remote control nearby.

5.2 Power Connection

1. Connect the supplied power adapter to the DC 1.5V input port on the rear of the soundbar.
2. Plug the other end of the power adapter into a suitable wall outlet.

5.3 Audio Connections

Choose one of the following methods to connect the soundbar to your audio source (e.g., TV, DVD player):

- **HDMI ARC**: Connect an HDMI cable (not included) from the soundbar's ARC port to your TV's HDMI ARC port.

Ensure ARC is enabled in your TV's audio settings.

- **Optical**: Connect an optical cable (included) from the soundbar's Optical port to your TV's optical digital audio output.
- **Coaxial**: Connect a coaxial cable (not included) from the soundbar's Coaxial port to your TV's coaxial digital audio output.
- **AUX IN**: Connect the supplied RCA to 3.5mm AUX cable from the soundbar's AUX IN port to your audio device's 3.5mm headphone jack or RCA audio output.
- **Bluetooth**: For wireless connection, refer to the "Bluetooth Pairing" section in Operating Instructions.

6. Operating Instructions

6.1 Power On/Off

Press the **POWER** button on the remote control or the soundbar to turn the unit on or off.

6.2 Input Selection

Press the **INPUT** button on the remote control or the soundbar repeatedly to cycle through the available input modes: HDMI ARC, Optical, Coaxial, AUX, USB, and Bluetooth. The current input mode will be displayed on the soundbar's front panel.

6.3 Volume Control

Use the **VOL+** and **VOL-** buttons on the remote control or the soundbar to adjust the volume. Press the **MUTE** button to temporarily silence the audio.

6.4 Bluetooth Pairing

1. Switch the soundbar to Bluetooth mode using the **INPUT** button. The display will show "BT" and flash, indicating it's in pairing mode.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "BLOW Cinema 4.0" from the list of devices.
4. Once paired, the soundbar will emit a confirmation tone, and "BT" on the display will stop flashing.
5. You can now play audio from your device through the soundbar.

Note: The soundbar will automatically attempt to reconnect to the last paired device when in Bluetooth mode.

6.5 USB Playback

Insert a USB flash drive (FAT32 format) containing MP3 audio files into the USB port on the rear panel. The soundbar will automatically switch to USB mode and begin playback. Use the remote control for playback functions (Play/Pause, Next/Previous Track).

7. Maintenance

- **Cleaning**: Disconnect the power before cleaning. Use a soft, dry cloth to wipe the surface of the soundbar. Do not use liquid cleaners or aerosols.
- **Storage**: If not in use for an extended period, unplug the power adapter and store the soundbar in a cool, dry place.

8. Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the soundbar and a working power outlet.
No sound	Incorrect input mode selected; volume too low; incorrect cable connection; TV audio settings.	• Select the correct input mode (HDMI ARC, Optical, AUX, etc.). • Increase the volume on both the soundbar and the connected device. • Check all audio cable connections. • Ensure your TV's audio output is set to the correct external speaker option (e.g., PCM for optical).
Bluetooth pairing fails	Soundbar not in pairing mode; device too far; interference.	• Ensure the soundbar is in Bluetooth pairing mode (flashing "BT"). • Move your device closer to the soundbar. • Turn off other Bluetooth devices to reduce interference. • Try unpairing and re-pairing the device.
Remote control not working	Batteries depleted; obstruction; remote out of range.	• Replace the remote control batteries. • Ensure there is no obstruction between the remote and the soundbar's sensor. • Point the remote directly at the soundbar.

9. Specifications

Model	30-450
Brand	BLOW
Output Power	120 W
Frequency Response	60 Hz (Note: Only 60Hz is listed, typically a range is provided. This might be a minimum or a specific point.)
Connectivity	Bluetooth, HDMI ARC, Optical, Coaxial, USB, AUX IN
Power Source	Wired (AC adapter)
Product Dimensions	25.4 x 5.08 x 6.86 cm (1.8 kg)

10. Warranty and Support

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2023 BLOW. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question