Disney 66945

Disney Minnie Mouse Squishy Light Instruction Manual

Model: 66945

Introduction

The Disney Minnie Mouse Color-Changing Squishy Light provides a soft, squeezable illumination featuring Minnie's iconic ears and red polka-dot bow. This versatile light offers multiple color modes and dimmable white light, suitable for various settings such as bedrooms, playrooms, or living rooms. It can be powered via a USB-C cable or AAA batteries, offering flexibility for both stationary and portable use.

Safety Information

- This product is designed for indoor use only.
- Keep away from water or excessive moisture. This product is not water resistant.
- Battery replacement must be performed by an adult. Dispose of used batteries safely according to local regulations. Do not mix old and new batteries.
- Do not expose batteries to fire as they may leak or explode.
- The light will automatically shut off after 60 minutes of continuous operation when running on batteries.
- Ensure the USB-C cable is properly connected to a 5V, 1A USB-A port or adapter (not included).

Package Contents

- Disney Minnie Mouse Squishy Light (Model 66945)
- 2ft. USB-C Cable

Note: 3 AAA batteries and a 5V, 1A USB-A adapter are not included.

Setup

Battery Installation

1. Locate the battery compartment on the bottom of the light.
2. Remove the screw and open the battery cover.
3. Insert 3 AAA batteries (not included), observing polarity.
4. Close the battery cover and re-insert the screw.

USB-C Power

1. Plug the USB-C end of the included power cable into the port on the back of the light.
2. Plug the USB-A end of the power cable into a 5V, 1A USB-A port or adapter (not included).

Note: While on USB-C power, the batteries will not be used. The USB-C cable does not charge the batteries. If the power goes out, the light will switch to battery power.

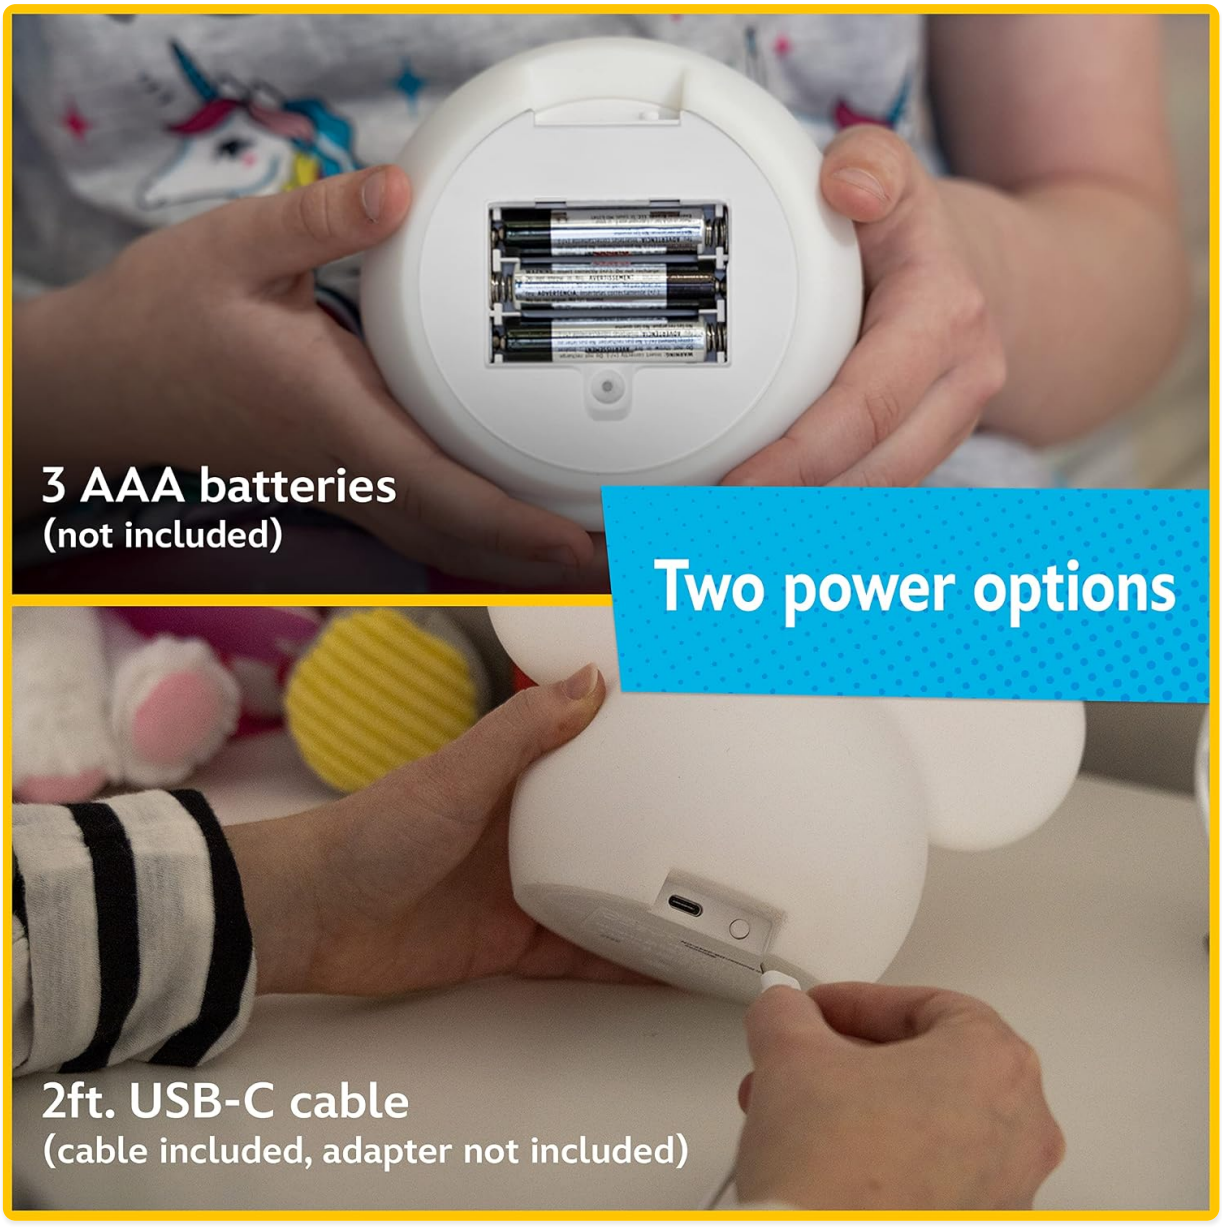


Image: The Minnie Mouse Squishy Light demonstrating its two power options: USB-C cable connection and the battery compartment for 3 AAA batteries.

Operating Instructions

Power Button

- Press the power button on the back of the light to turn it on.

- Press and hold the power button to turn the light off.

Note: When turned off and turned back on, the light will return to the last mode used. When the USB-C cable is disconnected, the light will reset to high white mode.

Changing Colors and Modes

Lightly tap the squishy light to cycle through the following modes:

1. High white
2. Medium white
3. Low white
4. Automatic color fade (cycles through all colors)
5. Red
6. Green
7. Blue
8. Orange
9. Yellow
10. Light green
11. Teal
12. Dark blue
13. Purple
14. Light purple
15. Dark pink
16. Pink

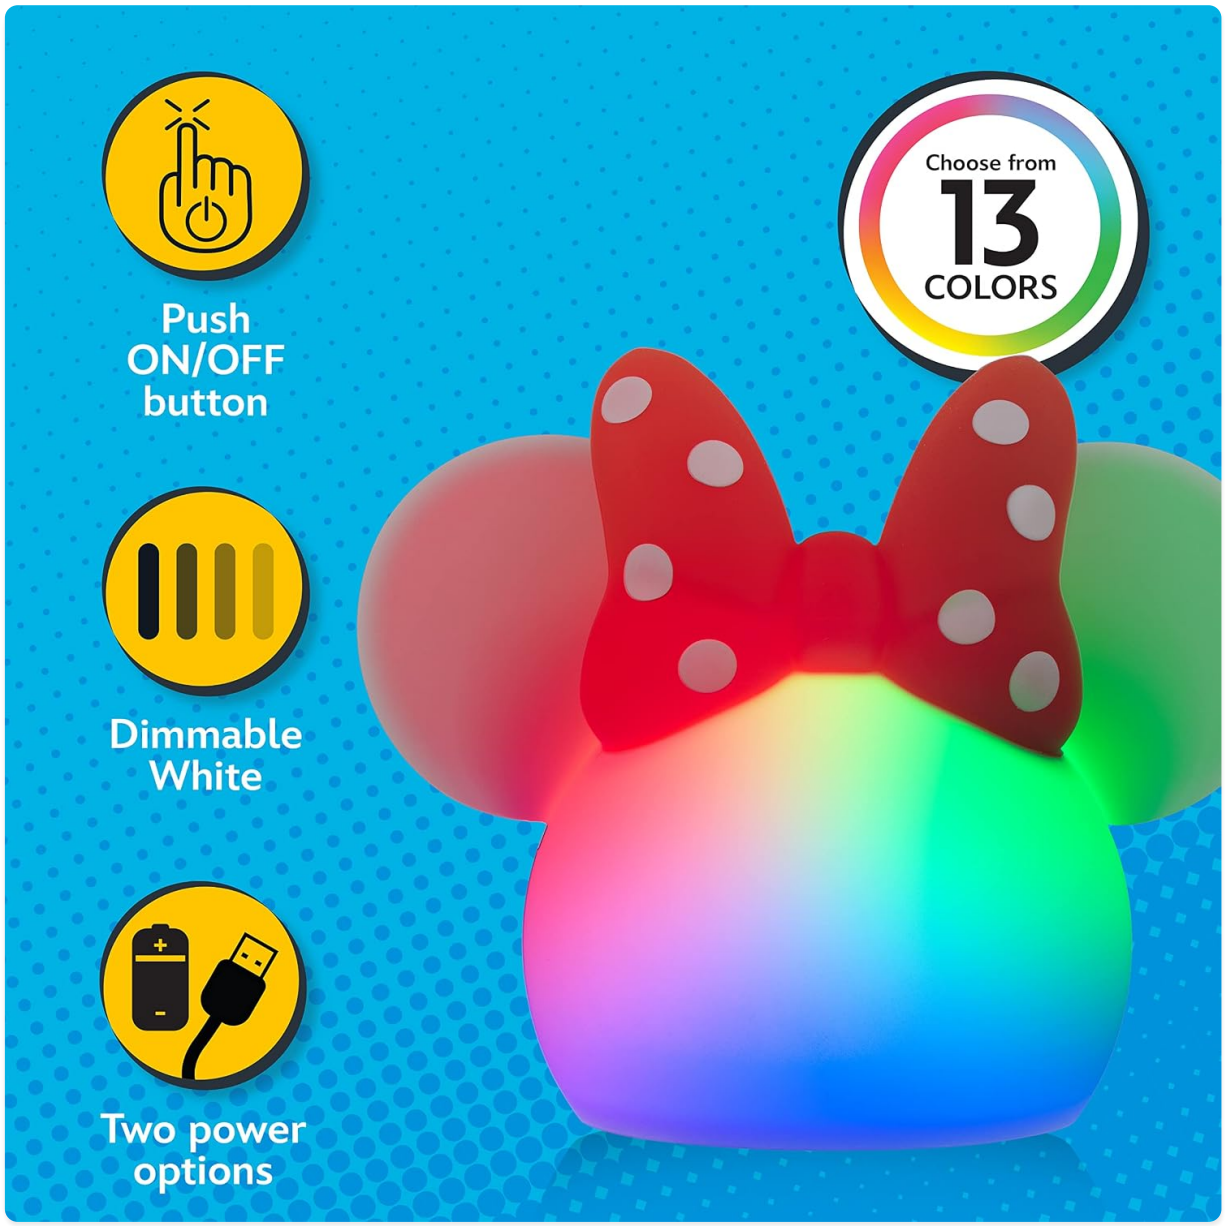


Image: The Minnie Mouse Squishy Light showcasing its touch-activated color-changing feature with various vibrant colors.

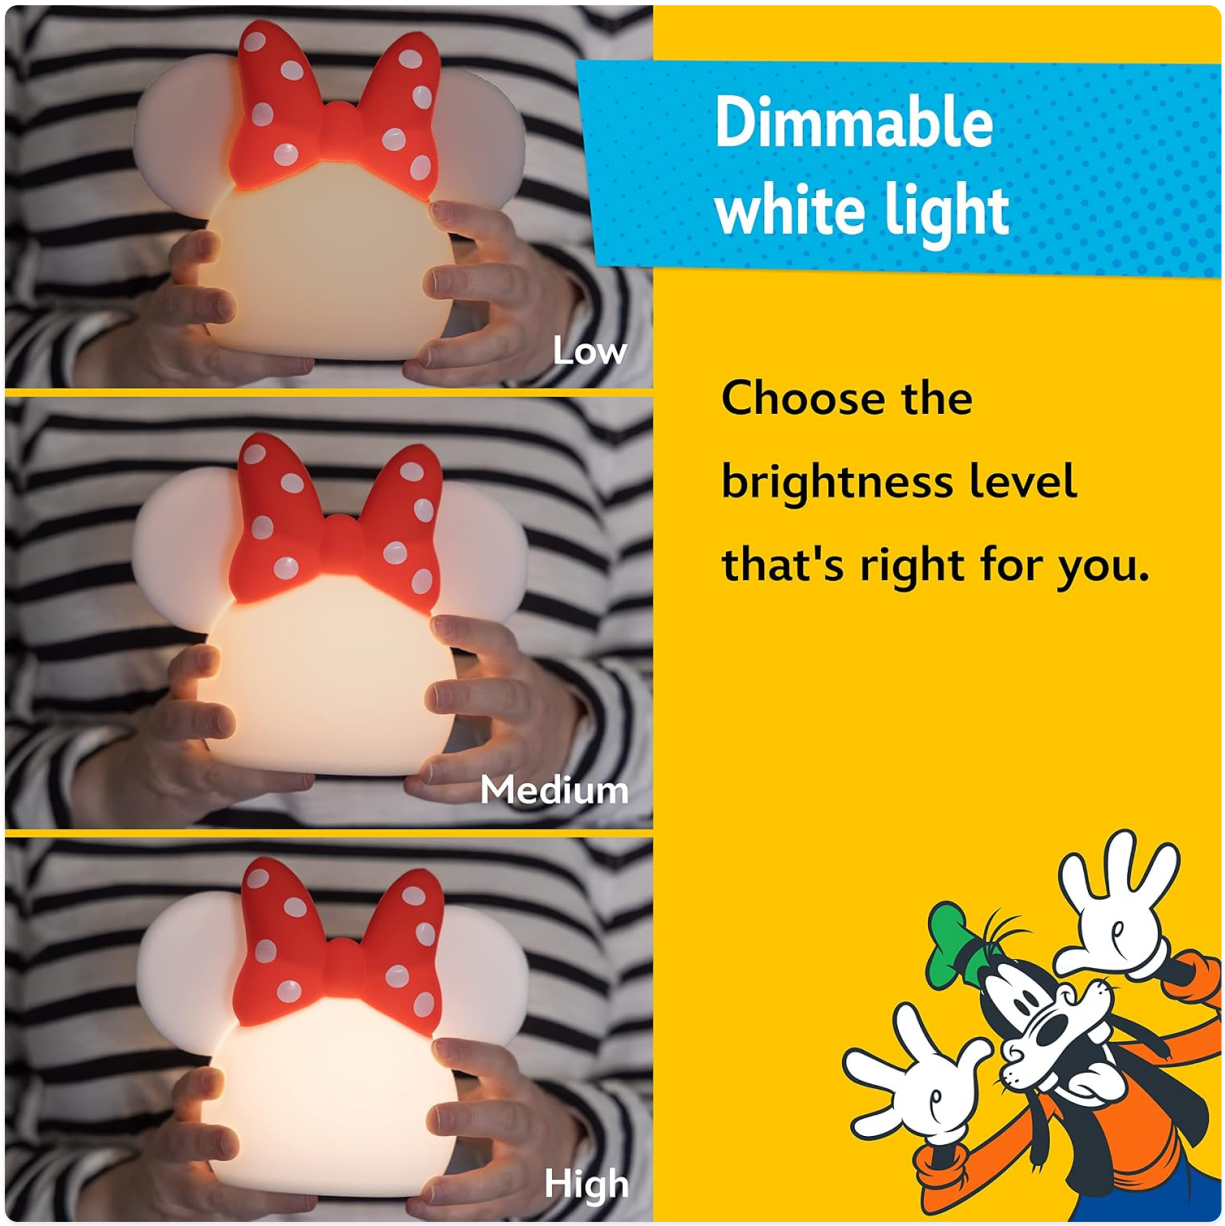


Image: The Minnie Mouse Squishy Light illustrating three levels of dimmable white light: Low, Medium, and High.



Image: The Minnie Mouse Squishy Light glowing in a soft blue, highlighting its squeezable silicone design.

Media Gallery

Official Product Video

Your browser does not support the video tag.

Video: An official product video from Jasco Products Company demonstrating the features and functionality of the Minnie Mouse Squishy Light, including its color-changing modes and soft texture.

Maintenance

- To clean the light, wipe with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

Troubleshooting

- **Light not turning on:** Ensure batteries are correctly inserted with proper polarity or that the USB-C cable is securely connected to a working power source.
- **Colors not changing:** Lightly tap the squishy light firmly to cycle through modes. If using USB-C power,

ensure the connection is stable.

- **Light turns off unexpectedly:** When operating on batteries, the light has an automatic 60-minute shut-off feature.

Specifications

Feature	Detail
Model Number	66945
Brand	Disney
Material Type	Silicone
Light Source Type	LED
Number of Light Sources	11 (colors)
Power Source	Battery Powered (3 AAA, not included) / USB (USB-C cable included, adapter not included)
Voltage	5 Volts
Control Method	Touch Control
Product Dimensions	4.5"D x 5.3"W x 6.15"H
Item Weight	10.23 ounces
Additional Features	Color Changing, Dimmable

Warranty and Support

This product comes with a 90-day limited warranty from the manufacturer, Jasco Products. For support or warranty claims, please refer to the contact information provided with your purchase or visit the Disney Store on Amazon.

© 2026 Disney. All rights reserved.