Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Chefman B0BXTDX65F

Chefman 12-Cup Programmable Coffee Maker + 2-Slice Stainless Steel Toaster Bundle User Manual

Model: B0BXTDX65F

Introduction

Welcome to the user manual for your new Chefman 12-Cup Programmable Coffee Maker and 2-Slice Stainless Steel Toaster Bundle. This comprehensive guide provides detailed instructions for setup, operation, and maintenance to ensure you get the most out of your appliances. Please read all instructions carefully before use and retain this manual for future reference.



Image: The Chefman 12-Cup Programmable Coffee Maker and 2-Slice Stainless Steel Toaster side-by-side.

Chefman 12-Cup Programmable Coffee Maker

The Chefman 12-Cup Programmable Coffee Maker is designed for convenience and optimal coffee brewing. It features advanced programming options, an auto shut-off function, and a pause-and-serve feature for ease of use.

Key Features

- **Programmable Brewing:** Set your coffee to brew up to 24 hours in advance.
- **Auto Shut-Off:** Enhances safety and energy efficiency.
- **Pause & Serve:** Allows you to pour a cup before the brewing cycle is complete without drips.
- **Bold Function:** Adjusts brewing for a stronger coffee flavor.
- **Reusable Filter:** Eco-friendly and easy to clean.
- **Dishwasher-Safe Parts:** Carafe and filter basket are easy to clean.
- **Sleek Stainless Steel Finish:** Modern design complements any kitchen.

Setup

1. **Unpack and Clean:** Remove all packaging materials. Wash the carafe, reusable filter, and filter basket with warm, soapy water. Rinse thoroughly and dry.
2. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface near an electrical outlet.

3. **First Use Cycle:** Before first use, run a full brewing cycle with only water to clean the internal components. Fill the water reservoir to the 12-cup mark, place the empty filter basket and carafe, and press the ON/OFF button. Discard the water after the cycle.

Operating Instructions

1. **Fill Water Reservoir:** Open the top lid and fill the water reservoir with fresh, cold water up to the desired number of cups indicated on the side.
2. **Add Coffee Grounds:** Place the reusable filter into the filter basket. Add the desired amount of ground coffee into the filter. Close the top lid securely.
3. **Place Carafe:** Ensure the glass carafe with its lid is properly placed on the warming plate.
4. **Set Time (Optional):** Use the "HOUR" and "MIN" buttons to set the current time.
5. **Program Auto-Brew (Optional):** Press the "PROG" button. Use "HOUR" and "MIN" to set the desired brew time. Press "PROG" again to confirm. The "PROG" indicator light will illuminate.
6. **Select Brew Strength (Optional):** Press the "BOLD" button for a stronger brew. The "BOLD" indicator light will illuminate.
7. **Start Brewing:** Press the "ON/OFF" button to begin brewing immediately. The "ON/OFF" indicator light will illuminate.
8. **Pause & Serve:** During brewing, you can temporarily remove the carafe to pour a cup. The brewing will pause automatically. Return the carafe within 20 seconds to prevent overflow.
9. **After Brewing:** Once brewing is complete, the coffee maker will automatically switch to keep-warm mode. The warming plate will keep coffee hot for a set period before auto shut-off.

Maintenance

- **Daily Cleaning:** After each use, discard used coffee grounds and rinse the reusable filter and filter basket. The carafe, reusable filter, and filter basket are dishwasher-safe (top rack recommended).
- **Exterior Cleaning:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling:** Over time, mineral deposits can build up. To descale, fill the water reservoir with a mixture of white vinegar and water (1:2 ratio). Place the empty filter basket and carafe. Press the "CLEAN" button. The "CLEAN" indicator light will illuminate, and the unit will run a descaling cycle. Repeat if necessary.





Image: Front view of the Chefman 12-Cup Programmable Coffee Maker with its glass carafe.

EASILY PROGRAM

TO BREW YOUR MORNING CUP UP TO 24 HOURS IN ADVANCE



Image: Close-up of the coffee maker's digital display and control buttons, highlighting the programmable feature.



Image: The Chefman coffee maker with text overlays indicating one-touch ON/OFF control, dishwasher-safe glass carafe, and sleek stainless steel finish.

Chefman 2-Slice Stainless Steel Toaster

The Chefman 2-Slice Pop-Up Stainless Steel Toaster offers versatile toasting options with its extra-wide slots and multiple shade settings, ensuring perfect results for various bread types.

Key Features

- **Extra-Wide Slots:** Accommodates thick slices of bread, bagels, and more.
- **7 Shade Settings:** Provides precise browning control from light to dark.
- **Multiple Functions:** Includes Toast, Bagel, Defrost, Reheat, and Cancel buttons.
- **High-Lift Lever:** Safely and easily retrieve smaller items.
- **Removable Crumb Tray:** Simplifies cleaning and maintenance.

- **Stainless Steel Exterior:** Durable and stylish design.

Setup

1. **Unpack and Clean:** Remove all packaging materials. Wipe the exterior with a damp cloth. Ensure the crumb tray is properly inserted.
2. **Placement:** Place the toaster on a flat, stable, heat-resistant surface, away from flammable materials.
3. **First Use:** Before first use, operate the toaster without bread on the highest setting to burn off any manufacturing residues. A slight odor or smoke is normal during this initial use.

Operating Instructions

1. **Insert Bread:** Place up to two slices of bread, bagels, or other items into the toasting slots.
2. **Select Shade Setting:** Rotate the shade control knob to your desired browning level (1-7).
3. **Choose Function (Optional):**
    - **Toast:** For regular bread. Simply press the lever down.
    - **Bagel:** Toasts the cut side of bagels while warming the other. Press the "Bagel" button, then push the lever down.
    - **Defrost:** For frozen items. Press the "Defrost" button, then push the lever down.
    - **Reheat:** To warm previously toasted items without further browning. Press the "Reheat" button, then push the lever down.
4. **Start Toasting:** Push the carriage lever down until it locks into place. The toasting cycle will begin.
5. **Cancel:** To stop the toasting cycle at any time, press the "Cancel" button.
6. **Retrieve Items:** Once toasting is complete, the items will automatically pop up. Use the high-lift lever to raise smaller items for easier and safer retrieval.

Maintenance

- **Crumb Tray Cleaning:** Regularly remove and empty the removable crumb tray located at the back of the toaster. The crumb tray is dishwasher-safe.
- **Exterior Cleaning:** Ensure the toaster is unplugged and cool. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads.
- **Internal Cleaning:** Never insert utensils or fingers into the toaster slots.



Image: Front view of the Chefman 2-Slice Stainless Steel Toaster with bread inserted.

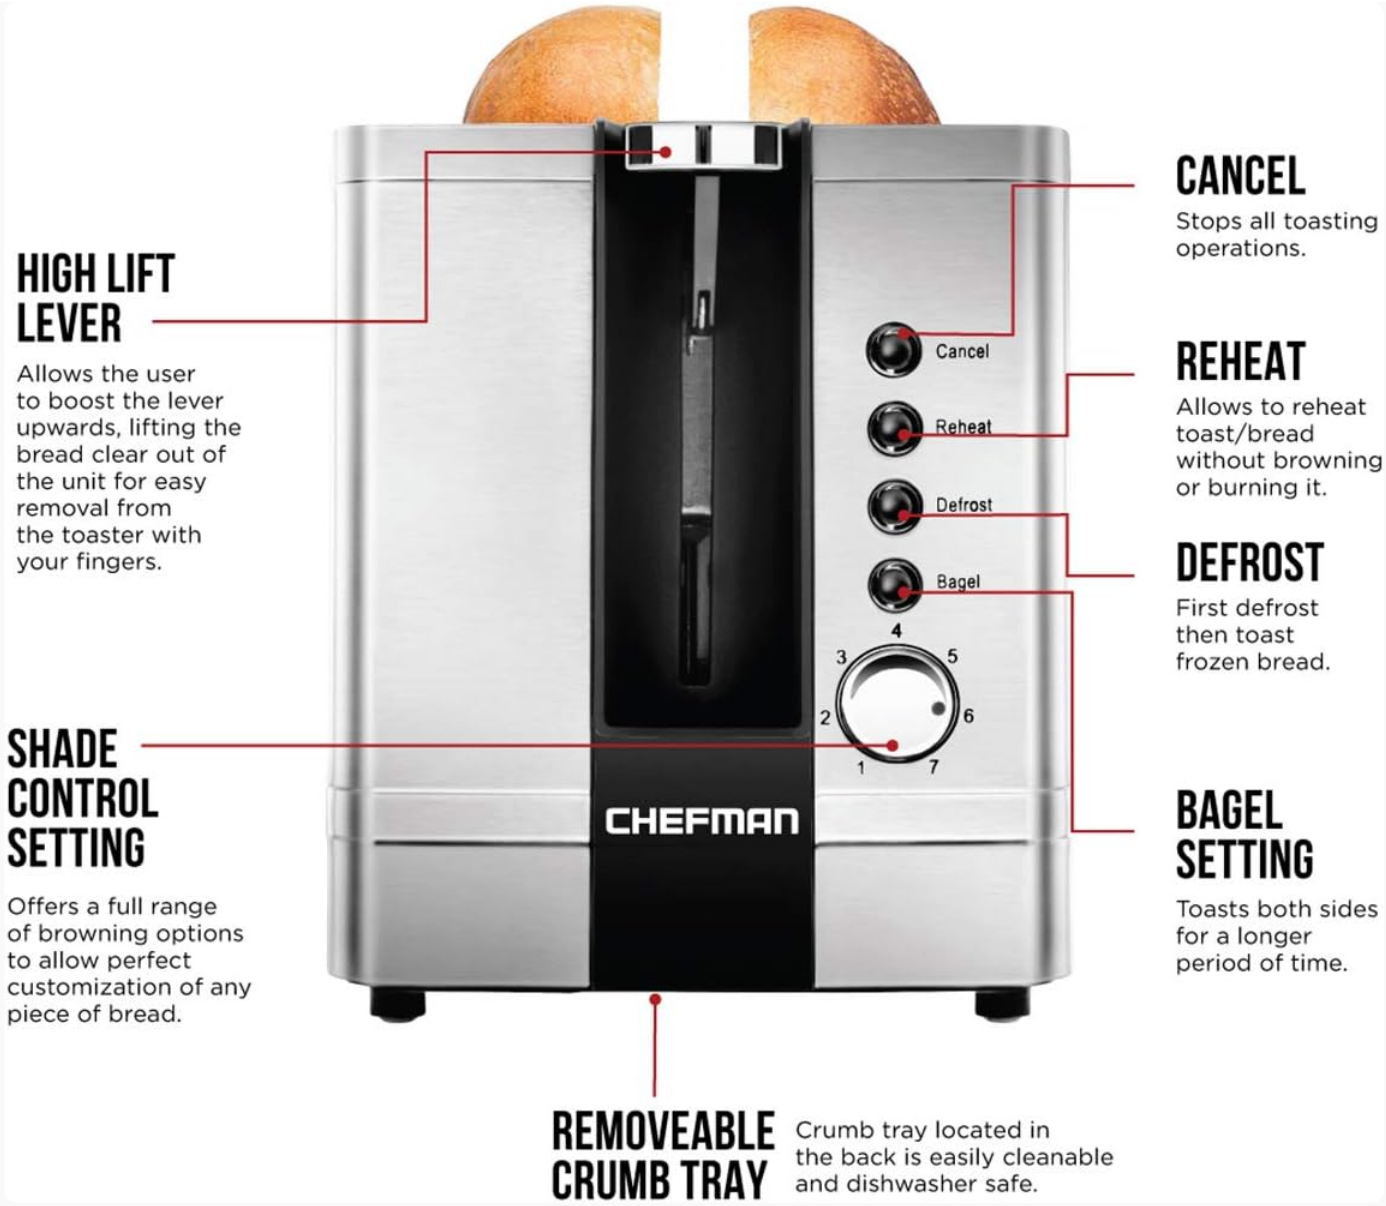


Image: Close-up of the toaster's control panel, showing the Cancel, Reheat, Defrost, and Bagel buttons, along with the shade control dial and high lift lever.



Image: The toaster highlighting its wide slots, 7 shades of toast, and convenient crumb tray for easy cleanup.

Troubleshooting

If you encounter any issues with your Chefman Coffee Maker and Toaster Bundle, please refer to the common troubleshooting steps below. For problems not listed, contact customer support.

Problem	Possible Cause	Solution
Coffee Maker Not Brewing	No water in reservoir; unit not plugged in; ON/OFF button not pressed.	Fill water reservoir; ensure unit is plugged into a working outlet; press ON/OFF button.
Coffee Tastes Weak	Insufficient coffee grounds; coffee too coarsely ground; Bold function not activated.	Add more coffee grounds; use finer ground coffee; press the BOLD button.
Toaster Not Toasting	Unit not plugged in; carriage lever not fully depressed.	Ensure unit is plugged into a working outlet; push the carriage lever down until it locks.
Uneven Toasting	Bread slices too thick or uneven; crumb tray full.	Ensure bread fits properly; empty and clean crumb tray.

Specifications

- **Brand:** Chefman
- **Color:** Stainless Steel

- **Coffee Maker Type:** Drip Coffee Machine
- **Coffee Maker Capacity:** 12-Cup
- **Coffee Filter Type:** Reusable
- **Toaster Type:** 2-Slice Pop-Up Toaster
- **Toaster Power:** 850W, 120V
- **Human Interface Input:** Buttons
- **Model Name:** Chefman 12-Cup Programmable Square Stainless Steel Coffee Maker (Coffee Maker component)
- **ASIN:** B0BXTDX65F

Warranty and Support

For detailed warranty information and customer support, please refer to the official Chefman website or the user manual included with your product. You can also contact Chefman customer service directly for assistance with product registration, troubleshooting, or parts replacement.
Official User Manual (PDF): Download PDF

© 2023 Chefman. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BXTDX65F

More documents and user manuals: **https://manuals.plus/**