Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TenCloud 20mm Quick Release Silicone Smartwatch Bands

TenCloud 20mm Quick Release Silicone Smartwatch Bands

Instruction Manual

1. Introduction


This manual provides instructions for the installation, use, and maintenance of your TenCloud 20mm Quick Release Silicone Smartwatch Bands. These bands are designed for compatibility with various 1.4-inch smartwatches, including the P22 Hero Band III, Donerton, Popglory, CanMixs, and Kalinco models.
The bands are made from soft, skin-friendly silicone, offering durability, flexibility, and ease of cleaning. Each band features a quick-release pin mechanism for simple attachment and removal, along with a stainless steel tang buckle and two keeper straps for a secure fit.

2. Setup and Installation

Installing your TenCloud smartwatch band is a straightforward process due to the integrated quick-release pins. No additional tools are required.

1. **Prepare Your Smartwatch:** Ensure your smartwatch is clean and free of debris where the band attaches. If replacing an old band, remove it by locating the quick-release pin lever and sliding it inward to detach.
2. **Identify Band Orientation:** Each band consists of two parts: one with the buckle and one with the adjustment holes. The buckle part typically attaches to the top of the watch (12 o'clock position) and the longer part with holes to the bottom (6 o'clock position), but this can be adjusted to personal preference.
3. **Attach the First Band:** Locate one end of the new band. On the underside, you will see a small metal pin with a lever. Insert one end of this pin into the corresponding lug hole on your smartwatch.
4. **Engage the Quick-Release Pin:** While holding the first end in place, pull the quick-release lever inward. This retracts the other end of the pin. Carefully align the band with the smartwatch lug and release the lever, allowing the pin to snap into the opposite lug hole. Gently tug on the band to ensure it is securely fastened.
5. **Attach the Second Band:** Repeat the process for the second part of the band.

Visual Aid for Installation:

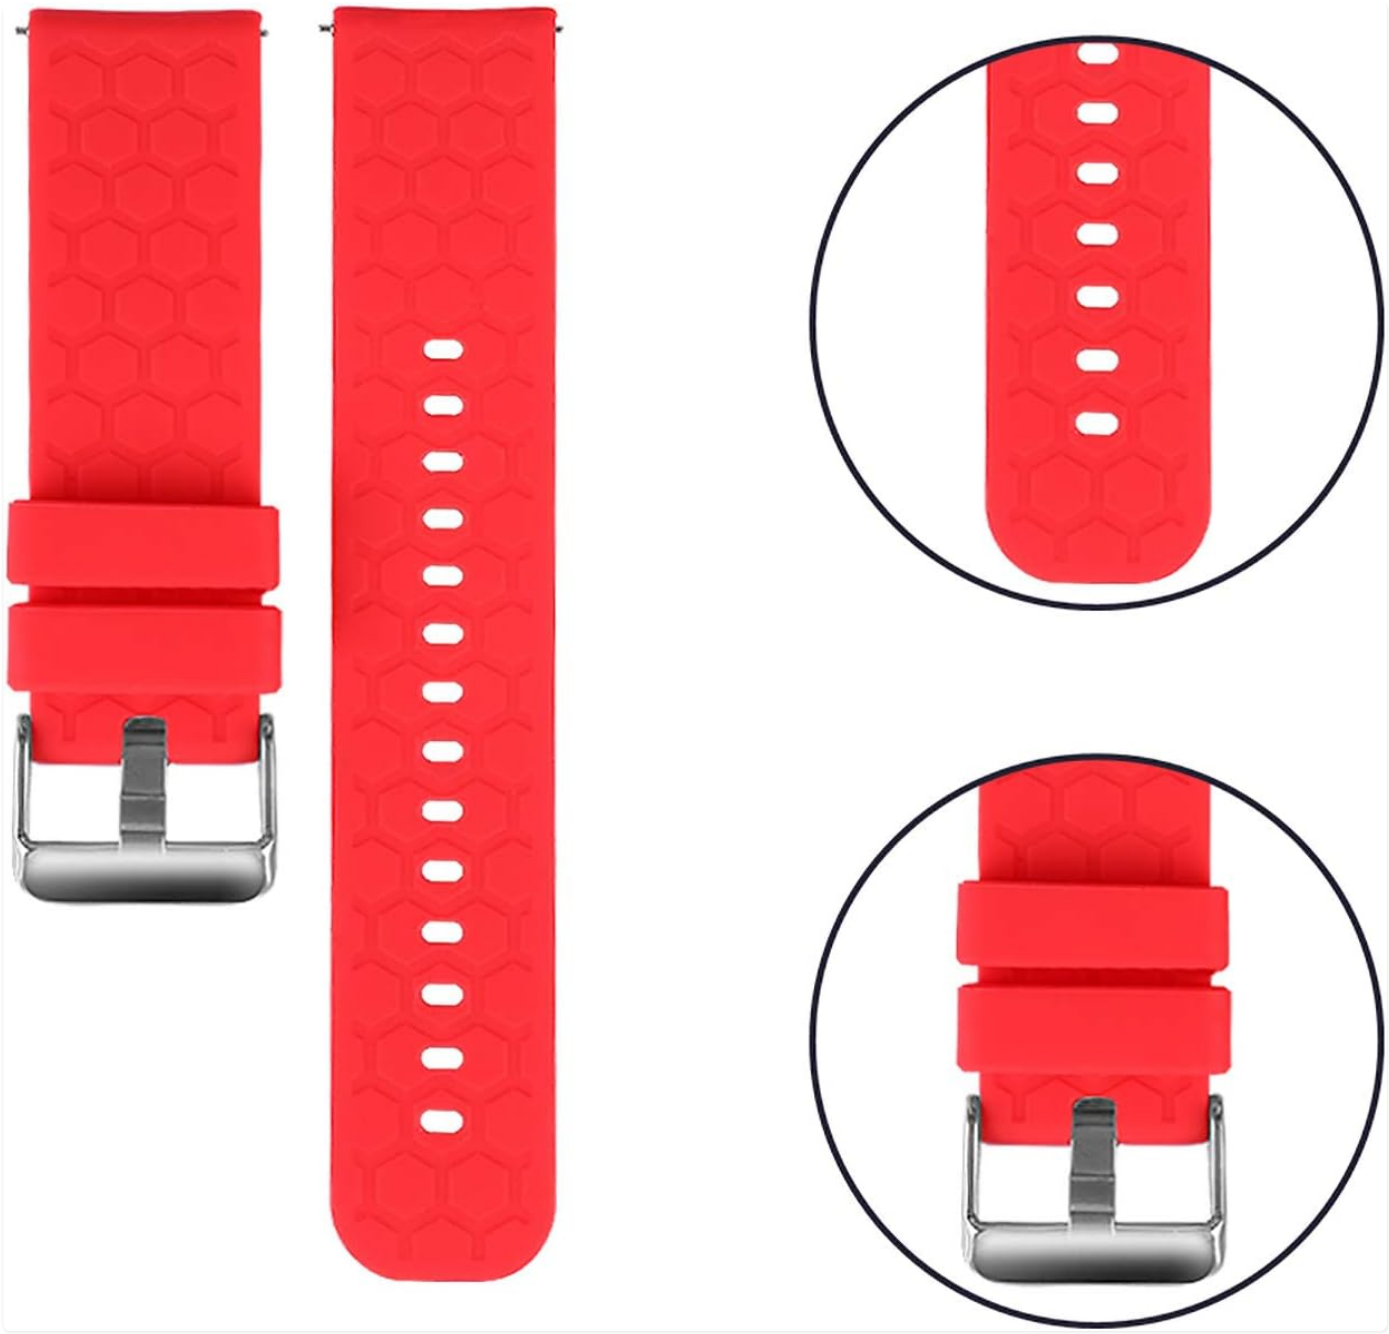

This image displays a red silicone smartwatch band, highlighting the quick-release pins on each end and the stainless steel tang buckle. The design includes a textured surface and multiple adjustment holes.



This image shows a black smartwatch with a black silicone band securely attached. The watch face displays the time 08:30 and battery level, illustrating a fully installed band.

3. Operating and Adjustment

Once installed, the bands are designed for comfortable and secure wear. The adjustable design accommodates a wide range of wrist sizes.

1. **Wearing the Smartwatch:** Place the smartwatch on your wrist.
2. **Adjusting the Fit:** Thread the longer end of the band through the stainless steel tang buckle. Select an adjustment hole that provides a snug yet comfortable fit. The band should not be too tight to restrict circulation, nor too loose to slide freely on your wrist.
3. **Securing the Band:** After fastening the buckle, slide the excess band through the two keeper straps to prevent it from

flapping loose. The two keeper straps are designed to hold the band securely in place and prevent accidental detachment.

Visual Aid for Wearing:



This image illustrates a person wearing a black silicone smartwatch band, demonstrating how the band fits securely around the wrist with the buckle fastened and the excess strap tucked into the keepers.

4. Maintenance

To ensure the longevity and appearance of your silicone smartwatch bands, follow these simple maintenance guidelines:

- **Cleaning:** The silicone bands are washable. You can clean them with mild soap and water. Gently rub the surface to remove dirt or sweat. Rinse thoroughly with clean water.
- **Drying:** After washing, dry the bands completely with a soft cloth or allow them to air dry before reattaching to your smartwatch or wearing.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the

silicone material or cause discoloration.

- **Storage:** When not in use, store the bands in a clean, dry place away from direct sunlight or extreme temperatures to prevent material degradation.

5. Troubleshooting

If you encounter any issues with your TenCloud smartwatch bands, consider the following common solutions:

- **Band Not Attaching Securely:**
  - Ensure the quick-release pins are fully engaged in the smartwatch lugs. Sometimes, the pin may not snap into place correctly. Wiggle the band gently to confirm it's locked.
  - Verify that you are using the correct 20mm band size for your smartwatch model.
- **Discomfort or Skin Irritation:**
  - Ensure the band is not too tight. Adjust it to a comfortable fit that allows for some movement without being loose.
  - Clean the band regularly, especially after exercise or exposure to sweat, to prevent skin irritation from accumulated dirt or moisture.
- **Discoloration or Fading:**
  - While the bands are designed to be fade-resistant, prolonged exposure to harsh chemicals, strong sunlight, or certain dyes can affect their color. Follow the cleaning guidelines in Section 4.

6. Specifications

Feature	Detail
Material	Soft Silicone
Clasp Type	Stainless Steel Tang Buckle
Band Width	20mm (Compatible with 1.4-inch smartwatches)
Adjustable Length	5.5 to 8.5 inches (wrist perimeter)
Colors Included	White, Black, Red, Grey, Pink, Teal (6-pack)
Special Features	Quick Release Pins, Waterproof, Lightweight, Durable, Fall-off Prevention Buckle, Two Keeper Straps
Package Contents	6 x Replacement Smartwatch Bands (Smartwatch not included)

7. Warranty and Support

Specific warranty information for this product is not provided in the available documentation. For any warranty claims, product support, or further assistance, please contact the manufacturer, TenCloud, or the seller directly through your purchase platform.
Manufacturer: TenCloud

© 2026 TenCloud. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BY1S6W4H

More documents and user manuals: **https://manuals.plus/**