ANCTOR HK-FBF-25

ANCTOR Full Size Bed Frame User Manual

Model: HK-FBF-25

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your ANCTOR Full Size Bed Frame with 3 Drawers, Upholstered Platform Bed with Storage Headboard and Charging Station. Please read all instructions carefully before beginning assembly and retain this manual for future reference.
The ANCTOR bed frame is designed for comfort and convenience, featuring a sturdy construction, integrated storage drawers, and a headboard with a charging station.

2. Safety Information

WARNING: Failure to follow these safety instructions could result in injury or damage to the product.

- Do not load more than 900 lbs on the bed frame.
- Be careful around moving parts, such as drawers, to prevent pinching.
- Always unplug the charging station when not in use and keep it away from liquids to prevent electrical hazards.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Keep small parts out of reach of children during assembly.

3. Package Contents

Your ANCTOR bed frame package includes all necessary components for assembly. Please verify that all parts are present before beginning. The package typically contains:

- Bed frame components (side rails, footboard, headboard)
- Upholstered headboard section
- 3 steel storage drawers with rolling wheels
- Wooden slats with hook and loop fasteners
- Charging station with power outlet and USB ports
- Hardware kit (screws, bolts, Allen wrench)

- Instruction Manual (this document)

Note: Mattress is NOT included.

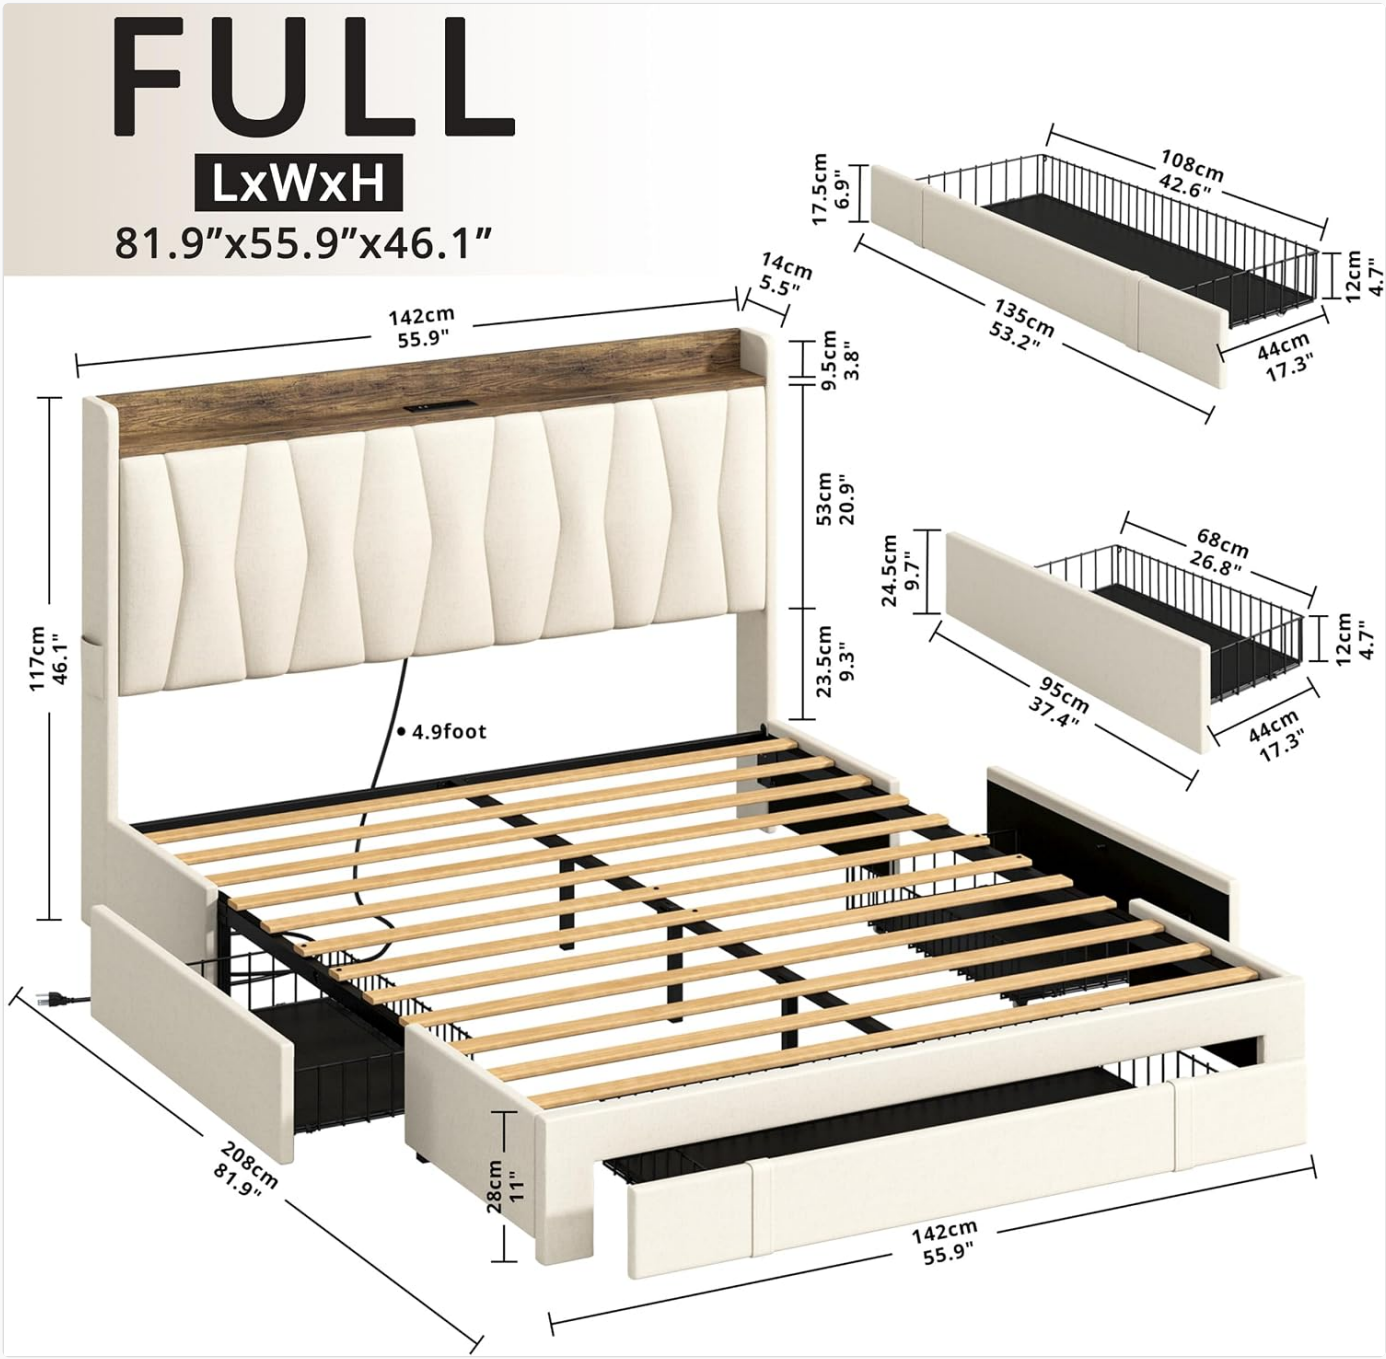


Figure 3.1: Exploded view and dimensions of the bed frame components.

4. Specifications

Feature	Detail
Color	Beige / Rustic Maple
Recommended Mattress Thickness	8" - 12"
Materials	Metal, Fabric, Wood
Box Spring Needed	No
Size	Full

Product Dimensions (L x W x H)	82"L x 56"W x 46.1"H
Weight Capacity (Bed Frame)	900 lbs
Weight Capacity (Drawers)	50 lbs per drawer
Special Features	Storage Drawers, Storage Headboard, Integrated Power Outlet & USB Ports



Figure 4.1: Recommended mattress thickness and headboard dimensions.

5. Setup and Assembly

The ANCTOR bed frame is designed for easy assembly by one person. An installation manual (PDF) is available for detailed step-by-step instructions. Please refer to the included printed manual or the online PDF for visual guides.
Key Assembly Features:

- **Quick Installation:** The hook and loop fastener design of the bed slats simplifies the installation process.
- **Noise-Free Design:** An EVA silent strip is integrated between the bed frame and the iron frame to reduce frictional noise.
- **Sturdy Construction:** Features a solid metal frame, central cross design, twelve thickened wooden slats, and a heavy-duty steel support bar under the headboard for enhanced stability.

General Assembly Steps (Refer to the detailed manual for specifics):

1. Unpack all components and verify against the parts list.
2. Assemble the main bed frame structure using the provided hardware.

3. Attach the upholstered headboard to the frame.
4. Install the wooden slats onto the frame, utilizing the hook and loop fasteners.
5. Insert the three storage drawers into their designated positions under the bed.
6. Connect the charging station power cord to a wall outlet.

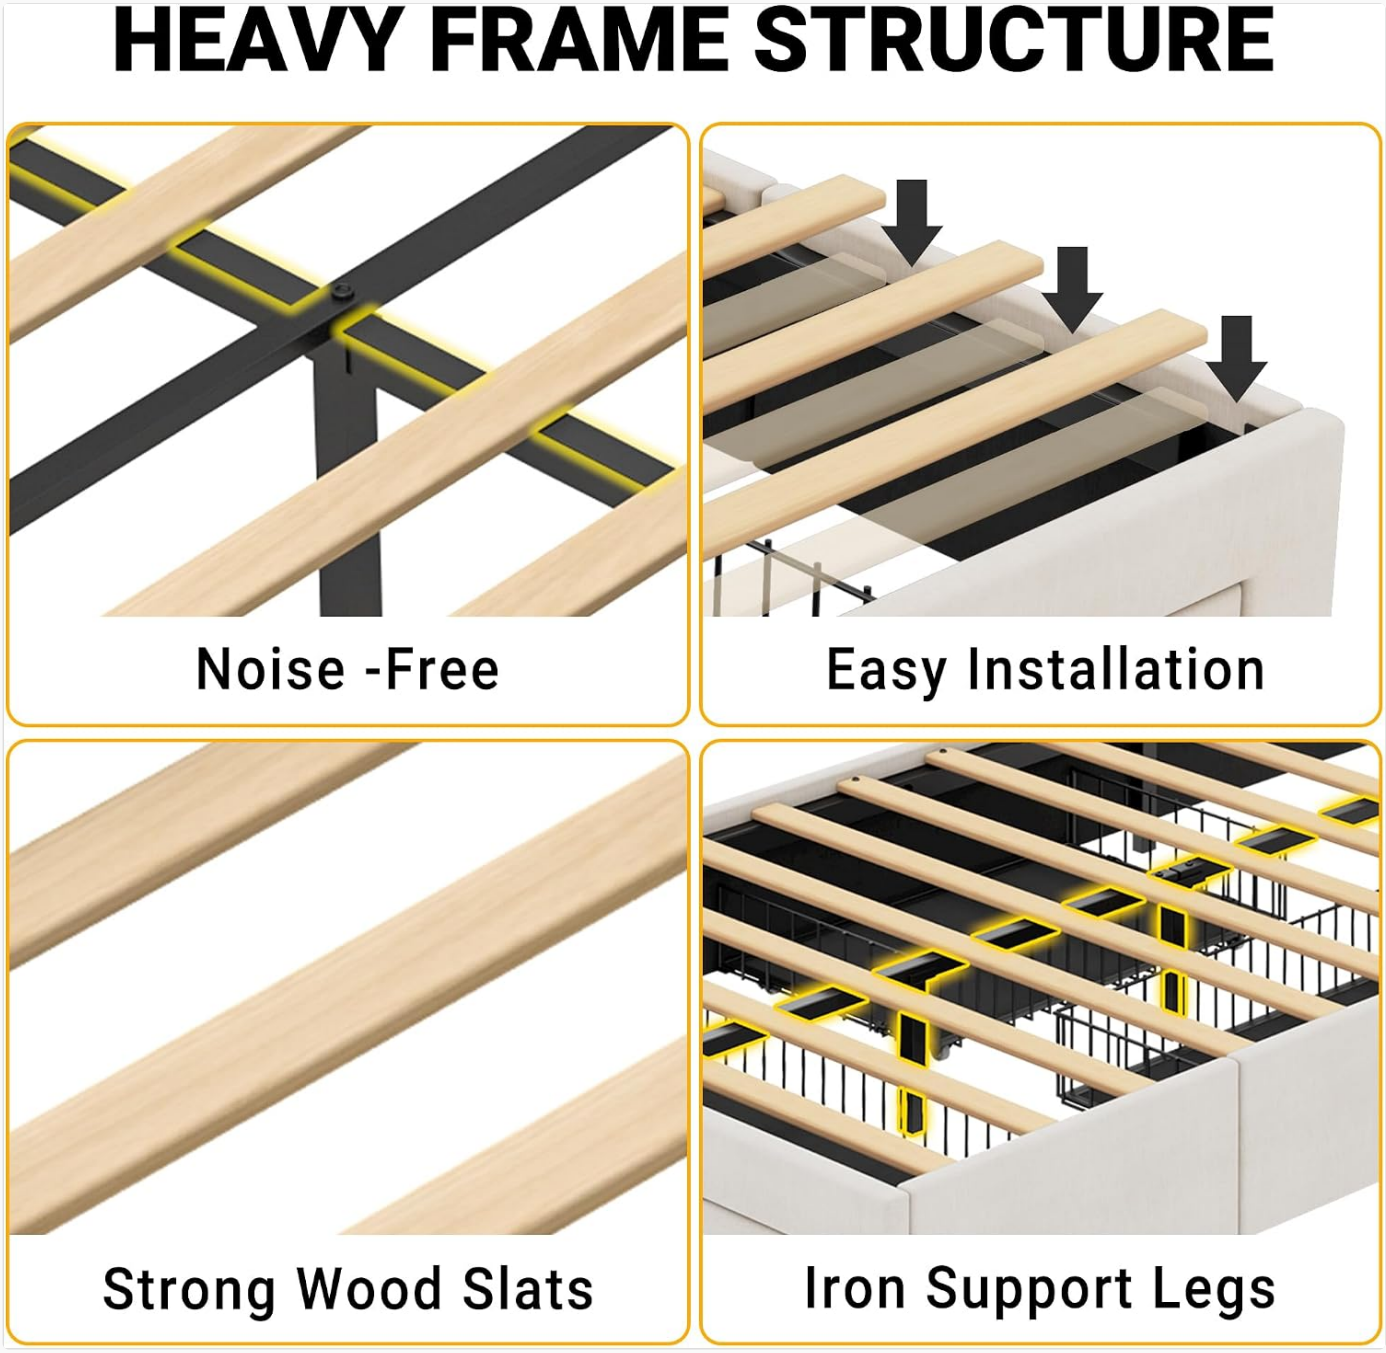


Figure 5.1: Details of the bed frame's robust construction and assembly features.

6. Operating Instructions

6.1. Storage Headboard with Charging Station

The integrated headboard provides a convenient shelf for items such as glasses, books, or decorative pieces. It also includes a charging station for your electronic devices.

- **Power Outlets:** The headboard features 110V/12A AC outlets for powering larger devices.
- **USB Ports:** Two 5V/2A USB ports are available for charging smartphones, tablets, and other USB-powered devices.

- **Power Cord:** A 6.5-foot power cord is provided to connect the charging station to a wall outlet.

Important: Ensure the charging station is properly plugged into a functional wall outlet before use. Unplug when not in use.



Figure 6.1: Detail of the headboard's charging station and storage shelf.

6.2. Space-Saving Drawers

The bed frame includes three steel drawers located under the bed for additional storage. These drawers are designed for easy access and secure placement.

- **Rolling Wheels:** Each drawer is equipped with rolling wheels for smooth and easy pushing in and pulling out.
- **Lock Design:** A special lock design ensures the drawers remain securely in place when not in use, preventing them from rolling out unintentionally.
- **Side Pockets:** The upholstered headboard also features small pockets on both sides for convenient storage of small items like remote controls or phones.



Figure 6.2: Under-bed storage drawers with rolling wheels and snap-in feature.

7. Maintenance

Regular maintenance will help prolong the life and appearance of your ANCTOR bed frame.

- **Cleaning the Frame:** Wipe the metal and wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning Upholstery:** For the upholstered headboard, spot clean with a mild fabric cleaner as needed. Test on an inconspicuous area first.
- **Drawer Maintenance:** Periodically check the drawer wheels for any debris and clean if necessary to ensure smooth operation.
- **Hardware Check:** Every 3-6 months, inspect all bolts and screws to ensure they are tight. Re-tighten any loose hardware to maintain stability.
- **Charging Station:** Keep the charging station free of dust and debris. Ensure no liquids come into contact with the outlets or USB ports.

8. Troubleshooting

If you encounter any issues with your ANCTOR bed frame, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose hardware.	Check and tighten all bolts and screws. Ensure all components are correctly assembled according to the manual.
Squeaking noises from the bed.	Loose connections, friction between parts, or slats not properly seated.	Re-tighten all hardware. Ensure slats are correctly positioned and the EVA silent strip is intact. Apply a small amount of lubricant to metal-on-metal contact points if necessary.
Drawers do not slide smoothly.	Debris in wheels, misaligned drawers, or overloaded.	Clean any debris from the drawer wheels. Ensure drawers are correctly aligned in their tracks. Do not exceed the 50 lbs weight capacity per drawer.
Charging station not working.	Not plugged in, power outage, or faulty connection.	Ensure the power cord is securely plugged into a working wall outlet. Check the wall outlet with another device. If the issue persists, contact customer support.

9. Warranty and Support

ANCTOR is committed to providing high-quality products. If you have any questions about the quality of the product or the installation process, please do not hesitate to contact us.

- **Customer Service:** Our customer service team aims to provide a solution within twenty-four hours for any product-related inquiries.
- **Online Resources:** For additional support or to download the latest version of the installation manual, please visit the ANCTOR store on Amazon or refer to the provided PDF link: Installation Manual (PDF).

© 2023 ANCTOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question