Schneider SCCH603TSE1

SCHNEIDER Vitroceramic Hob SCCH603TSE1 User Manual

Model: SCCH603TSE1

1. Introduction

Thank you for choosing the SCHNEIDER SCCH603TSE1 Vitroceramic Hob. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new appliance. Please read these instructions carefully before use and keep them for future reference.



Figure 1.1: The SCHNEIDER SCCH603TSE1 Vitroceramic Hob seamlessly integrated into a kitchen countertop.

2. Safety Information

Your safety and the safety of others are paramount. Please observe the following safety precautions:

- This appliance is intended for domestic use only.
- Ensure the appliance is properly installed by a qualified technician before use.
- Do not touch hot surfaces. Always use oven mitts or pot holders.
- Supervise children closely when the hob is in use or cooling down. This appliance includes a **Child Lock** feature to prevent accidental operation.
- The hob features an **Automatic Shut-off** system for enhanced safety.
- A **Residual Heat Indicator** will illuminate to warn you when a cooking zone is still hot after use.
- Do not store flammable materials on or near the hob.
- Disconnect the appliance from the power supply before cleaning or maintenance.

3. Product Description and Features

The SCHNEIDER SCCH603TSE1 is a 60 cm vitroceramic hob designed for efficient and versatile cooking. It features three high-power cooking zones controlled by an intuitive Touch Control panel.



Figure 3.1: Illuminated cooking zones and touch controls of the SCCH603TSE1 hob.

3.1 Key Features:

- **Total Power:** 5700W
- **Cooking Zones:** 3 zones for diverse cooking needs.
- **Control Type:** Touch Control for easy and precise adjustments.
- **Power Levels:** 9 adjustable power positions per zone.
- **Timer:** Up to 99 minutes, independently settable for each zone.
- **Safety Features:** Child Lock, Automatic Shut-off, Residual Heat Indicator.

3.2 Cooking Zone Details:

- **Right Triple Circuit Zone:** Power: 1050W / 1950W / 2700W. Diameter: 15 cm / 22.5 cm / 29.5 cm. This versatile zone

adapts to various pot sizes.

- **Left High Zone:** Power: 1200W. Diameter: 16.5 cm.
- **Left Low Zone:** Power: 1800W. Diameter: 20 cm.



Figure 3.2: The sleek black surface of the SCCH603TSE1 hob.


4. Installation

Installation of this appliance should only be performed by a qualified electrician or authorized service technician, in accordance with local regulations and safety standards.

4.1 Countertop Cut-out Dimensions:

Ensure the countertop opening meets the following specifications:

- **Cut-out Length (A):** 560 mm
- **Cut-out Width (B):** 490 mm
- **Minimum distance from edge (X):** 50 mm
- **Minimum seal thickness (F):** 3 mm

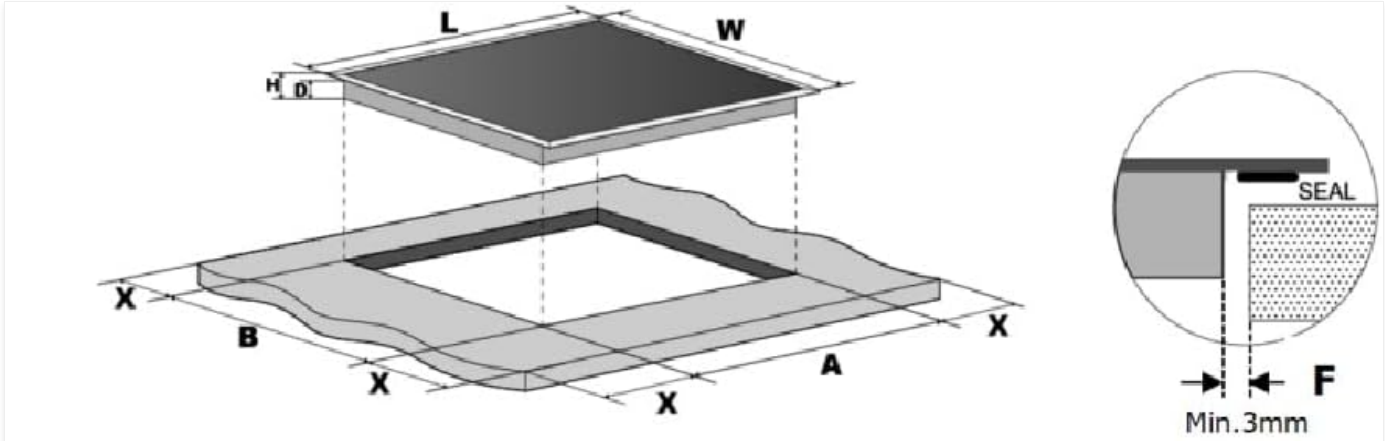

L (mm) L	An (mm) W	Al (mm) H	Pr (mm) D	A (mm)	B (mm)	X (mm)	F (mm)
590	520	52	48	560	490	50 mín.	3 mín.

Figure 4.1: Detailed diagram for countertop cut-out dimensions. Refer to the table for specific measurements in millimeters.

4.2 Electrical Connection:

The appliance requires a dedicated electrical circuit. Consult the wiring diagram provided with the product and ensure all connections comply with local electrical codes.

5. Operating Instructions

The hob is operated using the touch-sensitive controls located on the front panel.

5.1 Power On/Off:

- To turn on: Press the **Power** button (***symbol: circle with vertical line***).
- To turn off: Press the **Power** button again.

5.2 Selecting a Cooking Zone and Adjusting Power:

- After turning on the hob, select the desired cooking zone by pressing its corresponding zone selection button (***symbol: circle with a dot inside***).
- Use the **'+'** and **'-'** buttons to adjust the power level from 1 (low) to 9 (high).
- For the Right Triple Circuit Zone, repeatedly press the zone selection button to cycle through the different heating ring sizes (small, medium, large) before adjusting power.

5.3 Using the Timer:

- Select the cooking zone for which you want to set the timer.
- Press the **Timer** button (***symbol: clock***).
- Use the **'+'** and **'-'** buttons to set the desired cooking time (up to 99 minutes). The hob will automatically switch off the selected zone when the time expires.

5.4 Child Lock:

- To activate: With the hob off, press and hold the **Lock** button (***symbol: key***) for a few seconds until an indicator light appears. This prevents accidental activation.

- To deactivate: Press and hold the **Lock** button again until the indicator light turns off.

5.5 Residual Heat Indicator:

After a cooking zone is turned off, the letter 'H' will appear on the display if the surface is still hot. Do not touch the surface while 'H' is displayed.

6. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your hob.

- Always ensure the hob is cool and disconnected from the power supply before cleaning.
- Wipe the ceramic surface with a soft cloth and a mild detergent after each use.
- For stubborn stains, use a specialized ceramic hob cleaner and a scraper designed for glass-ceramic surfaces.
- Avoid abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the surface.
- Clean the control panel gently with a damp cloth. Ensure no moisture enters the control area.

7. Troubleshooting

If you encounter any issues with your hob, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child Lock activated.	Check power connection; Deactivate Child Lock.
Controls are unresponsive.	Control panel is wet; Child Lock activated.	Dry the control panel thoroughly; Deactivate Child Lock.
Cooking zone not heating.	Incorrect power level selected; Faulty connection.	Increase power level; Contact a qualified technician.
'H' indicator remains on.	Residual heat.	This is normal. Wait for the zone to cool down.

If the problem persists after attempting these solutions, please contact customer support or a qualified service technician.

8. Technical Specifications

Feature	Specification
Brand	Schneider
Model Number	SCCH603TSE1
Type	Vitroceramic Hob
Total Power	5700 W
Number of Cooking Zones	3
Control Type	Touch Control

Feature	Specification
Power Positions	9
Timer	Up to 99 minutes
Product Dimensions (L x W x H)	52 cm x 59 cm x 5.2 cm
Integrated Dimensions (L x W)	49 cm x 56 cm
Net Weight	8.8 kg
Color	Black
Material	Ceramic

9. Warranty and Support

Your SCHNEIDER SCCH603TSE1 Vitroceramic Hob comes with a manufacturer's warranty. Please refer to the warranty card included in the packaging for specific terms and conditions.
For technical assistance, spare parts, or service inquiries, please contact Schneider customer support through their official website or the contact information provided with your purchase documentation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question