Acctim Otto

Harley Superbrite® Modern Digital Alarm Clock User Manual

Model: Otto | Brand: Acctim

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Acctim Harley Superbrite® Modern Digital Alarm Clock. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

The Harley alarm clock features a large digit LCD display with Acctim's Superbrite white backlight, a multi-function display including alarm, calendar, and indoor temperature, and a snooze function.



Figure 1.1: Front view of the Acctim Harley Superbrite Digital Alarm Clock with its crisp white backlight activated.

2. Product Features

- Acctim's Superbrite Crisp White Backlight for clear visibility.
- Calendar & Day Displayed for easy date reference.
- Temperature Display in Either Celsius (°C) or Fahrenheit (°F).
- 12 or 24 Hour Format selection.
- Snooze Alarm function for additional rest.

3. Package Contents

Upon unpacking, please ensure all items are present and in good condition:

- 1 x Acctim Harley Superbrite® Modern Digital Alarm Clock (Model: Otto)

Note: 2 AA batteries are required for operation and are not included in the package.

4. Setup

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Slide the cover downwards or lift it to open the compartment.
3. Insert 2 new AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

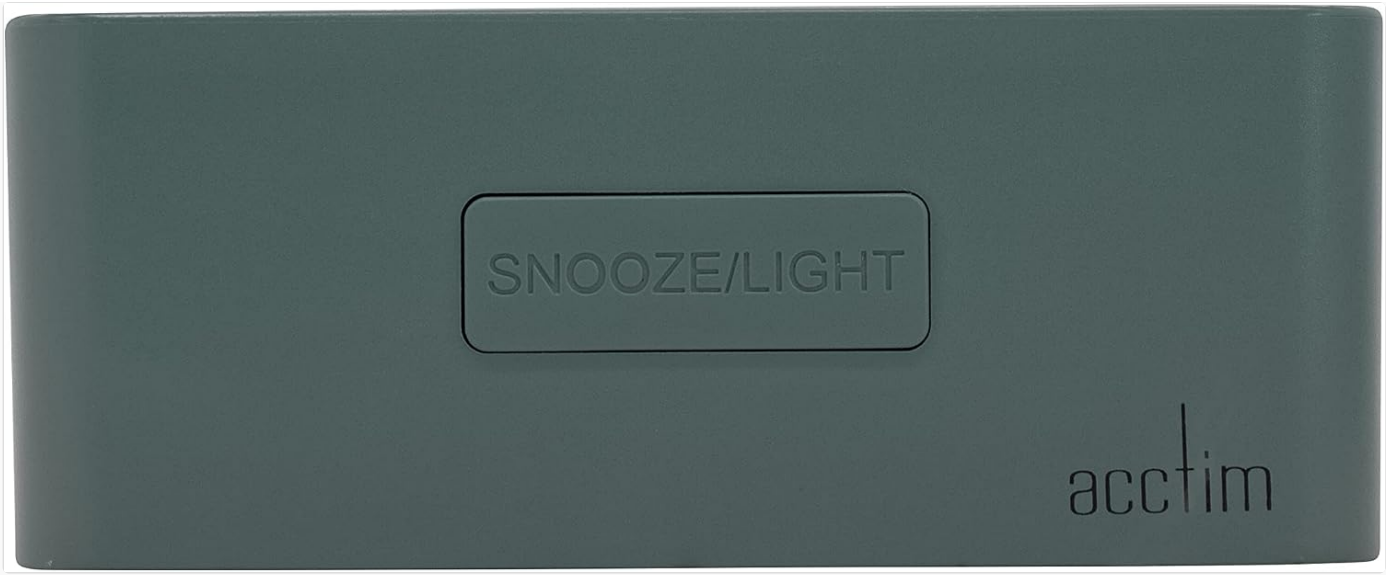


Figure 4.1: Rear view of the alarm clock, highlighting the battery compartment and control buttons (SET, ALARM, WAVE, DOWN, UP).

4.2 Initial Power On

Once batteries are correctly installed, the clock display will activate. It may show a default time or a flashing display, indicating it is ready for time and date setting.

5. Operating Instructions

The clock features several control buttons on the back:**SET**, **ALARM**, **WAVE**, **DOWN**, and **UP**. The **SNOOZE/LIGHT** button is located on the top.



Figure 5.1: Top view of the alarm clock, showing the prominent SNOOZE/LIGHT button.

5.1 Setting Time and Date

1. Press and hold the **SET** button for approximately 3 seconds until the display starts flashing. This indicates you are in time/date setting mode.

2. Use the **UP** or **DOWN** buttons to adjust the flashing value (e.g., hour).
3. Press the **SET** button again to confirm the current setting and move to the next adjustable item (e.g., minute, year, month, day, 12/24 hour format, temperature unit).
4. Repeat steps 2 and 3 until all desired settings are configured.
5. After setting the last item, press **SET** one more time to exit the setting mode. The display will stop flashing.

5.2 Setting the Alarm

1. Press and hold the **ALARM** button for approximately 3 seconds until the alarm time display starts flashing.
2. Use the **UP** or **DOWN** buttons to adjust the alarm hour.
3. Press the **ALARM** button again to confirm the hour and move to the alarm minute setting.
4. Use the **UP** or **DOWN** buttons to adjust the alarm minute.
5. Press the **ALARM** button one more time to exit alarm setting mode.

5.3 Activating/Deactivating the Alarm

Briefly press the **ALARM** button (do not hold) to toggle the alarm on or off. An alarm icon (e.g., a bell symbol) will appear on the display when the alarm is active.

5.4 Snooze Function and Backlight

When the alarm sounds, press the large **SNOOZE/LIGHT** button on the top of the clock. This will temporarily silence the alarm for a few minutes (typically 5-9 minutes, depending on the model) and activate the backlight. The alarm will sound again after the snooze period. To turn off the alarm completely, press any other button on the back of the clock.
To activate the Superbrite backlight at any time, briefly press the **SNOOZE/LIGHT** button. The backlight will illuminate for a few seconds and then turn off automatically.

5.5 Temperature Display

The clock displays the indoor temperature. To switch between Celsius (°C) and Fahrenheit (°F), enter the time/date setting mode (Section 5.1) and cycle through the settings until the temperature unit flashes. Use the **UP** or **DOWN** button to select your preferred unit.

6. Maintenance

6.1 Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the display or casing.

6.2 Battery Replacement

When the display becomes dim or the clock functions erratically, it is time to replace the batteries. Follow the battery installation steps outlined in Section 4.1. Always replace both AA batteries at the same time with new ones.

7. Troubleshooting

- **Display is blank or dim:** Ensure batteries are correctly installed with proper polarity. Replace with fresh AA batteries if necessary.
- **Alarm does not sound:** Check if the alarm is activated (alarm icon visible on display). Ensure the alarm time is set correctly.
- **Incorrect time/date:** Re-enter the time and date setting mode (Section 5.1) and adjust the values.

- **Backlight not working:** Ensure batteries have sufficient power. If the issue persists after battery replacement, contact customer support.

8. Specifications

Feature	Detail
Brand	Acctim
Model Number	Otto
Color	Storm Blue
Display Type	Digital LCD
Style	Modern
Special Features	Calendar Display, Illuminated (Superbrite Backlight), Snooze, Temperature Display
Power Source	Battery Powered
Batteries Required	2 x AA (not included)
Mounting Type	Tabletop
Product Dimensions	4.13 x 1.5 x 2.76 inches
ASIN	B0BYK9XQNK

9. Warranty and Support

Acctim products are manufactured to high-quality standards. For information regarding warranty coverage or technical support, please refer to the warranty card included with your purchase or visit the official Acctim website. Keep your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question