Aquasonic Kids-Flosser

AquaSonic Kids' Water Flosser Instruction Manual

Aquarium Adventures Theme (Blue) - Model: Kids-Flosser

Introduction

The AquaSonic Kids' Water Flosser is designed to make oral hygiene fun and effective for children aged 6 and up. This oral irrigator features a comfortable rubber grip, simple one-button operation, and comes with a waterproof sticker sheet for personalization. With four flossing modes and two interchangeable nozzles, it effectively removes food particles and plaque, promoting healthy teeth and gums for growing smiles.

Safety Information

Adult supervision recommended. Keep out of reach of children when not in use. Ensure proper handling to avoid water and electricity hazards. Store in a safe place to prevent damage.

What's Included

- 1 AquaSonic Kids' Water Flosser unit
- 1 Standard Nozzle
- 1 Orthodontic Nozzle
- 1 Charge Cord
- 1 Waterproof Sticker Sheet



Image: The AquaSonic Kids' Water Flosser packaging, displaying the flosser unit, two types of nozzles, a charging cable, and a sheet of waterproof stickers for customization.

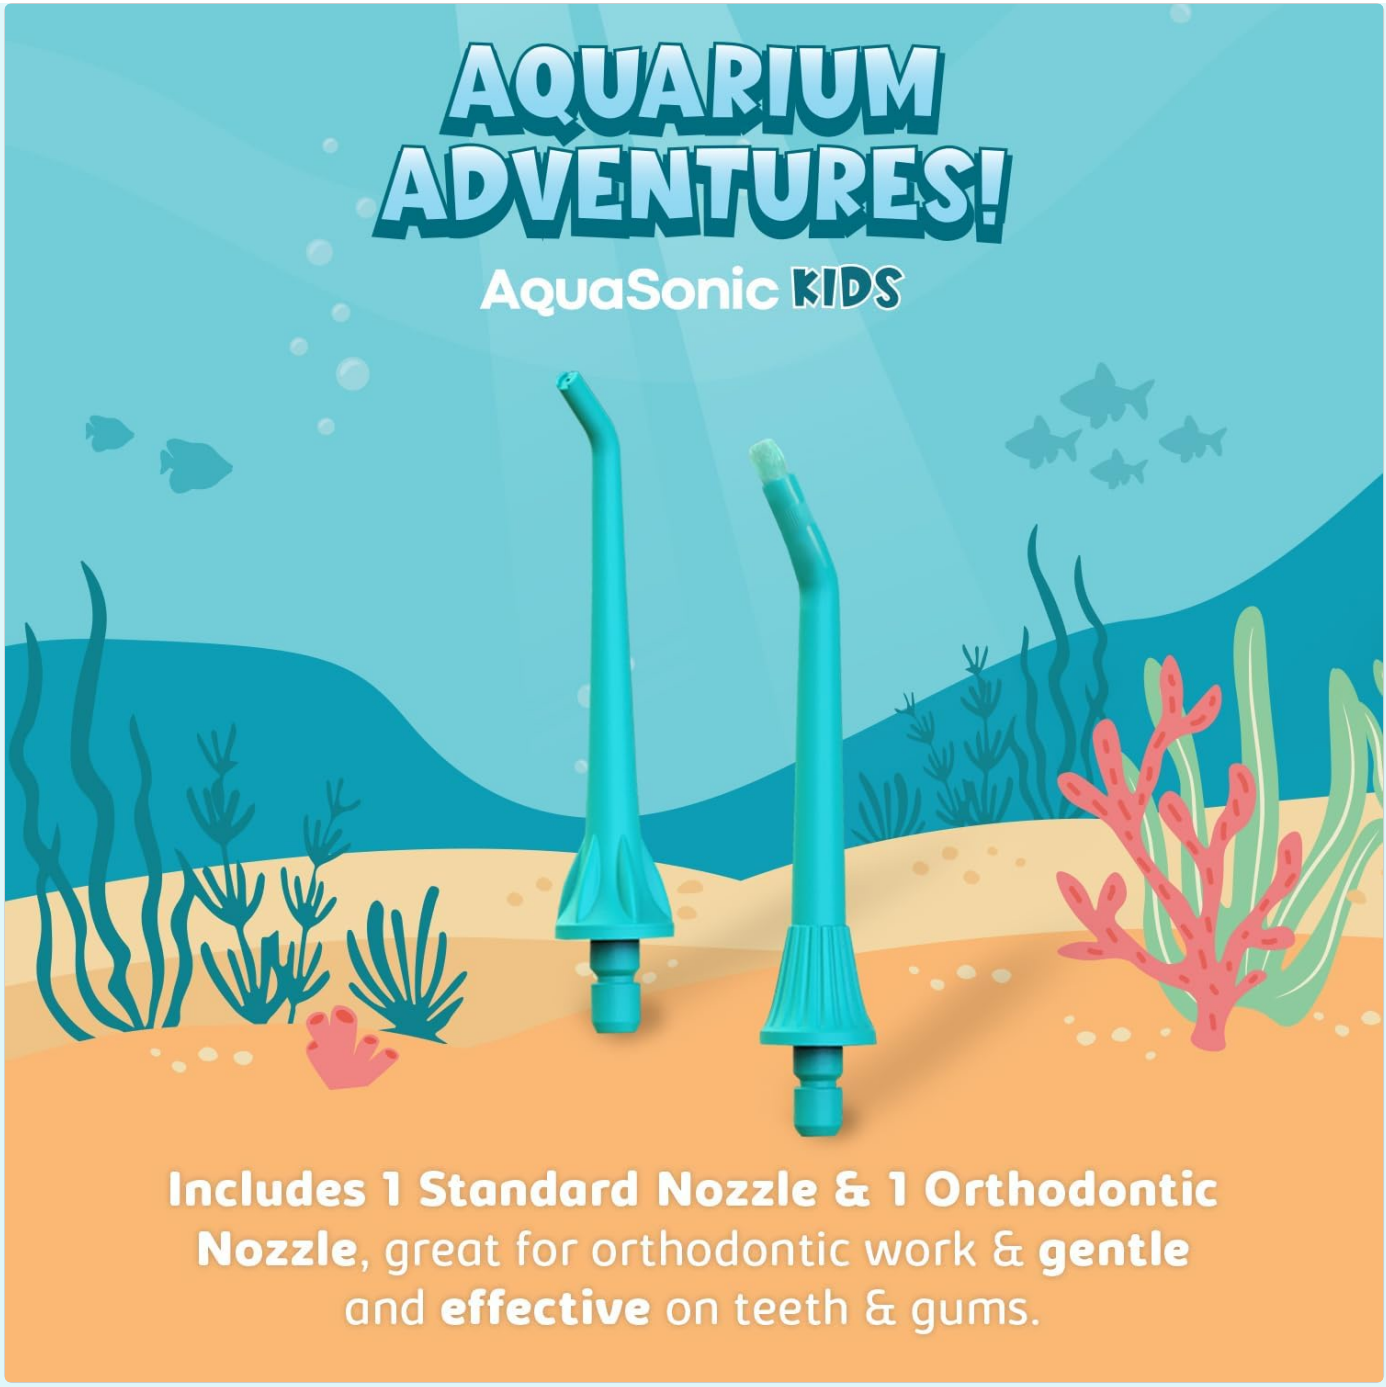


Image: A close-up view of the two interchangeable nozzles included: one standard nozzle and one orthodontic nozzle, designed for effective cleaning around teeth, gums, and braces.



Image: A sheet of waterproof stickers featuring four adorable marine characters: Rocco the Starfish, Ziggy the Seahorse, Ruby the Dolphin, and Leo the Shark, for personalizing the flosser.

Setup

1. **Charge the Water Flosser:** Before first use, fully charge the device using the provided charge cord. The charging port is typically located at the back of the unit.
2. **Attach a Nozzle:** Select either the standard or orthodontic nozzle. Insert the chosen nozzle firmly into the opening at the top of the flosser until it clicks into place.
3. **Fill the Water Tank:** Open the water tank cap located at the bottom of the unit. Fill the tank with lukewarm water. Close the cap securely to prevent leaks.

Operating Instructions

1. **Power On/Off:** Hold down the "On/Off & Mode" button for 5 seconds to turn the device on. To turn it off, press and hold the same button again.
2. **Select Flossing Mode:** Once powered on, briefly press the "On/Off & Mode" button to cycle through the four available modes:
    - **Low:** Gentle pressure for sensitive gums or beginners.
    - **Medium:** Standard pressure for daily cleaning.
    - **High:** Strong pressure for deeper cleaning.
    - **Massage:** Pulsating stream for gum stimulation.

    Wait for the blinking light next to your desired mode to stop, indicating it's ready.
3. **Begin Flossing:** With the flosser in an upright position, place the nozzle tip into your mouth, keeping your mouth slightly open over the sink to allow water to drain.
4. **Flossing Technique:** At a 90-degree angle, slowly move the stream across your teeth, along the gumline, and between teeth. Ensure the water stream reaches all areas.
5. **Finish:** When done, press the "On/Off & Mode" button to turn off the device.

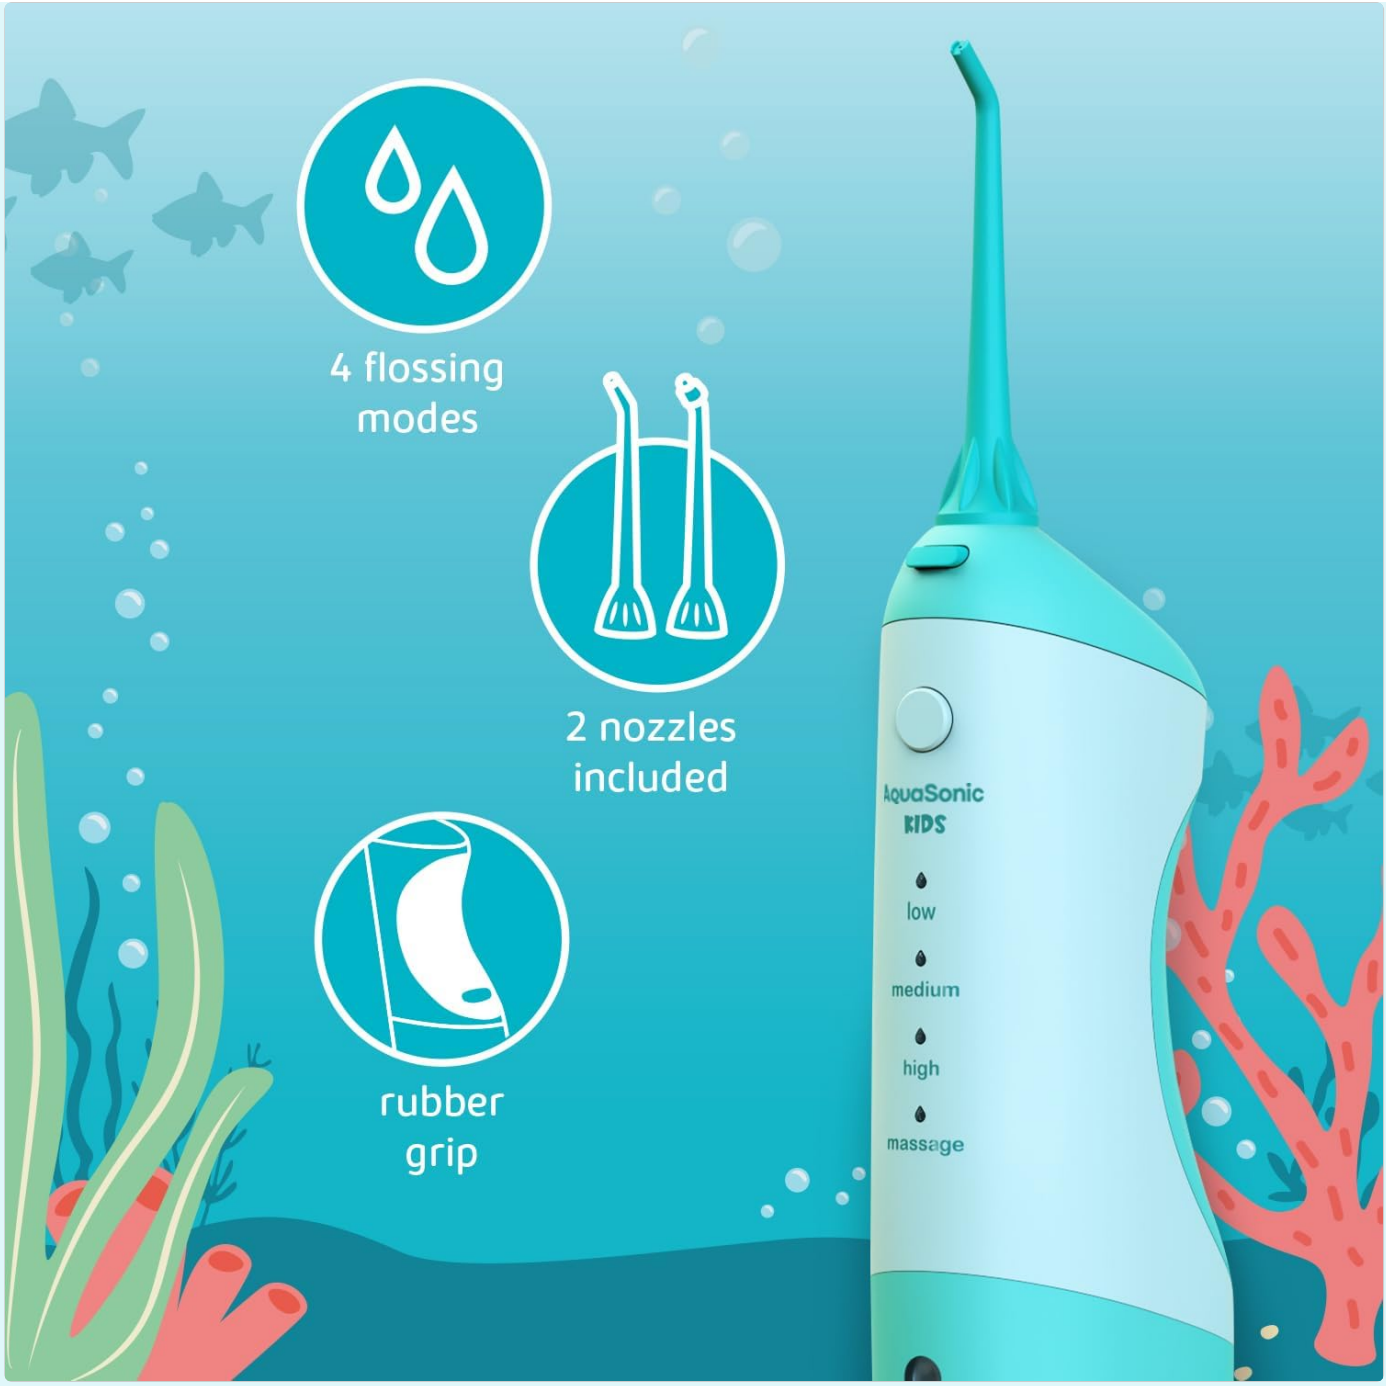


Image: The AquaSonic Kids' Water Flosser highlighting its four distinct flossing modes: Low, Medium, High, and Massage, catering to different cleaning needs and sensitivities.

Maintenance

Cleaning the Unit:

- After each use, empty any remaining water from the tank.
- Rinse the water tank thoroughly with clean water.
- Wipe the exterior of the flosser with a soft, damp cloth.
- Allow the unit and nozzles to air dry completely before storing.

Nozzle Care:

- Remove the nozzle from the unit.

- Rinse the nozzle under running water to remove any debris.
- For deeper cleaning, nozzles can be soaked in a solution of 2 parts water to 1 part white vinegar for 15-30 minutes, then rinsed thoroughly.

Storage:

Store the water flosser in a clean, dry place away from direct sunlight and extreme temperatures. Ensure it is fully dry before storage to prevent mold or mildew buildup.

Troubleshooting

- **Device not turning on:** Ensure the unit is fully charged. If the battery is low, connect it to the charger.
- **Weak water stream:** Check if the water tank is sufficiently filled. Ensure the nozzle is securely attached and not clogged.
- **Water leaking:** Verify that the water tank cap is closed tightly and the nozzle is properly inserted.
- **Unusual noise:** If the device makes unusual noises, turn it off immediately and contact customer support.

Specifications

Feature	Detail
Model Number	Kids-Flosser
Brand	Aquasonic
Power Source	Battery Powered
Special Feature	Multiple pressure settings, lightweight
Product Benefits	Removes Plaque
Unit Count	1.00 Count
Package Dimensions	9.33 x 5.43 x 2.44 inches
Item Weight	12.63 ounces

Warranty and Support

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Aquasonic website. Contact customer service for any questions or assistance with your AquaSonic Kids' Water Flosser.

© 2025 Aquasonic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question