Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Gurexl 93003-27

Gurexl 360° LED Nightstand with Wireless Charging Station and Laptop Tray

Model: 93003-27

Introduction

Thank you for choosing the Gurexl 360° LED Nightstand. This versatile furniture piece is designed to enhance your living space with its adjustable laptop tray, integrated charging solutions, and ambient LED lighting. Please read this manual thoroughly before assembly and operation to ensure safe and efficient use.

Product Features

- **Height Adjustable & Rotating Laptop Tray:** The laptop tray offers 360° rotation and adjustable height to accommodate various user preferences and settings.
- **270° Desktop Flip:** The laptop desktop can be flipped up to 270° for ergonomic comfort while working or relaxing.
- **Sturdy Rolling Workstation:** Constructed from thickened MDF board for stability, equipped with 5 lockable wheels for easy movement and secure positioning.
- **Dimmable LED Light & Adjustable Brightness:** Features 24 color dimmable LED lights to create a customizable ambiance. Brightness is also adjustable.
- **3-In-1 Charging Station:** Includes 1 Wireless Charging Station, 1 USB Port, and 1 Type-C Port for convenient device charging.
- **Human Body Sensing Function:** The LED light automatically turns on when a person approaches the nightstand within 1-2 meters.
- **Ample Storage Space:** Provides 2 drawers and 3 large open compartments for organizing books, laptops, and other items.
- **Upgraded Anti-Slip Strip:** The laptop tray includes anti-slip strips to prevent items from sliding off.

Setup and Assembly

Assembly of the Gurexl LED Nightstand is required. Please follow the included instruction manual carefully. Tools recommended for assembly include a screwdriver. It is advisable to have two people for assembly to ensure stability and ease of handling.

- **Important Assembly Tip:** Ensure the support floor mount (panel H) is facing outward during assembly. Incorrect orientation will affect the attachment of the computer swing-out arm and may require partial disassembly to correct.

- **Fasteners:** Use a drill to run in screws, but **do not use a drill to snug them**. Hand-tighten all fasteners to prevent overtightening and damage to the material.
- **Drawer Installation:** When attaching drawers, ensure the sliding drawer bracket's end piece is flattened to allow the drawers to close completely and sit flush. Pull sliders out before inserting drawers.



Image: Overview of product dimensions and key features including lockable wheels, LED lights, and 2-in-1 charging.

Operating Instructions

Laptop Tray Adjustment

The laptop tray offers multiple adjustment options for optimal comfort and functionality.

- **Height Adjustment:** Loosen the knob on the vertical support pole to adjust the tray to your desired height. Tighten the knob securely to lock the height.
- **360° Horizontal Rotation:** The entire laptop tray arm can rotate 360° around its base, allowing you to position it conveniently.

- **270° Desktop Flip:** The desktop surface can be tilted up to 270° to achieve an ergonomic angle for typing or viewing. Ensure the anti-slip strips are utilized to secure your laptop or tablet.

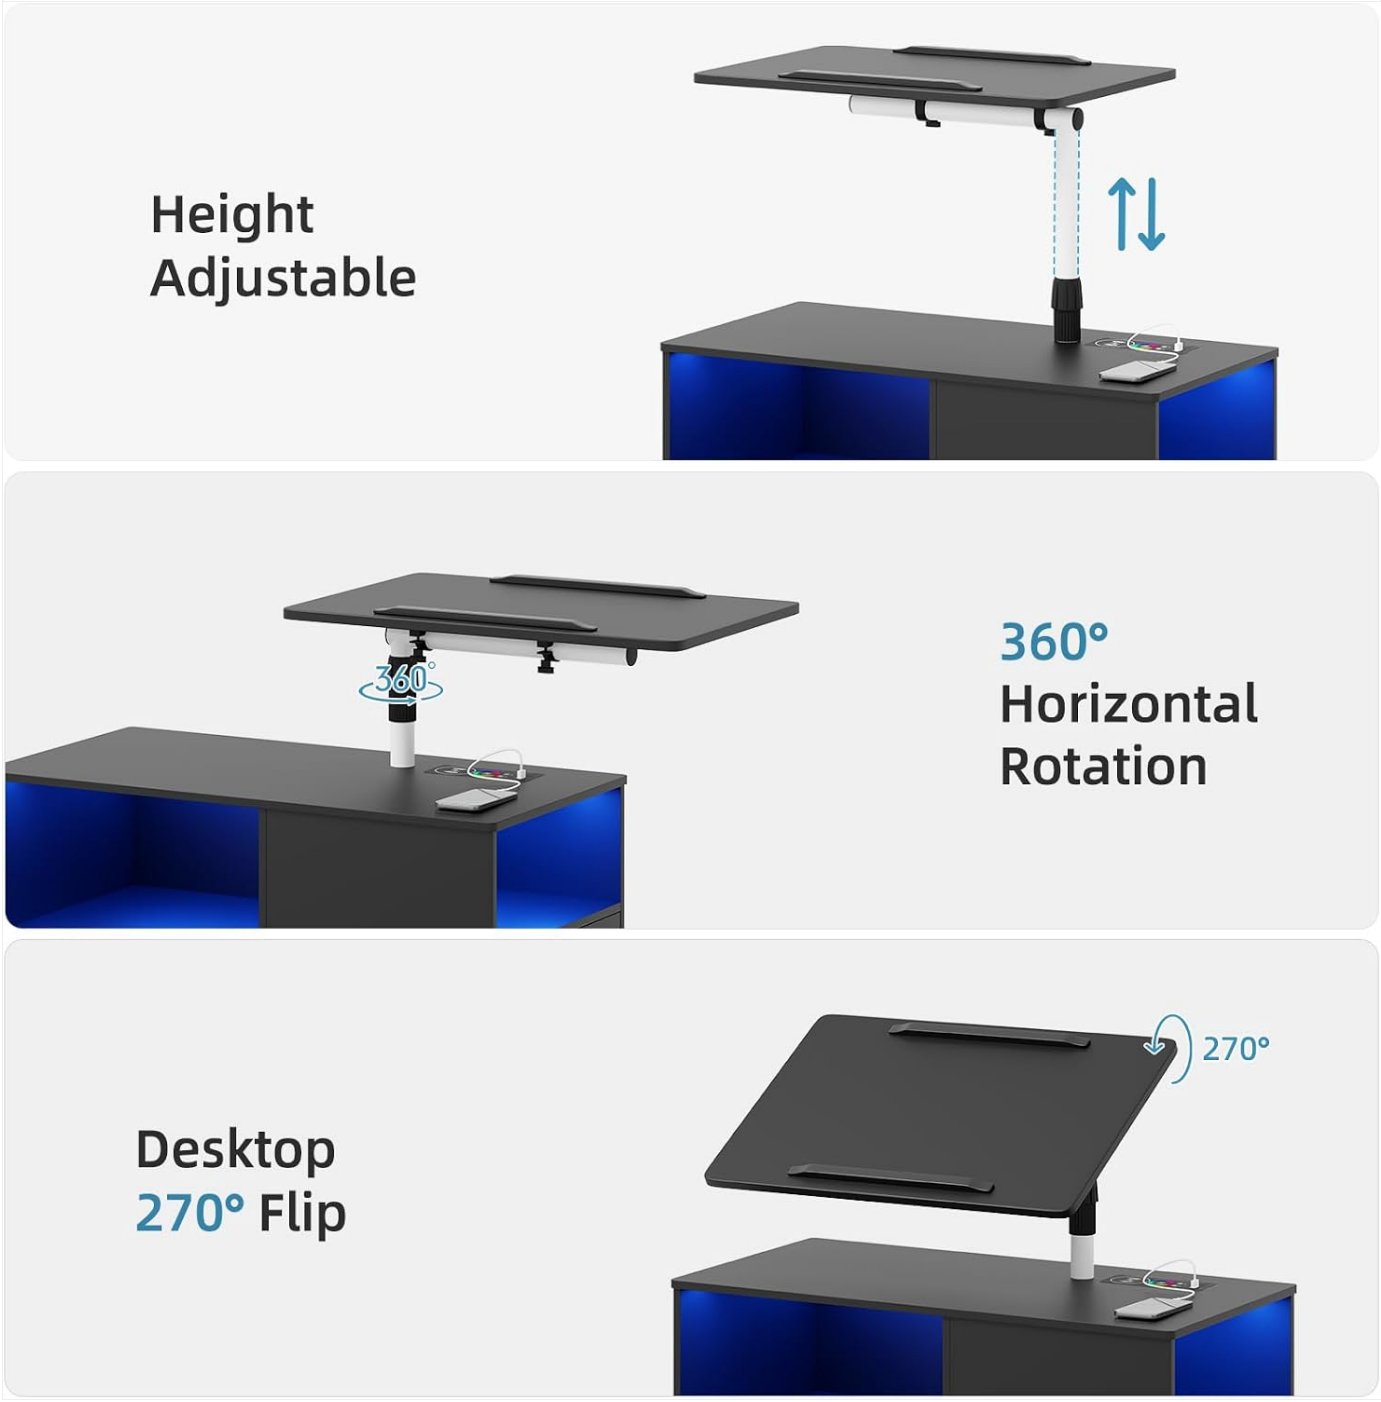


Image: Visual guide for adjusting the laptop tray's height, rotation, and tilt.

Your browser does not support the video tag.

Video: Demonstrates how to adjust the height and angles of the laptop tray.

LED Lighting

The nightstand features integrated LED lighting with multiple color and brightness options.

- **Color Selection:** Use the control panel on the tabletop to cycle through 24 dimmable colors.
- **Brightness Adjustment:** Long-press the brightness control on the panel to adjust the intensity of the LED lights.
- **Motion Sensor:** The built-in human body sensor will automatically activate the LED lights when movement is detected within 1-2 meters.



Image: The nightstand showcasing its 24-color switchable RGB lighting and adjustable brightness.

Your browser does not support the video tag.

Video: Demonstrates the auto sensor LED nightstand features, including color changes and motion detection.

Charging Station

The nightstand is equipped with a 3-in-1 charging station for your electronic devices.

- **Wireless Charging:** Place your compatible device on the designated wireless charging pad on the tabletop. Ensure proper alignment for charging to begin.
- **USB & Type-C Ports:** Use the integrated USB and Type-C ports to charge devices via cable.



Image: Detail of the 3-in-1 charging station, showing wireless, USB, and Type-C charging options.

Your browser does not support the video tag.

Video: Illustrates the three charging methods available on the nightstand.

Lockable Wheels

The nightstand is fitted with 5 lockable wheels for mobility and stability.

- **Moving the Nightstand:** Unlock the wheels by flipping the lever on each wheel upwards.
- **Securing the Nightstand:** Once in the desired position, push the lever on each wheel downwards to lock them, preventing unintended movement.

Maintenance

To ensure the longevity and optimal performance of your Gurexl LED Nightstand, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the nightstand and its components to prevent buildup.

- **Cable Management:** Keep charging cables tidy to prevent tangles and damage.
- **Fastener Check:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary, but do not overtighten.

Troubleshooting

If you encounter any issues with your nightstand, refer to the following troubleshooting tips:

- **LED Lights Not Working:**
  - Ensure the nightstand is properly plugged into a power outlet.
  - Check the connection of the LED light strips.
  - Verify that the control panel is functioning correctly.
- **Wireless Charging Not Functioning:**
  - Confirm your device is wireless charging compatible.
  - Ensure the device is correctly centered on the wireless charging pad.
  - Remove any thick phone cases that might interfere with charging.
  - Check if the nightstand is powered on.
- **Laptop Tray Instability:**
  - Ensure all adjustment knobs for height and tilt are securely tightened.
  - Verify that the nightstand's wheels are locked when stationary.
  - Do not exceed the maximum weight recommendation of 200 pounds on the tabletop.
- **Drawers Not Closing Flush:**
  - Recheck the installation of the drawer slides. Ensure the end piece of the slider is not obstructing closure.
  - Confirm that nothing is blocking the drawer's path inside the compartment.

Specifications

Brand	Gurexl
Model Name	nightstand93003-27
Model Number	93003-27
Product Dimensions	18"D x 32"W x 20"H (46cm D x 80cm W x 51cm H)
Item Weight	44 Pounds (20 kg)
Maximum Weight Recommendation	200 Pounds (90.7 kg)
Frame Material	Metal
Top Material Type	Engineered Wood
Number of Drawers	2
Number of Shelves	3
Color	Black

Indoor/Outdoor Usage	Indoor
Tools Recommended For Assembly	Screwdriver

Safety Information

Please observe the following safety precautions:

- Assembly may require tools and careful handling to avoid injury.
- Keep fingers away from pinch points, especially around the lockable wheels and adjustable laptop tray mechanisms.
- Do not exceed the maximum weight recommendation of 200 pounds on the tabletop to ensure stability and prevent accidents.
- Ensure the nightstand is placed on a level surface to prevent tipping.
- Keep liquids away from the charging station and electrical components to prevent damage or electrical shock.

Customer Support

For any questions, concerns, or assistance with your Gurexl LED Nightstand, please contact Gurexl customer support. Refer to your purchase documentation for specific contact details or visit the official Gurexl website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BYZ93PGQ

More documents and user manuals: **https://manuals.plus/**