ANGELS HORN HP-H019

ANGELS HORN Bluetooth Vinyl Record Player

Model: HP-H019

User Manual

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your ANGELS HORN Bluetooth Vinyl Record Player, Model HP-H019. Please read this manual thoroughly before using the product to ensure proper function and longevity. This high-fidelity 2-speed turntable features built-in speakers, a phono preamp, and a magnetic AT-3600L cartridge, offering a versatile listening experience for your vinyl collection and Bluetooth audio.

What's in the Box

Carefully unpack all components and ensure the following items are present:

- Turntable Unit
- Power Adaptor
- Turntable Slip Mat
- Aluminum Platter
- Belt
- Counterweight
- Cartridge Alignment Protractor
- Instruction Manual (this document)



Image: The ANGELS HORN Bluetooth Vinyl Record Player HP-H019 with its clear dust cover open, showcasing the platter, tonearm, and control knobs. This image provides an overview of the complete product.

Product Features

- **Bluetooth 5.0 Connectivity:** Seamlessly stream audio from Bluetooth-enabled devices to the turntable's integrated speakers.
- **High-Fidelity All-in-One Sound System:** Equipped with four built-in speakers for clear audio. Supports wireless Bluetooth playback and Aux-in. RCA outputs allow connection to external speakers for amplified sound.
- **Versatile Two-Speed Turntable:** Features a belt-drive system and DC servo motor, supporting 33 1/3 and 45 RPM for 7", 10", and 12" vinyl records.
- **Precision Tracking with Magnetic Cartridge Stylus & Adjustable Counterweight:** Includes an AT-3600L cartridge for accurate groove tracing and high-definition audio. The universal headshell allows for easy stylus replacement. An adjustable counterweight ensures balanced tracking, reducing noise and distortion.
- **Elegant Design with Practical Features:** A sleek aesthetic complements any room. A removable dust cover protects the turntable from debris.



Image: A detailed close-up of the AT-3600L magnetic cartridge and stylus, positioned over a vinyl record. This highlights the precision component responsible for audio playback.



Image: An exploded view diagram illustrating the internal components of the built-in speaker system, including two silk tweeters and two mid-bass speakers, emphasizing the HiFi stereo sound capability.

Setup Guide

1. **Unpacking:** Carefully remove the turntable and all accessories from the packaging. Retain the packaging for future

transport or storage.

2. **Platter and Belt Installation:**
    - Place the aluminum platter onto the spindle.
    - Locate the drive belt. Gently stretch the belt around the inner rim of the platter and hook it onto the motor pulley. Ensure the belt is not twisted.
    - Place the turntable slip mat on top of the platter.
3. **Counterweight Adjustment:**
    - Slide the counterweight onto the rear of the tonearm.
    - With the stylus guard in place, balance the tonearm by rotating the counterweight until the tonearm floats horizontally.
    - Once balanced, hold the counterweight steady and rotate the numbered ring to '0'.
    - Rotate the entire counterweight counter-clockwise to the recommended tracking force (typically 2.5 grams for the AT-3600L cartridge). Refer to the cartridge manufacturer's specifications for precise tracking force.



Image: A close-up view of the turntable's tonearm, showing the adjustable counterweight at the rear. This component is crucial for setting the correct tracking force of the stylus on the record.

4. **Dust Cover Installation:** Insert the hinges of the dust cover into the slots at the rear of the turntable unit.
5. **Power Connection:** Connect the power adaptor to the DC IN 12V port on the rear of the turntable and then plug it into a wall outlet.
6. **Audio Connections (Optional):**
    - **RCA Output:** For connecting to an external amplifier or powered speakers, use RCA cables (not included) to connect the RCA (R&L) Output ports on the turntable to the corresponding input ports on your audio system.
    - **Phono/Line Out Switch:** If connecting to an amplifier with a dedicated PHONO input, set the switch to 'PHONO'. If

connecting to a LINE level input (e.g., AUX, CD), set the switch to 'LINE OUT'.

- **AUX-IN:** To play audio from an external device (e.g., smartphone, MP3 player) through the turntable's built-in speakers, connect a 3.5mm audio cable (not included) from your device's headphone jack to the AUX-IN port on the turntable.



Image: The rear panel of the turntable, clearly showing the DC IN 12V power input, the Phono/Line Out switch, the AUX-IN port, and the RCA (R&L) Output jacks. This illustrates the various connectivity options.

Operating Instructions

1. **Power On/Off and Volume Control:** The power switch is integrated with the volume knob. Rotate the volume knob clockwise to turn on the turntable and increase the volume. Rotate counter-clockwise to decrease volume and turn off.
2. **Playing a Vinyl Record:**
    - Place a vinyl record on the platter.
    - Select the appropriate speed (33 1/3 or 45 RPM) using the speed selector knob.
    - Remove the stylus guard from the cartridge.
    - Gently lift the tonearm using the cueing lever.
    - Position the tonearm over the desired starting groove of the record.
    - Lower the tonearm slowly using the cueing lever. The stylus will make contact with the record, and playback will begin.
    - To stop playback, lift the tonearm using the cueing lever and return it to the tonearm rest.



Image: The ANGELS HORN turntable with a record playing, illustrating the belt-drive mechanism and the two available speeds (33 1/3 and 45 RPM). Insets show different record sizes (7", 10", 12") that the turntable supports.

3. **Bluetooth Connectivity (Input Only):**
    - Turn on the turntable. The Bluetooth indicator light will flash, indicating it is in pairing mode.
    - On your Bluetooth-enabled device (e.g., smartphone, tablet), search for available devices and select "HP-H019".
    - Once connected, the Bluetooth indicator light will remain solid. You can now stream audio from your device through the turntable's built-in speakers.
    - **Note:** This turntable's Bluetooth functionality is for input only; it does not support output to Bluetooth headphones or external Bluetooth speakers.

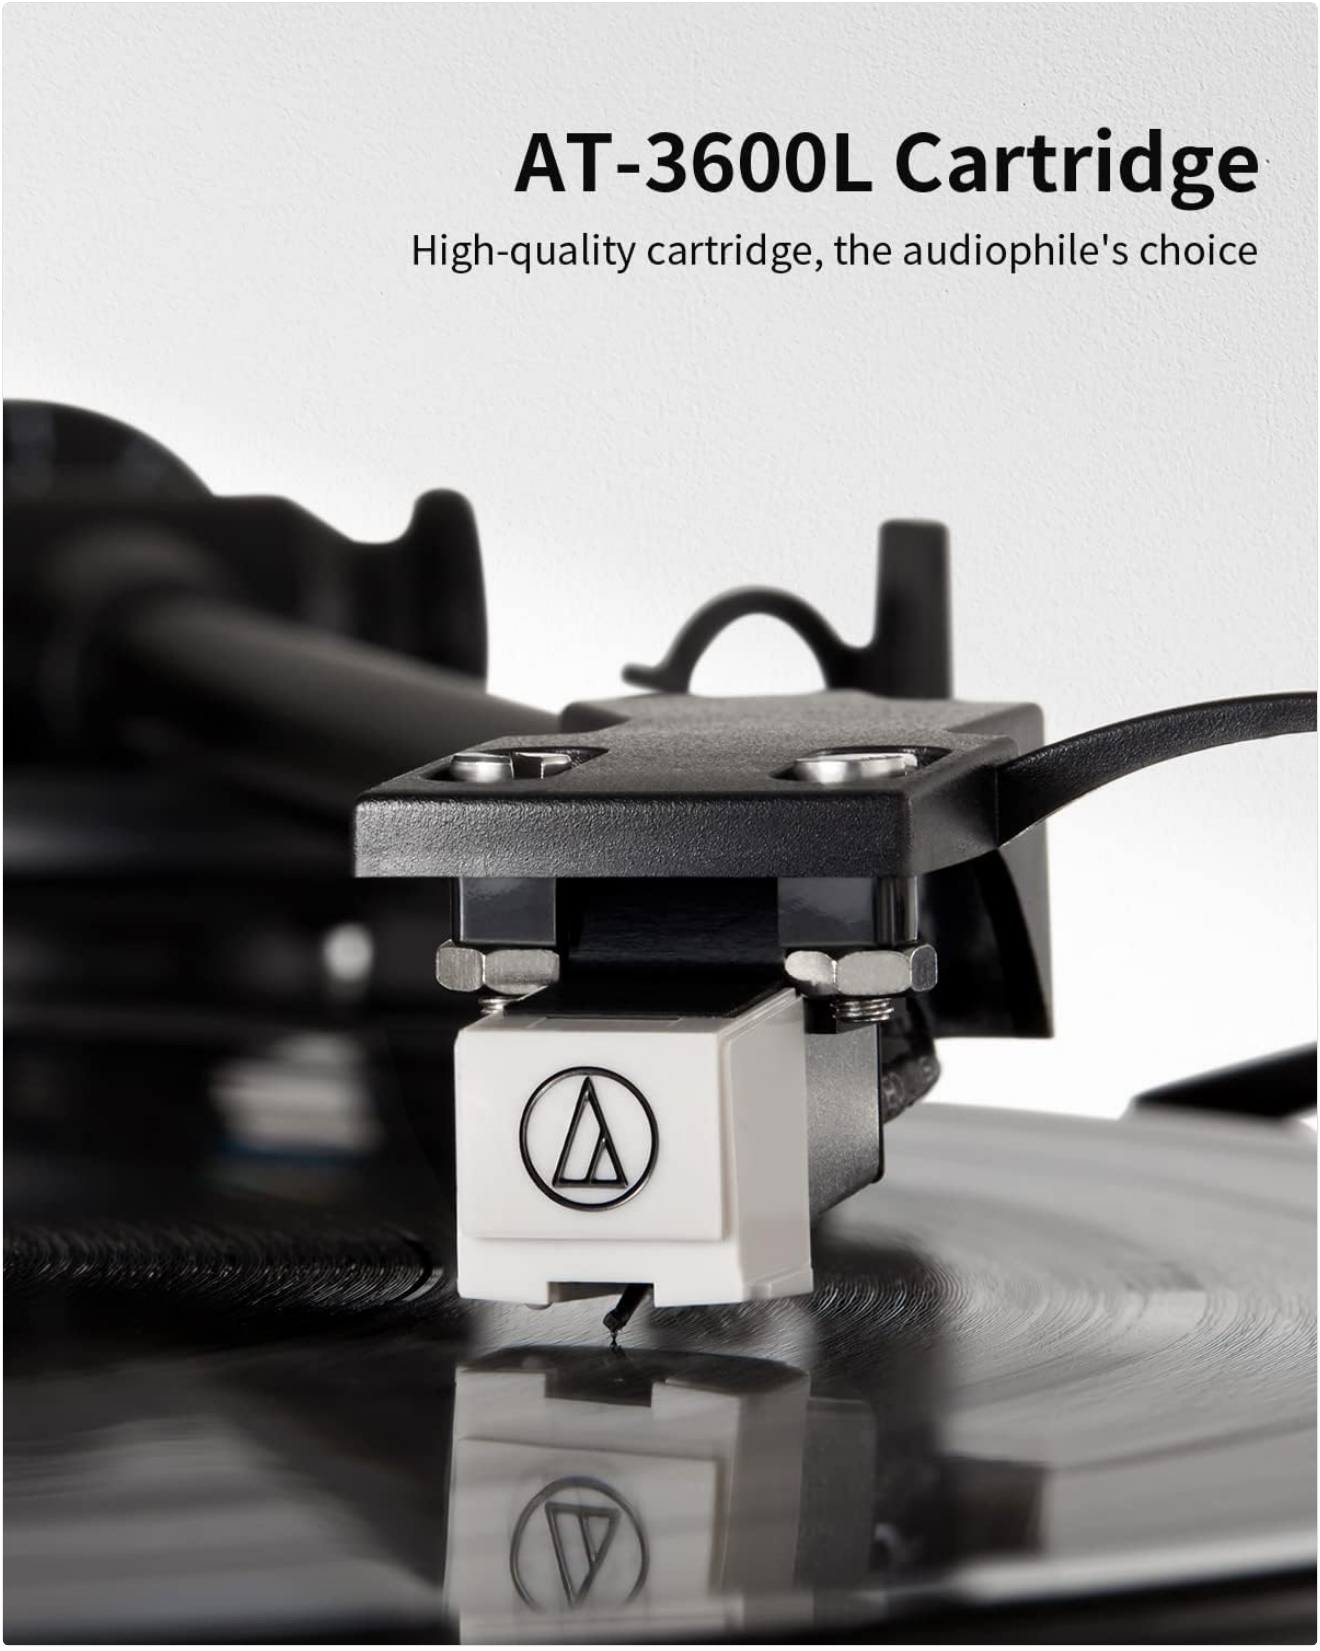


Image: The ANGELS HORN turntable positioned next to a smartphone displaying its Bluetooth settings, showing a successful connection to "HP-H019". This demonstrates the wireless audio streaming capability.

4. **Using AUX-IN:** Connect your external audio device to the AUX-IN port on the rear of the turntable using a 3.5mm audio cable. The audio from your device will play through the turntable's built-in speakers.

Maintenance

- **Cleaning the Turntable:** Use a soft, dry cloth to wipe the surface of the turntable. Avoid using harsh chemicals or abrasive cleaners.
- **Stylus Care:** Regularly clean the stylus using a soft brush designed for stylus cleaning, brushing gently from back to front. Avoid touching the stylus with your fingers. Replace the stylus when signs of wear are visible (typically after 300-500 hours of playback).
- **Dust Cover Care:** Clean the dust cover with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may scratch or damage the plastic.
- **Record Care:** Keep your vinyl records clean and free of dust to ensure optimal sound quality and prevent stylus wear. Store records vertically in their sleeves.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power adaptor not connected or faulty outlet.	Ensure the power adaptor is securely connected to the turntable and a working power outlet.
No sound from speakers	Volume too low; incorrect input selected; external speakers not connected properly.	Increase volume. Ensure the correct input mode (Phono/Line Out, Bluetooth, AUX-IN) is active. Check external speaker connections if applicable.
Sound distortion or skipping	Incorrect tracking force; dirty stylus or record; turntable not level; damaged record.	Adjust counterweight to the correct tracking force. Clean stylus and record. Ensure turntable is on a stable, level surface. Inspect record for damage.
Bluetooth not connecting	Turntable not in pairing mode; device too far; incorrect device selected.	Ensure the turntable is powered on and the Bluetooth indicator is flashing. Keep your device within range. Select "HP-H019" from your device's Bluetooth list.
Record speed incorrect	Wrong speed selected.	Select the correct speed (33 1/3 or 45 RPM) using the speed selector knob to match your record.

Specifications

- **Model Name:** Turntable with Built-in Speakers
- **Item Model Number:** HP-H019
- **Product Dimensions:** 16.46 x 13.98 x 7.68 inches
- **Item Weight:** 15.4 pounds (7 Kilograms)
- **Brand:** ANGELS HORN
- **Manufacturer:** ANGELS HORN
- **Maximum Rotational Speed:** 45 RPM (supports 33 1/3 and 45 RPM)
- **Special Feature:** Built-In Preamp, Built-In Speaker, Bluetooth 5.0
- **Material:** Wood

- **Color:** Black
- **Compatible Devices:** Smartphone (for Bluetooth input)

Warranty and Support

ANGELS HORN provides a 3-year quality guarantee for this product and offers lifetime accessories support. For any inquiries, technical assistance, or feedback, please contact ANGELS HORN customer service. They are committed to providing solutions and support before and after your purchase.
For further assistance, please visit the official ANGELS HORN store or contact their support channels.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question