TJD MT-1011QU-128GB

TJD Android 12 Tablet 10.1-inch User Manual

Model: MT-1011QU-128GB

Introduction

Welcome to the user manual for your TJD Android 12 Tablet 10.1-inch. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Your tablet features a powerful quad-core 2.0 GHz processor, 12GB RAM, 128GB ROM (expandable up to 512GB), a 10.1-inch Full HD IPS touchscreen, 8MP rear and 2MP front cameras, Wi-Fi, Bluetooth, and a 6000 mAh battery. It runs on the latest Android 12.0 operating system with Google GMS certification, ensuring access to a wide range of applications.



Image: TJD Android 12 Tablet highlighting GMS Certification, 10.1-inch display, Android 12 OS, Quad-core CPU, IPS screen, Wi-Fi, Bluetooth, and 6000mAh battery.

Product Components and Overview

Familiarize yourself with the physical components of your TJD tablet.

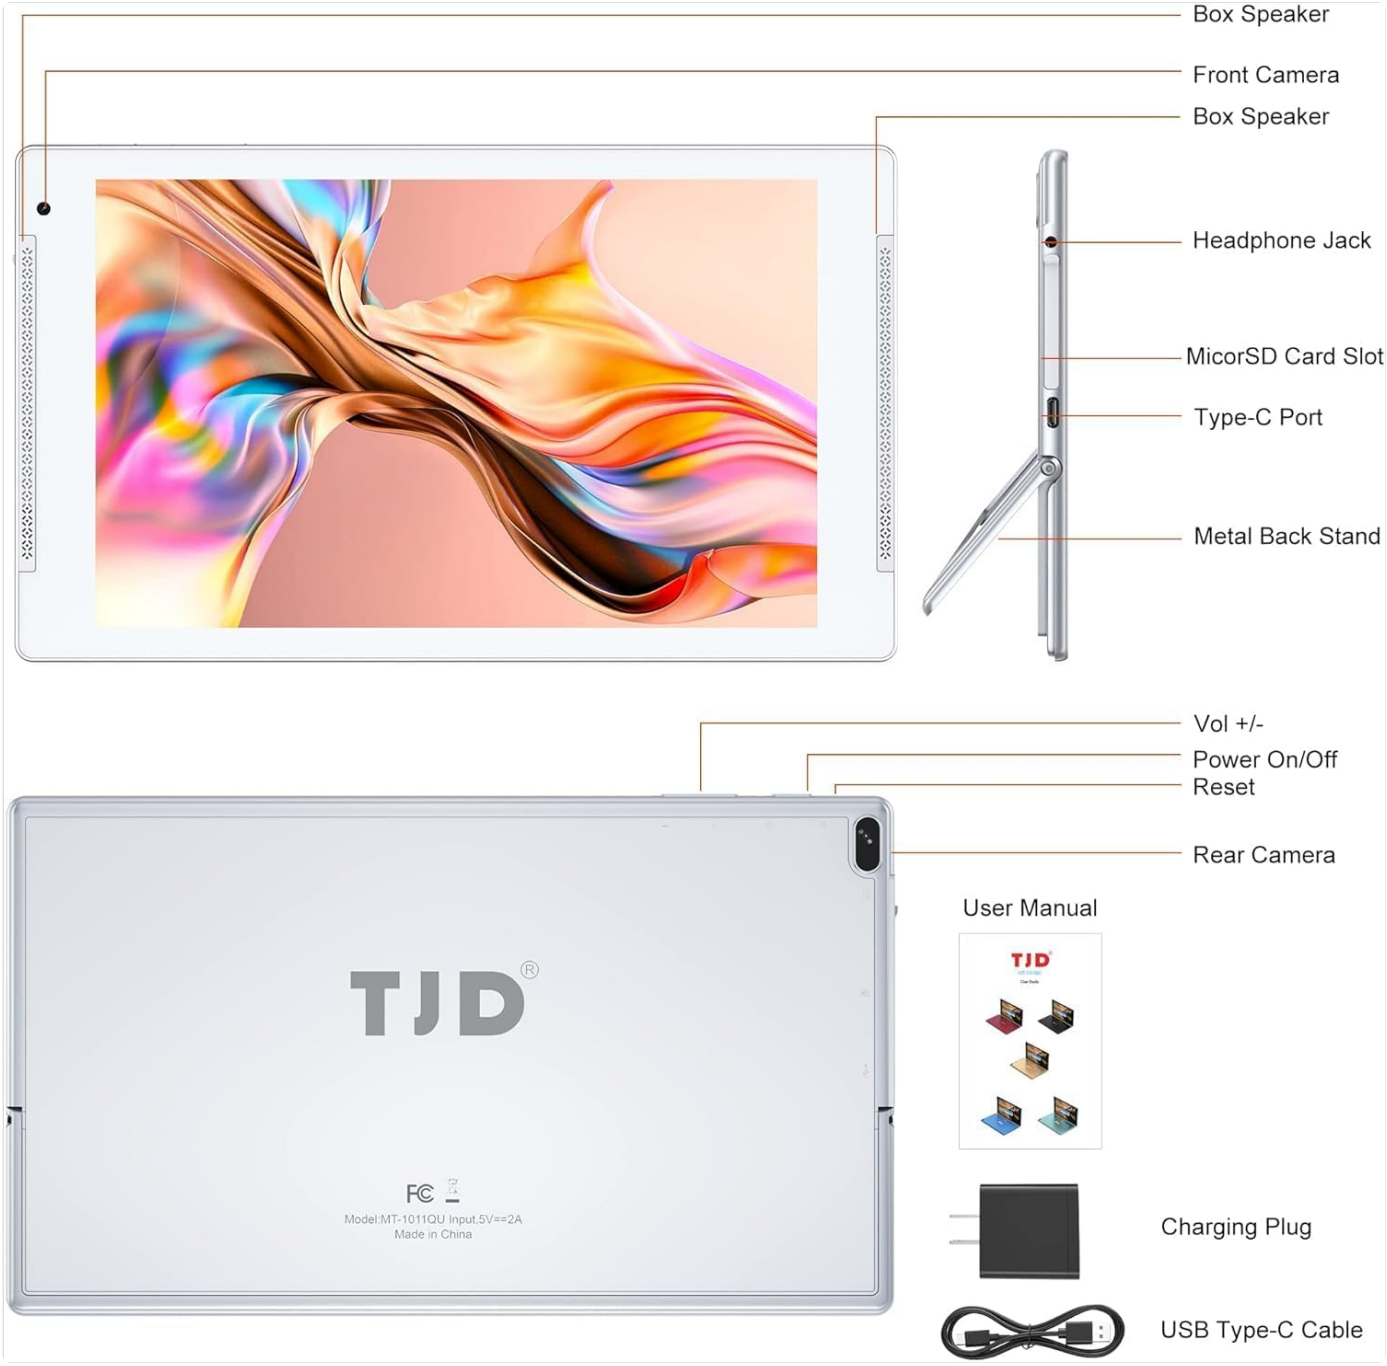


Image: Detailed diagram of the TJD tablet, indicating the location of the box speakers, front camera, headphone jack, MicroSD card slot, Type-C port, metal back stand, volume buttons, power on/off/reset button, and rear camera.

Package Contents:

- TJD Android 12 Tablet (MT-1011QU-128GB)
- USB Type-C Cable
- Charging Plug
- User Manual (this document)

Tablet Layout:

- **Front Camera:** For video calls and selfies.
- **Box Speakers:** Located on the sides for audio output.
- **Headphone Jack:** 3.5mm port for connecting headphones.
- **MicroSD Card Slot:** For expanding storage up to 512GB.
- **Type-C Port:** For charging and data transfer.
- **Metal Back Stand:** Integrated stand for hands-free viewing.

- **Volume +/-:** Adjusts audio volume.
- **Power On/Off/Reset Button:** Powers the device on/off and can be used for reset.
- **Rear Camera:** For taking photos and videos.

Setup

1. Initial Charging

Before first use, fully charge your tablet using the provided USB Type-C cable and charging plug. Connect the Type-C cable to the tablet's Type-C port and the charging plug to a power outlet. The charging indicator will show the charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power On/Off button until the TJD logo appears on the screen.
- **To Power Off:** Press and hold the Power On/Off button until the power options menu appears, then select "Power Off".
- **To Restart:** From the power options menu, select "Restart".

3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Set up your Google account (required for Google Play Store access).
- Configure date, time, and other basic settings.

4. Inserting a MicroSD Card

To expand your tablet's storage, locate the MicroSD card slot. Gently insert a MicroSD card (up to 512GB, not included) into the slot until it clicks into place. The tablet will detect the card and prompt you for formatting options if necessary.

Operating Instructions

Basic Navigation

- **Tap:** To open apps, select items, or press buttons.
- **Swipe:** To scroll through screens, lists, or content.
- **Pinch-to-Zoom:** To zoom in or out on images, maps, or web pages.
- **Long Press:** To access contextual menus or move app icons.

Wi-Fi Connectivity

Your tablet supports dual-band 2.4G/5G Wi-Fi.

1. Go to **Settings** > **Network & internet** > **Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list and enter the password if prompted.

Bluetooth Connectivity

Connect wireless accessories like headphones or keyboards using Bluetooth 5.0.

1. Go to **Settings** > **Connected devices** > **Connection preferences** > **Bluetooth**.
2. Toggle Bluetooth **On**.

3. Ensure your accessory is in pairing mode, then select it from the list of available devices.

Camera Usage

The tablet features an 8MP rear camera and a 2MP front camera.



Image: TJD tablet in use, showing a video call with the front camera and highlighting the dual camera feature (2MP front, 8MP rear).

- Open the **Camera** app.
- Tap the shutter button to take a photo or the video button to record.
- Switch between front and rear cameras using the camera switch icon.

Audio and Display

Enjoy high-quality audio through the dual smart speakers or connect headphones via the 3.5mm jack. The 10.1-inch IPS HD display (1280x800 pixels) provides clear and vibrant visuals for media consumption.



Image: TJD tablet showcasing its 10.1-inch G+G Glass Screen with 1280x800 vivid display, emphasizing multi-angle visual, high responsiveness, high transparency, and scratch resistance.

Battery Management

The 6000 mAh battery offers extended usage times.



Image: TJD tablet highlighting its 6000mAh battery, with estimated usage times: 5 hours video, 5 hours game, 10 hours news, 50 hours music.

- To check battery level, swipe down from the top of the screen to open the Quick Settings panel.
- For optimal battery life, use the provided charger and avoid extreme temperatures.

Google GMS and Play Store

Your tablet is Google GMS certified, providing full access to Google services and the Google Play Store. Download your favorite apps, games, movies, and books directly from the Play Store.

Parental Dashboard

Android 12 includes a new parental dashboard feature, allowing parents to control tablet usage and manage learning and entertainment content for children. Access this feature through the tablet's settings.

Maintenance

Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals or abrasive materials.

Software Updates

Keep your tablet's software up to date for optimal performance and security.

1. Go to **Settings** > **System** > **System update**.
2. Check for available updates and follow the on-screen instructions to install them.

Storage Management

Your tablet comes with 128GB of internal storage, expandable up to 512GB via MicroSD card.

- Regularly clear unnecessary files and uninstall unused apps to free up space.
- Utilize the MicroSD card for storing large media files like photos and videos.
- Access storage settings via **Settings** > **Storage**.

TROUBLESHOOTING

Common Issues and Solutions:

- **Tablet not turning on:**
  - Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
  - Press and hold the Power On/Off button for 10-15 seconds to force a restart.
- **Wi-Fi connection issues:**
  - Check if Wi-Fi is enabled in Settings.
  - Restart your Wi-Fi router.
  - Forget the network and reconnect.
- **Slow performance:**
  - Close unused applications running in the background.
  - Clear cache data for apps.
  - Ensure sufficient storage space is available.
  - Restart the tablet.
- **Apps crashing or freezing:**
  - Force close the app (Settings > Apps > [App Name] > Force Stop).
  - Clear the app's cache and data (Settings > Apps > [App Name] > Storage & cache).
  - Uninstall and reinstall the app.
- **Tablet unresponsive (hard reset):**
  - If the tablet becomes completely unresponsive, locate the small reset pinhole (often near the power button, as indicated in the product diagram). Use a thin object (like a paperclip) to gently press the reset button. This will force a restart without erasing data.

SPECIFICATIONS

Feature	Detail
Brand	TJD
Model Number	MT-1011QU-128GB
Operating System	Android 12
Processor Brand	Allwinner (Quad-Core 2.0 GHz)
RAM	12 GB
Storage (ROM)	128 GB
Expandable Storage	Up to 512 GB (MicroSD)
Screen Size	10.1 Inches
Display Resolution	1280 x 800 Pixels (IPS HD)
Rear Camera	8 MP
Front Camera	2 MP
Connectivity	Wi-Fi (802.11ac, 2.4G/5G), Bluetooth 5.0, USB Type-C
Battery	6000 mAh Lithium-ion
Special Features	Fast Charging, Stereo Speakers, USB Host, Expandable Storage
Color	Silver
Dimensions (Package)	29.4 x 18.7 x 4.6 cm
Weight (Package)	990 grams

Warranty and Support

Information regarding specific warranty terms and availability of spare parts is not provided in the product details. For warranty claims, technical support, or inquiries about spare parts, please contact the manufacturer directly through their official website or customer service channels.
Software updates are provided by the manufacturer, but specific guarantees for the duration of these updates are not available.

© 2024 TJD. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question