Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

COSTWAY PV10069NA

COSTWAY XXL Cat Tree 121 cm - User Manual

Model: PV10069NA

1. Product Overview

The COSTWAY XXL Cat Tree is a multi-functional activity center designed to provide your feline companions with ample space for exploration, rest, play, and relaxation. Standing at 121 cm, this 5-level cat tower features a comfortable hammock, spacious jumping platforms, engaging hanging toys, a cozy cat bed, and a private cat condo. Crafted with natural cattail down and plush cushions, it offers ultimate comfort and durability for your pets.



Image 1.1: The COSTWAY XXL Cat Tree (Model PV10069NA) in a home setting, showcasing its multi-level design and various features.

Key Features:

- **Multi-Level Design:** 5 tiers providing diverse spaces for climbing, playing, and resting.
- **Premium Materials:** Hand-woven natural cattail down condo and bed frames, ultra-soft plush cushions for comfort.
- **Natural Sisal Scratching Posts:** Durable sisal ropes fully wrap support posts, satisfying natural scratching instincts and protecting furniture.
- **Sturdy Construction:** Made with thick engineered wood panels and robust metal framework for stability, supporting up to 15 kg per level.
- **Engaging Play Elements:** Includes a comfortable hammock, spacious platforms, and 4 rotating hanging balls for entertainment.
- **Elegant Design:** Modern aesthetic that blends seamlessly with home decor.

2. Safety Information

Please read and understand all safety instructions before assembling and using the cat tree. Keep this manual for future reference.

- **Adult Assembly Required:** This product contains small parts and requires adult assembly. Keep children away during assembly.
- **Placement:** Place the cat tree on a flat, stable surface to prevent tipping. Avoid placing it near windows where cats could fall or near heat sources.
- **Regular Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight. Loose parts can cause instability and injury.
- **Weight Limit:** Do not exceed the recommended weight capacity of 15 kg per level.
- **Pet Supervision:** Monitor your pet's initial use of the cat tree to ensure they adapt safely.
- **Damage:** If any part of the cat tree becomes damaged, discontinue use immediately and replace the damaged component.
- **Choking Hazard:** Ensure all small parts, especially hanging toys, are securely attached. Replace worn-out toys to prevent ingestion.

3. Package Contents

Before assembly, please ensure all parts listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- Base Plate
- Various Platforms (e.g., main platform, smaller jumping platforms)
- Cat Condo (Woven Basket)
- Cat Bed (Woven Basket)
- Hammock
- Sisal-Wrapped Scratching Posts (various lengths)
- Support Posts (non-sisal, if any)
- Hanging Toys (Pom-poms)
- Assembly Hardware (Screws, bolts, Allen key)
- Instruction Manual (this document)

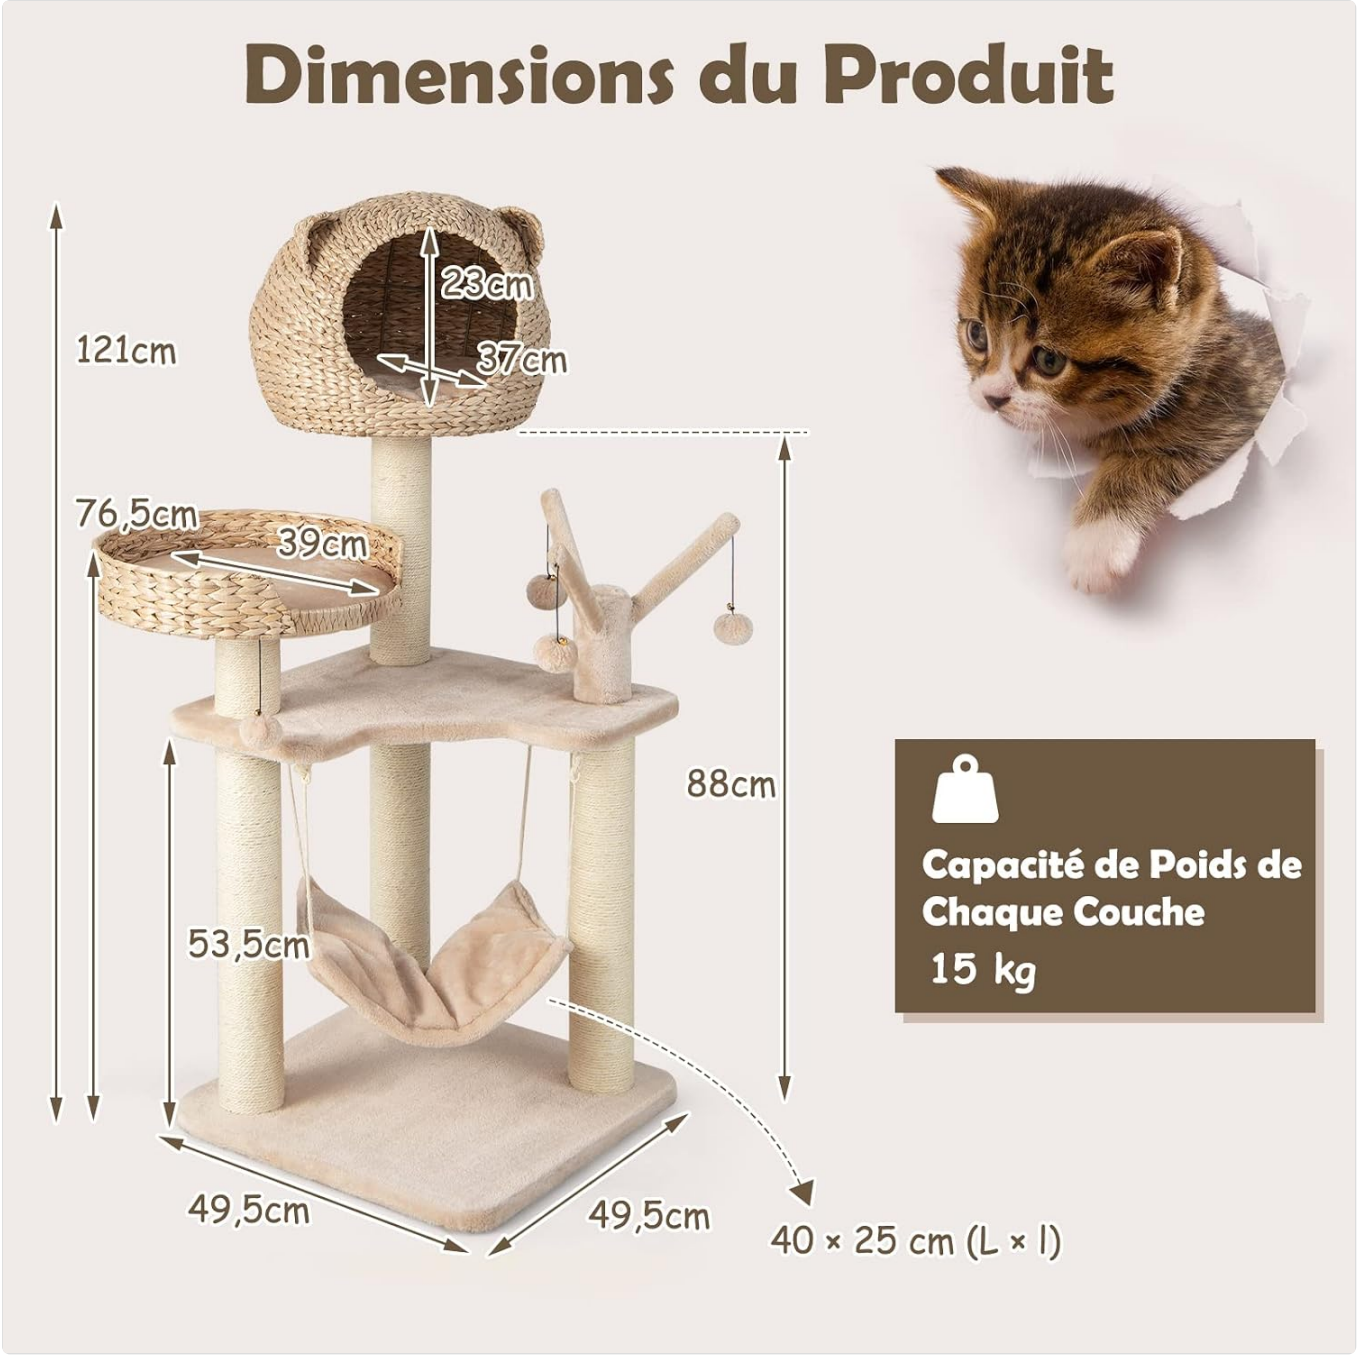


Image 3.1: Product dimensions and key components.

4. Setup and Assembly

Assembly is designed to be straightforward. Follow these general steps. Refer to the included diagrammatic instructions for detailed, step-by-step guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package contents list.
2. **Attach Base Posts:** Secure the shortest scratching posts to the base plate using the provided screws and Allen key. Ensure they are tightly fastened.
3. **Install Main Platform:** Attach the main, larger platform to the top of the base posts.
4. **Assemble Hammock:** Connect the hammock to the designated points on the main platform or lower posts, ensuring it hangs securely.
5. **Add Upper Posts and Platforms:** Continue by attaching the next set of scratching posts and smaller platforms in sequence, building upwards.

6. **Mount Cat Condo and Bed:** Secure the woven cat condo and cat bed to their respective top posts or platforms.
7. **Attach Play Elements:** Fasten any decorative elements or hanging toys (pom-poms) to the designated areas.
8. **Final Check:** Once fully assembled, gently shake the cat tree to ensure all connections are secure and the structure is stable. Retighten any loose screws.



Image 4.1: Overview of the 5-level cat activity center structure.

5. Operating Instructions / Usage

The COSTWAY XXL Cat Tree is designed to cater to your cat's natural instincts and provide a stimulating environment.

- **Scratching:** Encourage your cat to use the sisal-wrapped posts for scratching. This helps maintain claw health and diverts scratching behavior from your furniture.
- **Climbing and Exploring:** The multi-level design allows cats to climb, jump, and explore different heights, satisfying their natural curiosity and providing exercise.
- **Resting and Napping:** The cozy cat condo, comfortable hammock, and plush-covered platforms offer various spots for

your cat to rest, nap, and observe their surroundings from a safe vantage point.

- **Playing:** The hanging pom-pom toys provide interactive play opportunities, helping to keep your cat entertained and active.
- **Observation:** Cats enjoy elevated positions. The various platforms allow them to survey their territory, which can reduce stress and increase their sense of security.



Image 5.1: Cats utilizing the various levels and features of the cat tree.



Image 5.2: A cat enjoying an elevated view from the cat tree near a window.

6. Maintenance

Proper maintenance will extend the life of your cat tree and ensure a hygienic environment for your pet.

- **Regular Cleaning:** Brush or vacuum the plush surfaces regularly to remove pet hair, dust, and debris.
- **Spot Cleaning:** For soiled areas, gently clean with a mild detergent and water. Use a damp cloth and blot the area. Avoid saturating the material.
- **Avoid Machine Washing:** Do not machine wash or tumble dry any part of the cat tree, as this can damage the materials and structure.
- **Sisal Care:** The sisal scratching posts are durable, but if they become heavily frayed, consider replacing them or wrapping them with new sisal rope to maintain their effectiveness.
- **Hardware Check:** Periodically check all screws and bolts for tightness. Retighten as necessary to maintain stability.
- **Damage Inspection:** Regularly inspect the entire cat tree for any signs of wear, tear, or damage. Replace any broken or

severely worn parts immediately.

7. Troubleshooting

Problem	Possible Cause	Solution
Cat tree is wobbly/unstable.	Loose screws or uneven surface.	Ensure all screws are tightened. Place the cat tree on a flat, level surface.
Cat is not using the scratching posts.	Prefers other surfaces, or not attracted to sisal.	Try sprinkling catnip on the sisal posts. Gently guide your cat's paws to the posts. Ensure the posts are stable.
Hanging toys are damaged or detached.	Normal wear and tear from play.	Re-attach securely if possible. If damaged, remove to prevent choking hazard and replace with new cat-safe toys.
Unpleasant odor.	New product smell or pet odors.	Allow to air out in a well-ventilated area. For pet odors, clean affected areas as per maintenance instructions.

8. Specifications

Model Number	PV10069NA
Overall Dimensions (L x W x H)	49.5 x 49.5 x 121 cm (19.5 x 19.5 x 47.6 inches)
Materials	Cattail plush, Sisal rope, Engineered wood, Plush fabric, Polyester fabric, Metal
Color	Beige
Number of Levels	5
Weight Capacity per Level	15 kg (33 lbs)
Net Weight	10.5 kg (23.1 lbs)
Recommended Pet Type	Cat (Small Breeds)
Assembly Required	Yes

9. Warranty Information

COSTWAY products are manufactured to high-quality standards. Specific warranty terms and conditions may vary by region and retailer. Please retain your proof of purchase (receipt) for any warranty claims.
For detailed warranty information, please refer to the warranty card included with your product or contact the retailer from whom you purchased the item. You may also visit the official COSTWAY website for general warranty policies.

10. Customer Support

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact COSTWAY customer service or the retailer where you purchased this product.
For more information about COSTWAY products, visit the official COSTWAY store: COSTWAY Store on Amazon

© 2024 COSTWAY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BZS3HB31

More documents and user manuals: **https://manuals.plus/**