Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Technology Parts Store 33862, 33967

Oval Glass Crock Pot Lid User Manual

Model: 33862, 33967

1. Product Overview

This manual provides essential information for the proper use and maintenance of your replacement oval glass crock pot lid. Designed for compatibility with specific Hamilton Beach 6 Quart Crock Pots and Slow Cookers, this lid ensures optimal cooking performance and safety.



Figure 1: The oval glass crock pot lid with a black handle and gasket. This image shows the clear glass lid with its integrated black handle and the sealing gasket around the rim, designed for a secure fit on compatible slow cookers.

2. Key Features

- **Replacement Oval Glass Crock Pot Lid:** Specifically designed as a direct replacement for original lids.
- **Compatibility:** Fully compatible with Hamilton Beach Models 33862 and 33967 6-Quart Crock Pots and Slow Cookers.
- **Dimensions:** Measures approximately 12-1/4 inches by 9-1/2 inches, ensuring a proper fit for the specified models.
- **Integrated Vent:** Features a vent in the top of the lid to allow steam to escape, preventing excessive pressure buildup and ensuring even cooking.
- **Durable Construction:** Made from high-quality glass for visibility during cooking, paired with a sturdy black handle and a sealing gasket for a secure fit.
- **Dishwasher Safe:** Designed for easy cleaning and is safe for use in a dishwasher.

3. Compatibility

This replacement lid is engineered to fit the following Hamilton Beach 6 Quart Crock Pot and Slow Cooker models:

• Hamilton Beach Model 33862

• Hamilton Beach Model 33967

Please verify your slow cooker's model number before purchase to ensure proper fit and function. The lid's oval shape and dimensions (12-1/4" x 9-1/2") are specific to these models.



Figure 2: An example of a slow cooker with a lid in place. This image illustrates how the lid sits on a slow cooker, demonstrating its intended use and fit.

4. Setup and Installation

The lid is designed for immediate use as a replacement part. No complex installation is required.

1. **Unpack:** Carefully remove the new lid from its packaging.
2. **Inspect:** Before first use, inspect the lid for any signs of damage during transit. Ensure the glass is intact, the handle is securely attached, and the gasket is properly seated around the rim.
3. **Initial Cleaning:** Wash the lid thoroughly with warm, soapy water before its first use. Rinse completely and dry.
4. **Placement:** Place the lid directly onto the rim of your compatible Hamilton Beach 6 Quart Crock Pot or Slow Cooker. Ensure the gasket creates a snug seal.

5. Operating Instructions

The lid functions as a standard slow cooker lid, designed to retain heat and moisture during the cooking process.

- **During Cooking:** Place the lid firmly on the slow cooker during operation to maintain consistent temperature and prevent heat loss.
- **Steam Vent:** The integrated vent allows excess steam to escape, which is normal and necessary for proper slow cooking.
- **Lifting the Lid:** When checking food or stirring, lift the lid carefully by the handle. Be aware of escaping steam, which can be hot.
- **Avoid Thermal Shock:** Do not expose the hot glass lid to sudden temperature changes (e.g., placing a hot lid directly into cold water), as this may cause the glass to crack.

6. Maintenance and Cleaning

Proper care will extend the life of your replacement lid.

- **Daily Cleaning:** After each use, wash the lid with warm, soapy water. A soft sponge or cloth is recommended.
- **Dishwasher Safe:** The lid is dishwasher safe. Place it on the top rack for best results.

- **Gasket Care:** Periodically check the silicone gasket for any signs of wear or damage. Ensure it is clean and free of food debris to maintain a proper seal. The gasket can be removed for thorough cleaning if necessary and then re-seated.
- **Storage:** Store the lid in a safe place where it will not be subject to impacts or pressure that could cause damage to the glass.

7. Troubleshooting

If you encounter issues with your lid, consider the following common solutions:

Problem	Possible Cause	Solution
Lid does not fit properly.	Incorrect slow cooker model or lid misalignment.	Verify your slow cooker is Hamilton Beach Model 33862 or 33967. Ensure the lid is centered and the gasket is properly seated around the rim.
Steam escaping excessively from sides.	Gasket is dirty, damaged, or improperly seated.	Clean the gasket and lid rim. Re-seat the gasket firmly. If damaged, consider replacing the gasket if possible, or the lid if the gasket is integrated.
Glass appears cloudy or stained.	Mineral deposits from water or food residue.	Clean with a mixture of vinegar and water, or a non-abrasive glass cleaner. Rinse thoroughly.

8. Product Specifications

Specification	Detail
Product Type	Replacement Oval Glass Crock Pot Lid
Brand	Technology Parts Store
Compatible Models	Hamilton Beach 6 Quart Crock Pots and Slow Cookers Model 33862, 33967
Material	Glass (Lid), Plastic (Handle), Silicone (Gasket)
Color	Clear Glass with Black Handle
Shape	Oval
Dimensions	Approximately 12-1/4" x 9-1/2"
Special Features	Integrated Steam Vent, Gasket Included
Care Instructions	Dishwasher Safe
ASIN	B0BZST5N37
Item Model Number	33862, 33967
Date First Available	March 28, 2023

9. Warranty Information

Specific warranty details for this replacement part are typically provided by the seller or manufacturer at the time of purchase.

Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage, terms, and conditions.

10. Customer Support

For further assistance, questions, or concerns regarding your replacement crock pot lid, please contact Technology Parts Store customer support.

Online Support: Visit the Technology Parts Store on Amazon for product information and contact options.

General Inquiries: Refer to your purchase platform for direct messaging or contact details.

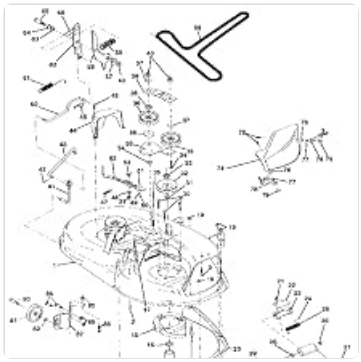


Figure 3: Illustration of customer service representatives. This image represents the availability of support for product inquiries and assistance.

© 2023 Technology Parts Store. All rights reserved.
Hamilton Beach is a registered trademark. This product is a compatible replacement part and not manufactured by Hamilton Beach.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I find a replacement lid for an 8-quart Crock-Pot model SC080-DST?

Based on the available documentation, the replacement lid listed (Model 33862, 33967) is specifically designed for Hamilton Beach 6-quart models and measures approximately 12-1/4 inches by 9-1/2 inches. It is unlikely to fit your...

Read full answer

Open the live page

https://manuals.plus/asin/B0BZST5N37

More documents and user manuals: **https://manuals.plus/**