OMAIC Remote Control for Samsung

OMAIC Universal Remote Control for Samsung Smart TV

Model: Remote Control for Samsung

Introduction

This manual provides comprehensive instructions for the OMAIC Universal Remote Control, designed for seamless compatibility with most Samsung Smart TVs, including QLED, OLED, 4K, and 8K models. This remote serves as an excellent replacement or backup for your original Samsung Smart TV remote, offering enhanced features and ease of use.
Key features include dedicated shortcut buttons for popular streaming services and a robust infrared signal for reliable operation.

Product Features

- **Broad Compatibility:** Fully compatible with most Samsung QLED, OLED, 4K, and 8K Smart TVs.
- **Instant Access Buttons:** Features 4 dedicated shortcut buttons for Netflix, Prime Video, Rakuten TV, and Disney+. (Note: Disney button functionality may vary with TV models prior to 2022).
- **Superior Performance:** Utilizes mature infrared technology for strong signal transmission, longer distance, and quick response time (0.5 seconds).
- **No Setup Required:** Ready to use right out of the box; simply insert 2 AAA batteries (not included). No programming or pairing needed.
- **Durable Construction:** Made from high-quality ABS and silicone materials for long-term durability.



Close-up of the remote highlighting the dedicated shortcut buttons for popular streaming services.



The remote is compatible with a wide range of Samsung Smart TVs, including LED, LCD, HDTV, 3D, and various series.



Diagram illustrating the convenience of the four dedicated hotkeys for quick access to streaming platforms.

Setup Instructions

The OMAIC Universal Remote Control is designed for immediate use without any complex setup or programming. Follow these simple steps to begin using your remote:

1. **Prepare Batteries:** Obtain two (2) AAA 1.5V batteries. These are not included with the remote.
2. **Open Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Gently slide or lift the cover to open it.
3. **Insert Batteries:** Insert the two AAA batteries into the compartment, ensuring that the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. **Close Battery Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.

5. **Ready to Use:** Your remote control is now ready to operate your compatible Samsung Smart TV. Point the remote towards your TV and begin using its functions.



Visual guide for battery installation: Remove cover, insert 2*AAA batteries, and replace cover.

Operating Instructions

This section details the functions of the buttons on your OMAIC Universal Remote Control.



Detailed button layout and functions of the OMAIC Universal Remote Control.

Remote Control Button Functions

Button	Function	Description
Power	On/Off	Turns the TV power on or off. This button uses infrared ray.
Color / Number (123)	Numeric Keypad / Color Buttons	Press to display the virtual numeric pad or access color-coded options. Use to enter numbers for channels, PINs, etc. Press and hold for 1 second for the TTX menu.
Mute	Mute/Unmute	Toggles the sound on or off.

Button	Function	Description
Multi View	Access Multi View	Directly enters the Multi View function. Press and hold for 1 second for the Shortcuts menu.
Enter / OK Button	Confirm Selection	Confirms selections within menus or navigates content.
Directional Pad	Navigation	Navigates up, down, left, or right through menus and content.
Smart Hub (Home)	Return to Home Screen	Returns to the TV's Smart Hub or Home screen.
VOL +/- (Volume)	Adjust Volume	Increases or decreases the TV volume. Press to mute. Press and hold for 1 second for Accessibility Shortcuts.
CH +/- (Channel)	Change Channel	Changes the TV channel (only valid for live TV).
Netflix Button	Launch Netflix	Directly opens the Netflix application.
Prime Video Button	Launch Prime Video	Directly opens the Prime Video application.
Rakuten TV Button	Launch Rakuten TV	Directly opens the Rakuten TV application.
Disney+ Button	Launch Disney+	Directly opens the Disney+ application. (Note: May not be compatible with Samsung TVs manufactured before 2022).

Important Note: If there is no operation within 30 seconds, you may need to press any remote control button twice slowly (with an interval of about 3 seconds) to wake up and use the remote control. This is a power-saving feature and not a malfunction.

Maintenance and Care

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes slow or inconsistent. Always replace both batteries at the same time with new AAA 1.5V batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** While the remote is designed with durable ABS material, avoid dropping it from significant heights to prevent internal damage.



The remote is designed with durable ABS material for sturdiness and drop resistance.

Troubleshooting

Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote is in power-saving mode.	◦ Check battery polarity and ensure they are new. ◦ Remove any objects blocking the line of sight between the remote's IR emitter and the TV's IR receiver. ◦ Press any button twice slowly (3-second interval) to wake the remote from power-saving mode.
Specific shortcut buttons (e.g., Disney+) not working.	TV model incompatibility.	The Disney+ button is primarily compatible with Samsung TVs manufactured in 2022 and later. Functionality may not be available on older models. Other shortcut buttons should work universally.
Slow response time.	Low batteries. Excessive distance from TV.	◦ Replace batteries with new ones. ◦ Ensure you are within the effective operating range (up to 10 meters / 39 feet).
Remote works for some functions but not others.	Partial battery failure or specific TV model limitations.	◦ Replace batteries. ◦ Verify if the specific function is supported by your TV model (e.g., channel change only for live TV).

Product Specifications

Feature	Detail
Brand	OMAIC
Model Name	Remote Control for Samsung
Color	Black
Connectivity Technology	Infrared (IR)

Feature	Detail
Special Features	IR, Universal Compatibility
Compatible Devices	Samsung QLED, OLED, 4K, 8K Smart TVs
Maximum Supported Devices	1
Number of Buttons	Standard buttons + 4 shortcut buttons
Controller Type	Button Control
Maximum Range	10 Meters (39 feet)
Power Source	2 x AAA 1.5V Batteries (not included)
Material	ABS and Silicone



Physical dimensions of the remote control.

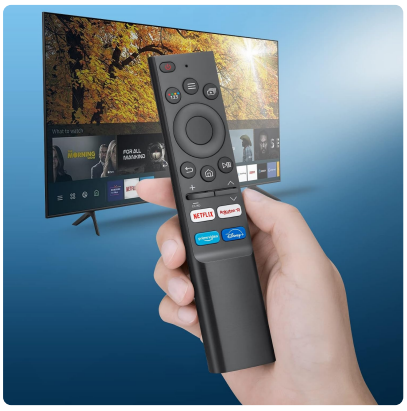


Illustration of the remote's fast response time and effective operating range.

Warranty and Support

OMAIC is committed to providing high-quality products and excellent customer service. While specific warranty details are not provided in the product specifications, the manufacturer emphasizes long-term focus on quality and compatibility.
For any questions regarding your OMAIC Universal Remote Control, including compatibility or operational issues, please contact the seller directly. Professional after-sales service is available, with responses typically provided within 12 working hours.
Refer to your purchase documentation or the seller's contact information on the platform where you purchased the product for direct support.

© 2024 OMAIC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question