Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Cello CS22WS01T

Cello 22-inch Smart Camping TV User Manual

Model: **CS22WS01T** | Brand: **Cello**

Introduction

This manual provides essential information for setting up, operating, and maintaining your Cello 22-inch Smart Camping TV. Designed for versatility, this TV features the WebOS Hub smart platform, offering access to a wide range of entertainment applications. It supports both 12-volt and mains power, making it ideal for use in caravans, motorhomes, boats, and trucks.

Please read this manual thoroughly before using the product to ensure safe and optimal performance.

Safety Information

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block ventilation openings.
- Use only the power cables supplied with the TV (12V and mains).
- Do not open the TV casing. Refer all servicing to qualified personnel.
- Keep batteries out of reach of children.

Package Contents

Verify that all the following items are included in your package:

- Cello 22-inch Smart Camping TV
- Remote Control
- Mains Power Cable
- 12-Volt Power Lead
- AAA Batteries (2x for remote control)

Setup

Connecting Power

Your Cello Smart TV can be powered by either a standard mains supply or a 12-volt DC supply, making it versatile for

various environments.

- **Mains Power:** Connect the provided mains power cable to the TV's power input and then to a standard wall socket.
- **12-Volt Power:** For use in caravans, motorhomes, or boats, connect the supplied 12-volt power lead to the TV's 12V input and then to your vehicle's 12V power outlet (e.g., cigarette lighter socket).

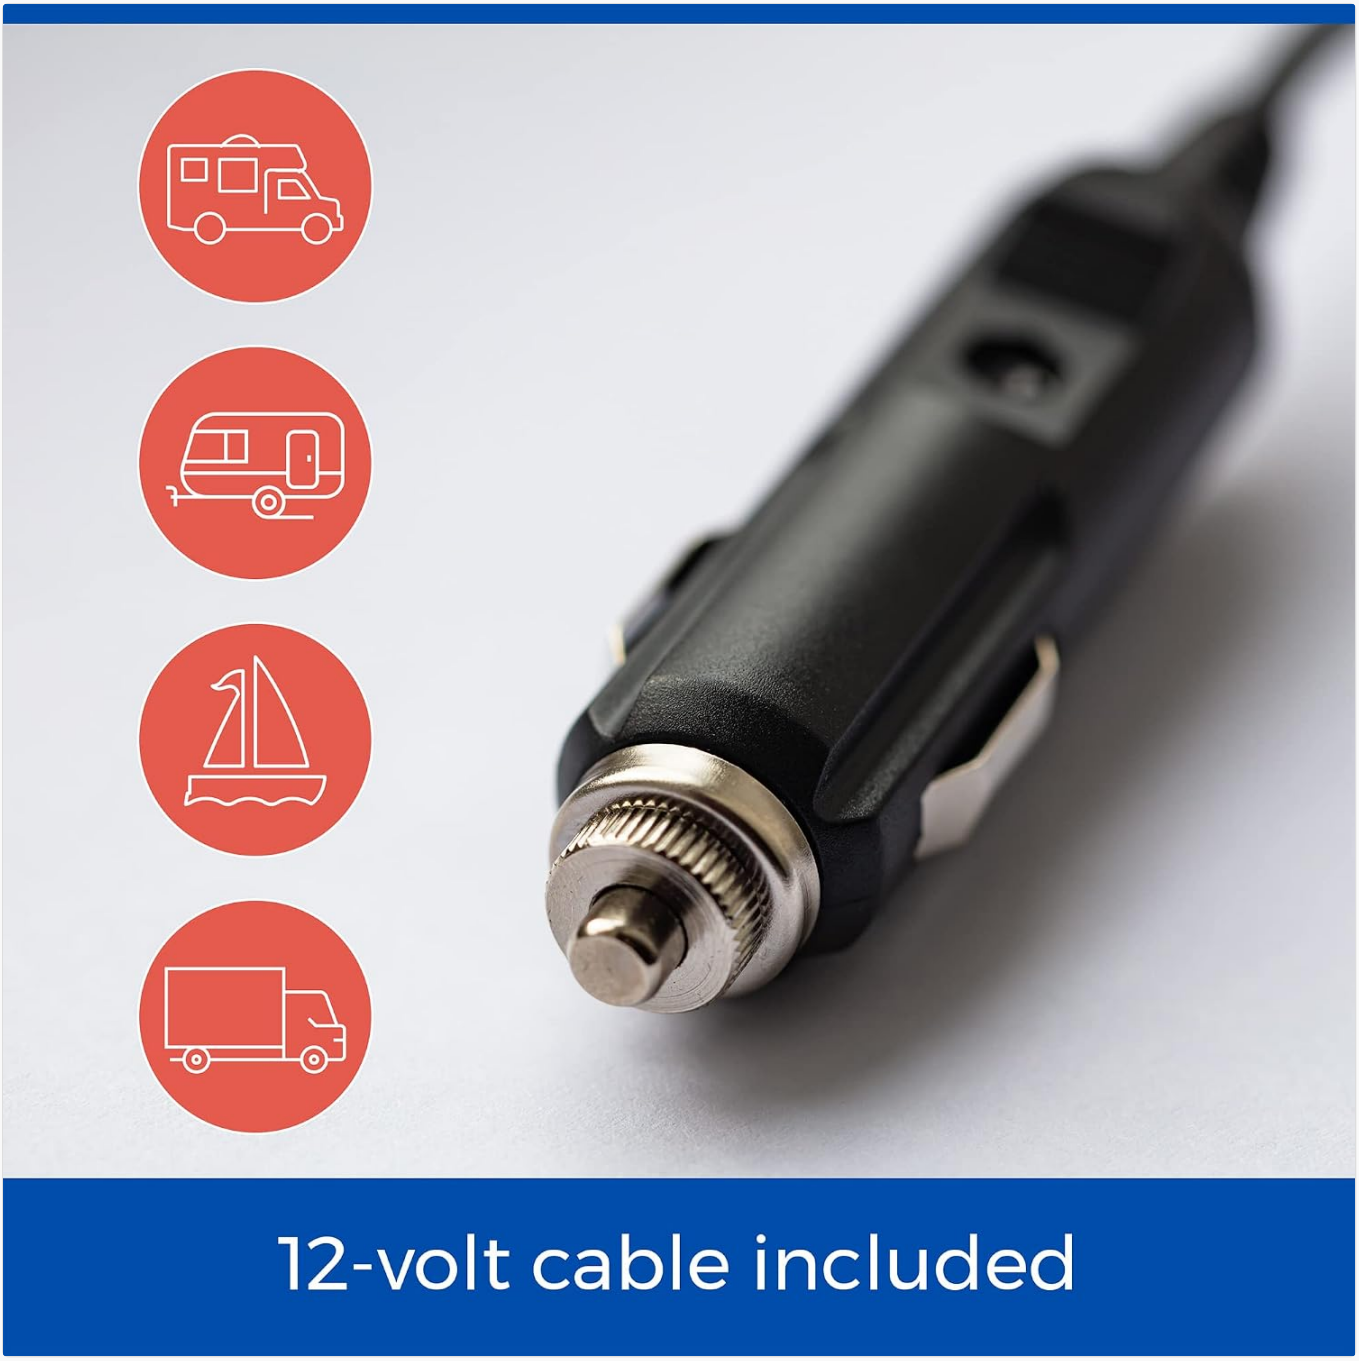


Image: The included 12-volt power cable, essential for portable use in vehicles.

Initial Setup and Connections

Upon first power-on, the TV will guide you through the initial setup process, including language selection, network connection, and channel scanning.

- **WebOS Hub:** Follow the on-screen instructions to connect to your Wi-Fi network. This will enable access to the WebOS Hub smart features and applications.
- **Channel Scan:** The TV features a triple tuner. Select your region and perform an automatic channel scan for terrestrial (Freeview) and satellite (Freesat) channels. You may need to connect an appropriate antenna or

satellite dish.

- **External Devices:** Use the HDMI and USB ports to connect external devices such as gaming consoles, media players, or USB storage devices.



Image: The Cello 22-inch Smart TV showcasing its WebOS Hub interface with popular streaming applications.



Image: A closer look at the WebOS Hub, highlighting its intuitive layout and access to diverse entertainment options.

Mounting

The TV's slim frame and lightweight design make it suitable for wall mounting. Ensure you use a VESA-compatible wall mount (not included) that supports the TV's size and weight. Refer to the wall mount's instructions for proper installation.



Image: Product dimensions for planning placement or wall mounting.

Operating the TV

Remote Control

The included remote control allows you to navigate the TV's features. Familiarize yourself with the buttons for power, volume, channel selection, smart home access, and input selection.

Navigating WebOS Hub

WebOS Hub provides a user-friendly interface for accessing streaming services, live TV, and other features.

- **Applications:** Access pre-installed apps like Netflix, Prime Video, Disney Plus, Apple TV Plus, Paramount Plus, and BBC iPlayer. You can also download additional apps via the app store.
- **Web Browser:** Use the integrated browser for general internet surfing.
- **Live TV:** Switch between terrestrial and satellite tuners to watch live broadcasts.

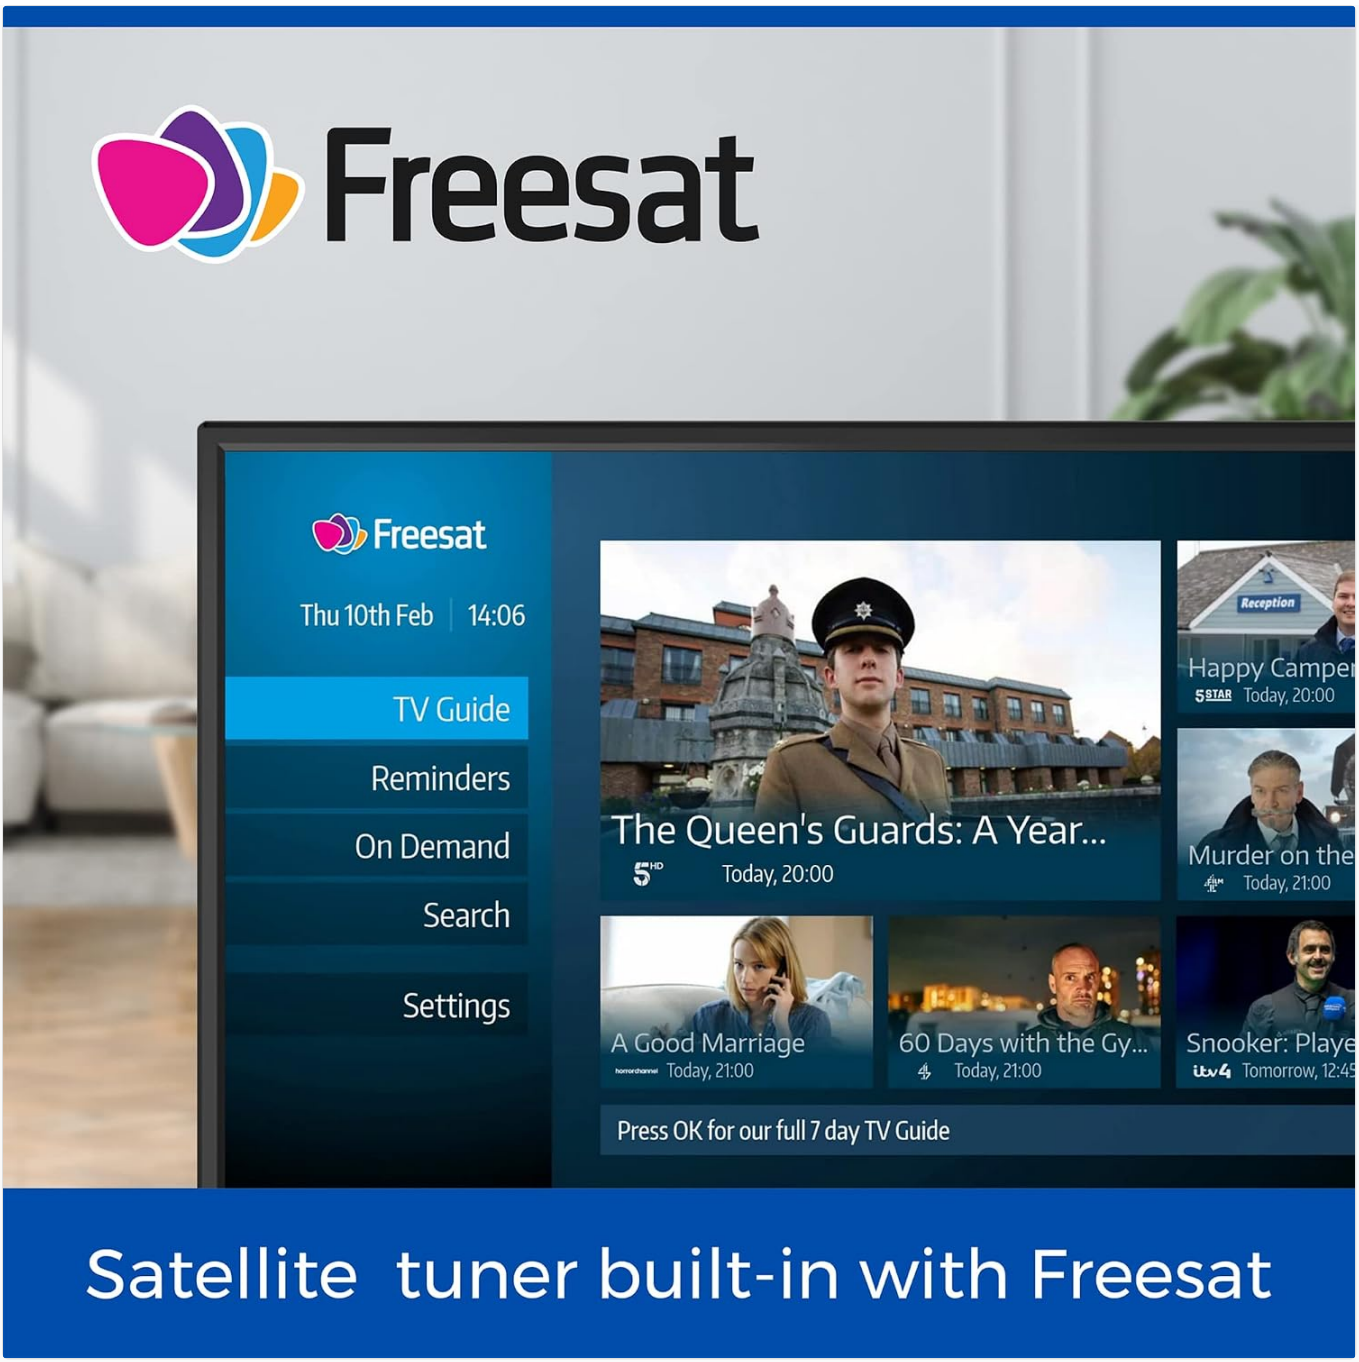


Image: The TV's Freesat interface, showing program listings and navigation options.

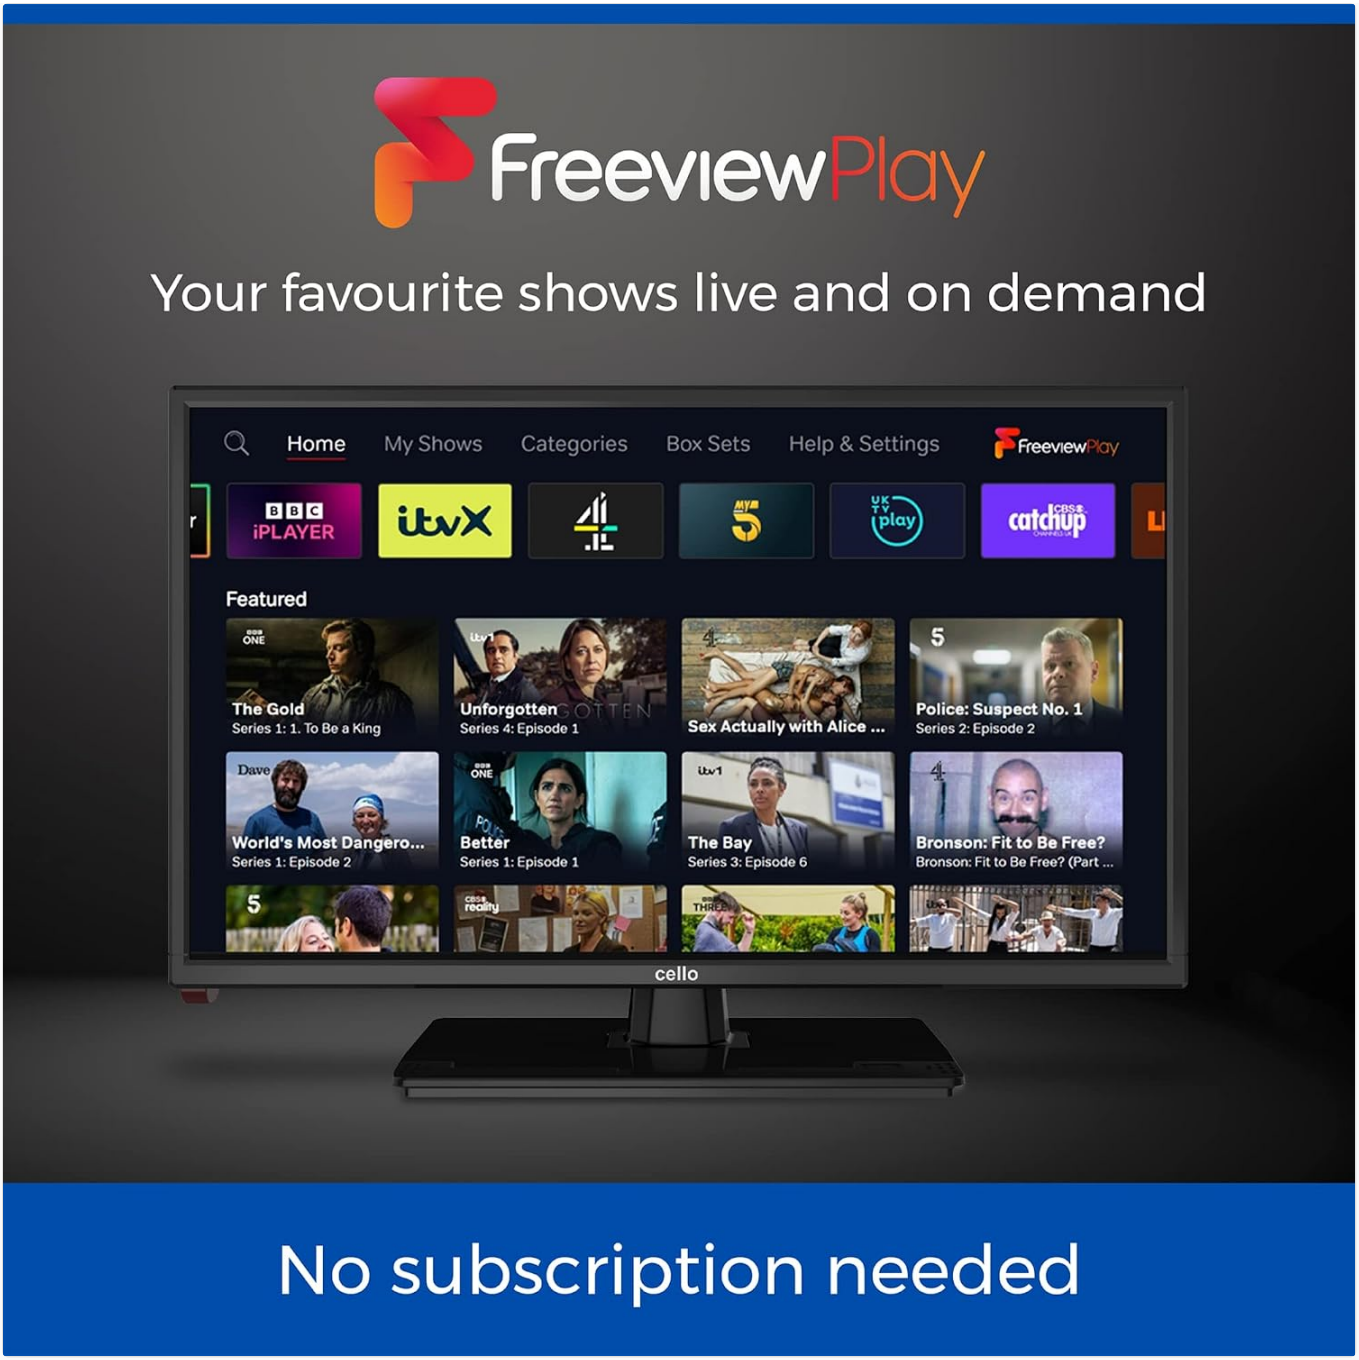


Image: The Freeview Play interface, offering access to live and on-demand content without a subscription.

Bluetooth Connectivity

The TV features integrated Bluetooth, allowing you to connect compatible audio devices such as soundbars or headphones for an enhanced audio experience without the need for cables.

- To pair a Bluetooth device, navigate to the TV's settings menu, select 'Sound', and then 'Bluetooth'. Follow the on-screen instructions to search for and connect your device.



Image: Visual representation of connecting a Bluetooth soundbar to the TV for improved audio.

USB Recording

The TV supports USB recording, allowing you to record live TV programs to a connected USB storage device. Insert a compatible USB drive into the TV's USB port and follow the on-screen prompts to format and set up recording.

Maintenance

To ensure the longevity and optimal performance of your Cello Smart TV, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Do not spray liquid directly onto the screen.
- **Cleaning the Casing:** Use a soft, dry cloth to clean the TV's casing. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure that the ventilation openings on the TV are not blocked to prevent overheating.
- **Storage:** If storing the TV for an extended period, disconnect it from power and store it in a cool, dry place, away

from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues with your TV, refer to the following common troubleshooting steps:

Problem	Possible Solution
No Power	Check if the power cable is securely connected to both the TV and the power outlet. Ensure the power outlet is active. Try a different outlet.
No Picture / Black Screen	Ensure the correct input source is selected. Check all cable connections (HDMI, antenna). Try restarting the TV.
No Sound	Check the volume level and ensure the TV is not muted. If using external speakers, check their connections and power. Verify Bluetooth audio settings if connected to a soundbar.
Cannot Connect to Wi-Fi	Ensure your Wi-Fi router is on and within range. Re-enter the Wi-Fi password carefully. Try restarting both the TV and the router.
Remote Control Not Working	Check and replace the batteries (2x AAA). Ensure there are no obstructions between the remote and the TV's IR sensor.


If the problem persists after trying these solutions, please contact Cello customer support.

Specifications

Key technical specifications for the Cello 22-inch Smart Camping TV:

Feature	Specification
Brand	Cello
Model Number	CS22WS01T
Screen Size	22 Inches
Display Technology	LED
Resolution	1080p (Full HD)
Refresh Rate	60 Hz
Operating System	WebOS Hub
Connectivity	Bluetooth, Wi-Fi, USB (1 port), Ethernet, HDMI (multiple ports)
Power Supply	12V DC / 220V AC (Mains)
Special Features	Built-In Speaker, Headphone Socket, Web Browser, USB Recording

Feature	Specification
Product Dimensions (W x H x D)	50 cm x 33 cm x 15 cm (approximate)

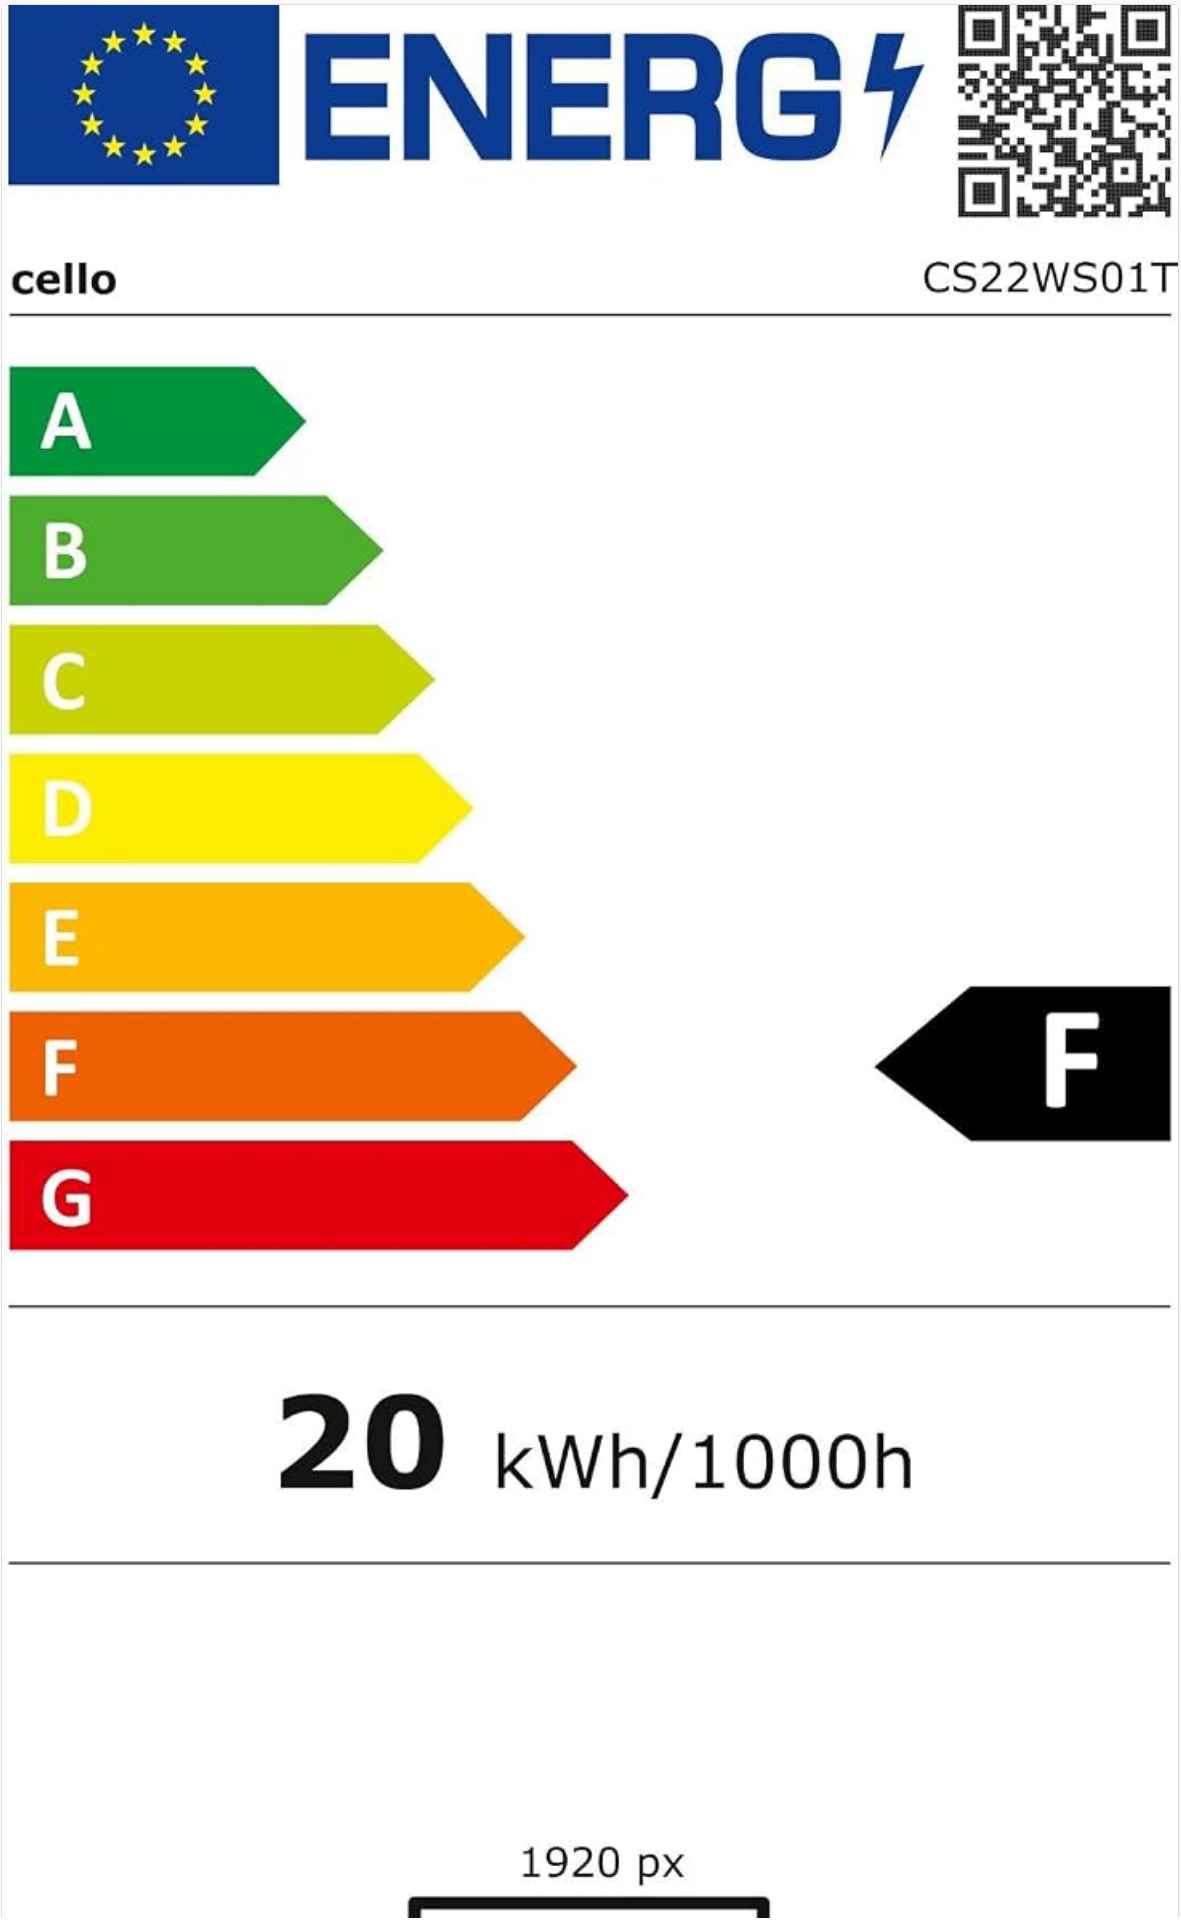

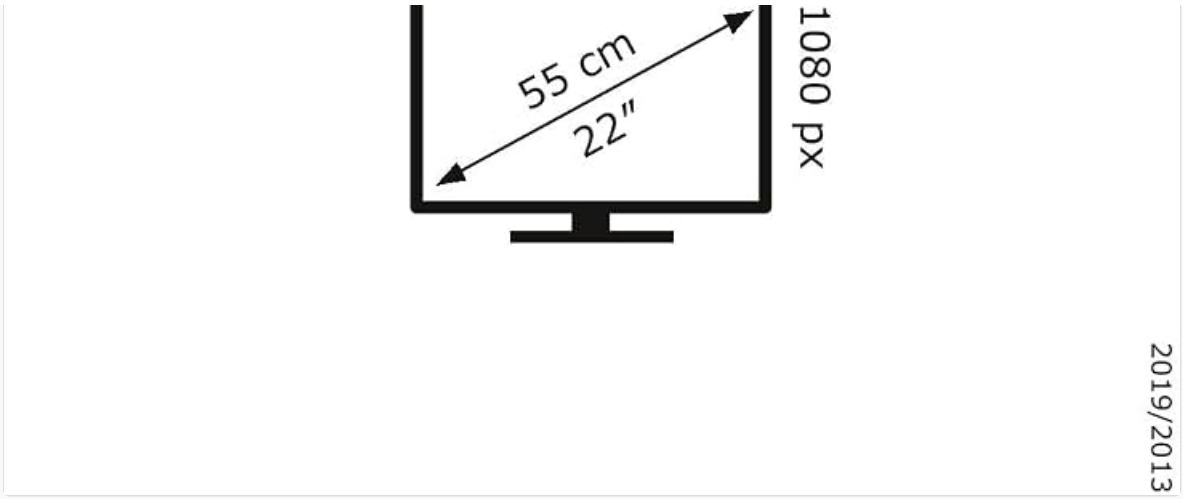


Image: Energy efficiency label for the Cello 22-inch Smart TV. For more details, refer to the EPREL database.

Fiche d'information sur le produit

RÈGLEMENT DÉLÉGUÉ (UE) 2019/2013 DE LA COMMISSION en ce qui concerne l'étiquetage énergétique des dispositifs d'affichage électronique

	Paramètre	Paramètre ou valeur et précision			Unité
1.	Nom ou marque commerciale du fournisseur.	cello			
	Adresse du fournisseur.	Cello sales service, Dovecot Hill, Bishop Auckland, DL14 6XW Durham England, UK			
2.	Référence du modèle	CS22WS01T			
3.	Classe d'efficacité énergétique pour la gamme dynamique standard (SDR)	F			
4.	Puissance appelée en mode marche en SDR			20,0	W
5.	Classe d'efficacité énergétique pour la haute gamme dynamique (HDR)	s.o.			
6.	Puissance appelée en mode marche pour la haute gamme dynamique (HDR), le cas échéant			s.o.	W
7.	Puissance appelée en mode arrêt, le cas échéant			0,0	W
8.	Puissance appelée en mode veille, le cas échéant			0,4	W
9.	Puissance appelée en mode veille avec maintien de la connexion au réseau, le cas échéant			s.o.	W
10.	Catégorie de dispositif d'affichage électronique			Téléviseur	
11.	Rapport de taille	16	:	9	
12.	Résolution d'écran	1 920	x	1 080	pixels
13.	Diagonale de l'écran			55,0	cm
14.	Diagonale de l'écran			22	pouces
15.	Surface visible de l'écran			12,8	dm²
16.	Technologie d'affichage utilisée			LCD	
17.	Réglage automatique de la luminosité (ABC) disponible			Non	
18.	Capteur de reconnaissance vocale disponible			Non	
19.	Capteur de présence disponible			Non	
20.	Taux de fréquence de rafraîchissement de l'image (par défaut)			60	Hz
21.	Disponibilité minimale garantie des mises à jour du logiciel et du micrologiciel (à compter de la date de fin de mise sur le marché)			-	Années
22.	Disponibilité minimale garantie des pièces de rechange (à compter de la date de fin de commercialisation)			-	Années
23.	Assistance produit minimale garantie			-	Années
	Durée minimale de la garantie générale offerte par le fournisseur			-	Années
24.	Type d'alimentation	Externe			
25.	Alimentation externe (incluse dans l'emballage du produit)				

Page 1 / 2

	i	Class 2 Power Supply AC ADAPTER		
	ii	Tension d'entrée	230	V
	iii	Tension de sortie	12,0	V
26.	Alimentation externe normalisée (ou appropriée si non incluse dans l'emballage du produit)			
	i	-		
	ii	Tension de sortie requise	-	V
	iii	Intensité du courant à fournir (minimale)	-	A
	iv	Fréquence du courant requise	-	Hz

Page 2 / 2

Image: A product information sheet providing detailed technical specifications. Further information is available on the EPREL database.

Warranty and Support

Cello Electronics is a British company that manufactures its TVs in Europe. They offer customer support based in Europe.

- For warranty information, please refer to the documentation included with your purchase or visit the official Cello Electronics website.
- For technical assistance or support, you can contact Cello customer service.

© 2023 Cello Electronics. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C1C4C9NV

More documents and user manuals: **https://manuals.plus/**