Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OLEVS GW-G6617

OLEVS G6617 Automatic Mechanical Watch User Manual

Model: GW-G6617

Introduction

This manual provides detailed instructions for the proper use and care of your OLEVS G6617 Automatic Mechanical Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.
The OLEVS G6617 features an automatic mechanical movement, a high-hardness coated glass mirror, and a multi-functional dial displaying moon phase, week, and date. It also includes luminous hands for visibility in low light conditions.

Setup and Initial Winding

Your OLEVS G6617 watch is powered by an automatic mechanical movement, which means it does not require a battery. It is powered by the natural motion of your arm. For initial setup or if the watch has stopped, follow these steps:

1. **Manual Winding:** To initiate power, gently rotate the crown (located on the right side of the watch case) clockwise approximately 30 to 40 times while it is in its normal, pushed-in position. This will provide sufficient power to start the movement.
2. **Wearing the Watch:** For continuous operation, wear the watch for at least 8 hours a day. Your arm's movement will keep the watch wound. If worn less frequently, manual winding may be necessary to maintain accurate time.



Image: The OLEVS G6617 Automatic Mechanical Watch, showcasing its intricate dial, stainless steel and gold-tone bracelet, and the transparent case back revealing the mechanical movement. Also shown are tools for strap adjustment.

Operating Instructions

The OLEVS G6617 features a multi-functional dial. Here's how to adjust its various functions:



Image: Close-up of the OLEVS G6617 watch face, highlighting the crown and two adjustment buttons on the side of the case. Labels indicate 'Adjust week button', 'Pull out adjustment time / Moon phases move with time', and 'Adjust calendar button'.

1. **Setting the Time:**
    - Pull the crown out to the outermost position.
    - Rotate the crown to set the hour and minute hands to the correct time.
    - Push the crown back in to its normal position to start the watch.
2. **Adjusting the Week Display:**
    - Locate the "Adjust week button" (typically the upper button on the side of the case).
    - Press this button to advance the week pointer to the correct day of the week.
3. **Adjusting the Date Display:**
    - Locate the "Adjust calendar button" (typically the lower button on the side of the case).
    - Press this button to advance the calendar pointer to the correct date.
4. **Moon Phase Display:**
    - The moon phase display automatically advances with the time. It shows a sun during the day and a moon/stars at night.
    - This function is synchronized with the main time setting.
5. **Luminous Function:**
    - The watch hands and markers feature a luminous coating for visibility in the dark.
    - To activate or enhance the luminosity, expose the watch to a strong light source (e.g., a phone flashlight) for 30-40 seconds.



Image: A detailed view of the OLEVS G6617's moon phase display, illustrating its automatic transition between sun (daytime) and moon with stars (nighttime) indicators.

Maintenance and Care

Proper maintenance ensures the longevity and accuracy of your OLEVS watch.

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. For the stainless steel strap, a slightly damp cloth can be used, followed by immediate drying.
- **Water Resistance:** The watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for daily use, hand washing, and light rain. It is suitable for swimming but **not** for diving or hot water activities (e.g., showering, sauna), as steam can penetrate the seals. Ensure the crown is fully pushed in before any contact with water.
- **Avoid Extreme Conditions:** Protect your watch from extreme temperatures, strong magnetic fields, and harsh chemicals.
- **Storage:** When not wearing the watch for extended periods, store it in a cool, dry place, preferably in its original box or a watch case.

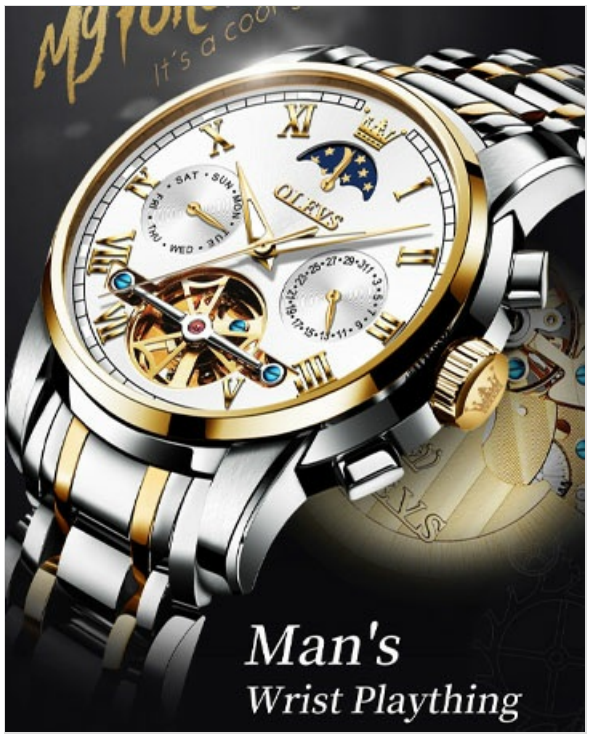


Image: The OLEVS G6617 watch being splashed with water, demonstrating its 30-meter water resistance. This indicates suitability for activities like hand washing and light swimming.

Troubleshooting

If you encounter any issues with your OLEVS G6617 watch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Watch stops or runs inaccurately.	Insufficient power reserve.	Manually wind the watch by rotating the crown clockwise 30-40 times. Wear the watch for at least 8 hours daily.
Date or day display is incorrect.	Needs manual adjustment.	Use the respective adjustment buttons for the week and calendar. Avoid adjusting between 9 PM and 3 AM to prevent damage to the movement.
Luminous hands are dim.	Insufficient light exposure.	Expose the watch to a strong light source for 30-40 seconds to recharge the luminous material.
Condensation under the glass.	Exposure to extreme temperature changes or water ingress.	Immediately take the watch to a qualified watchmaker for inspection and repair. Do not attempt to open the watch yourself.

Specifications

Feature	Detail
Brand	OLEVS
Model Number	GW-G6617
Movement	Automatic Mechanical

Feature	Detail
Case Material	Stainless Steel
Case Diameter	41 mm
Case Thickness	12.5 mm
Strap Material	Stainless Steel
Strap Length	220 mm
Strap Width	20 mm
Weight	153 g
Glass Material	High Hardness Coated Glass
Water Resistance	30 Meters (3 ATM)
Functions	Time, Week, Date, Moon Phase, Luminous Hands
Country of Origin	China

Warranty and Support

For any questions, concerns, or warranty claims regarding your OLEVS G6617 watch, please contact the retailer or the official OLEVS customer support channel where you purchased the product.
Please retain your proof of purchase for warranty validation.

© 2023 OLEVS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C1K5N6R3

More documents and user manuals: **https://manuals.plus/**