Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY CV-AK59-00104J-SH

AK59-00104J Replacement Remote Control User Manual

Brand: ALLIMITY | **Model:** CV-AK59-00104J-SH

1. Introduction and Overview

This manual provides comprehensive instructions for the ALLIMITY AK59-00104J Replacement Remote Control, designed to be compatible with various Samsung DVD Player models. This remote serves as a direct replacement for your original or broken remote, offering immediate functionality without complex setup.

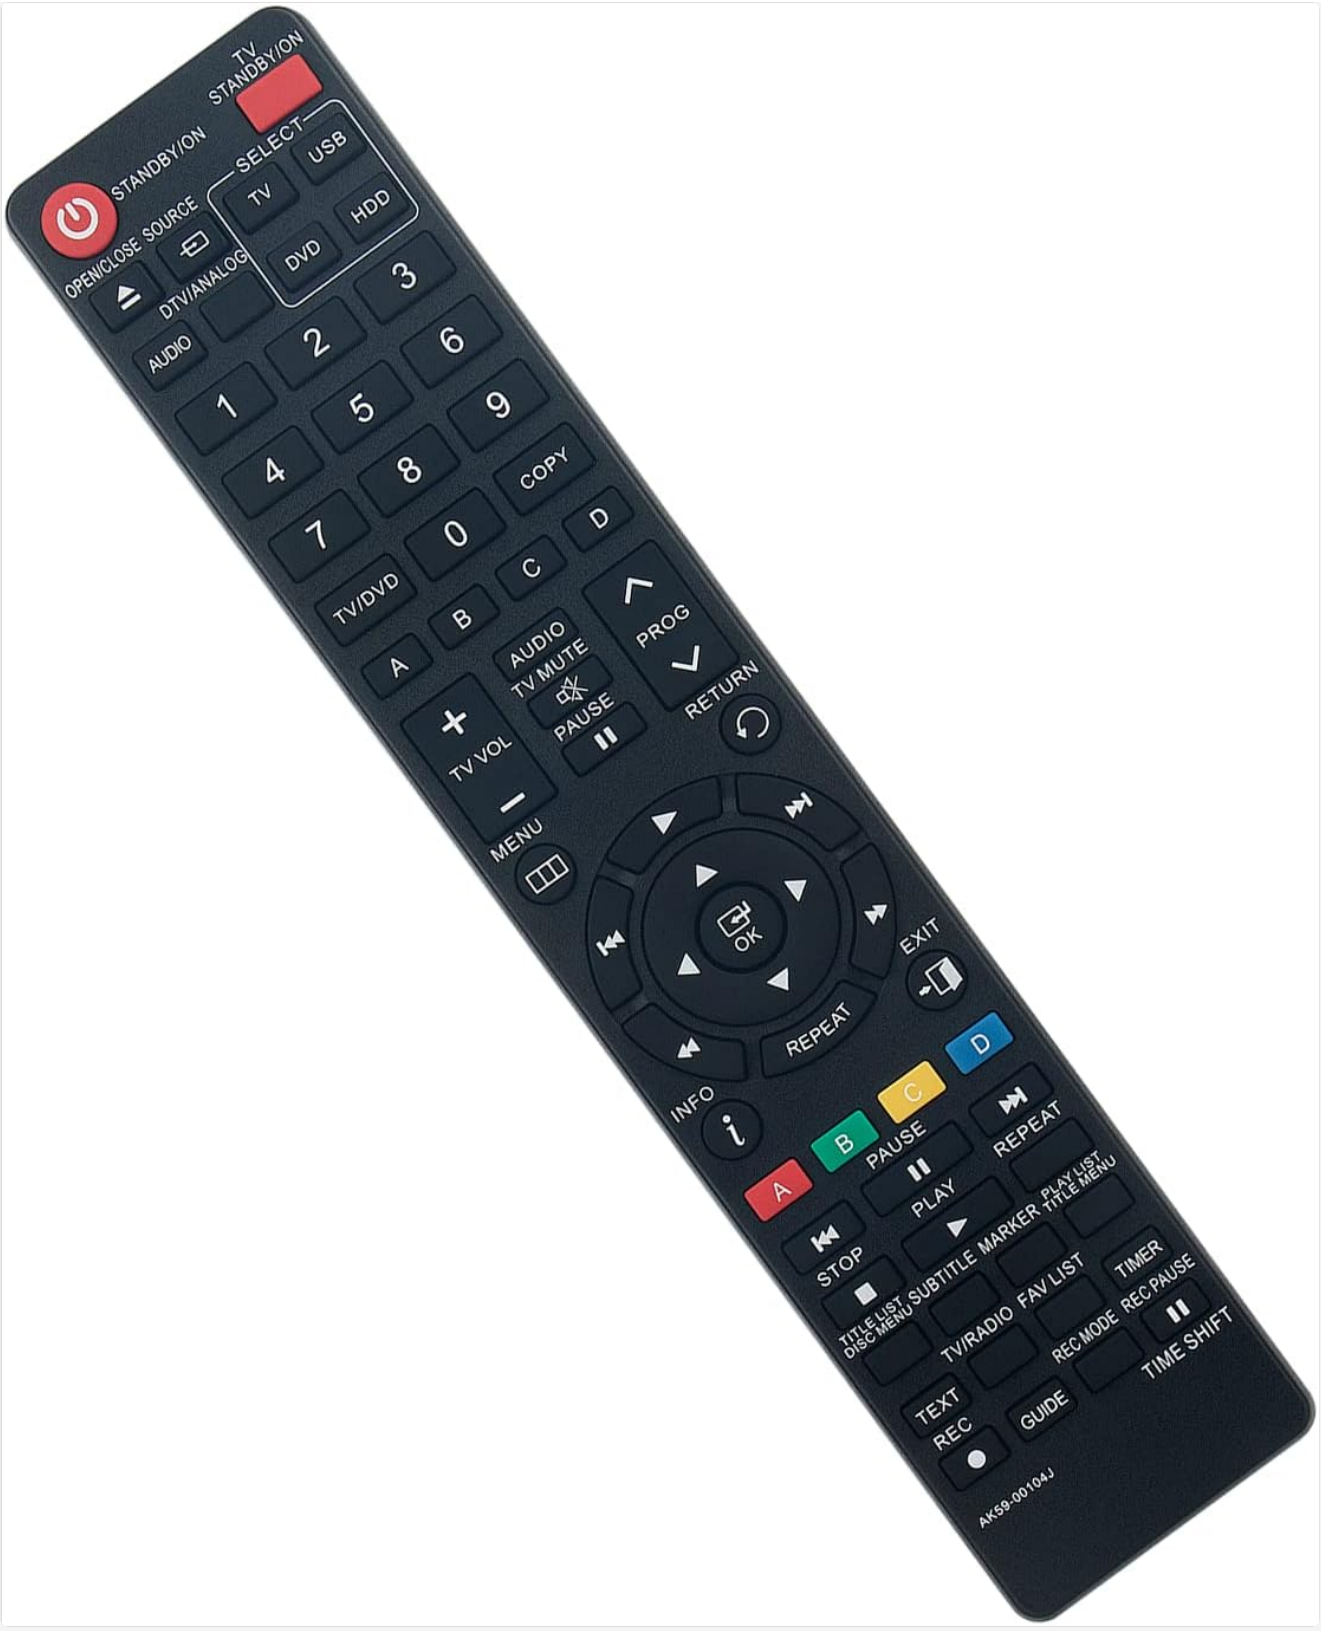


Figure 1: ALLIMITY AK59-00104J Replacement Remote Control

Key Features:

- Direct replacement for Samsung DVD Player remote models AK59-00104J and AK5900104J.
- No programming or setup required; ready to use upon battery insertion.
- Compatible with a range of Samsung DVD Player models including DVD-SH893A, DVD-SH893, DVD-SH895A, DVD-SH897A, DVD-SH895, DVD-SH897, DVDSH895A, DVDSH893, DVDSH897A, DVDSH897, DVDSH893A, and DVDSH895.

2. Setup

2.1 Battery Installation

The remote control requires two (2) 1.5V AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2: Battery Compartment on the back of the remote

Once batteries are installed, the remote control is ready for immediate use with compatible Samsung DVD Players.

3. Operating Instructions

This remote control is designed to replicate the functions of the original Samsung DVD Player remote. No pairing or programming is necessary. Simply point the remote at your Samsung DVD Player and press the desired function button.





Figure 3: Remote Control Button Layout

3.1 Basic Functions

- **POWER (STANDBY/ON):** Turns the DVD player on or off.
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **SOURCE/SELECT:** Switches input sources (e.g., TV, DVD, USB, HDD).
- **Number Buttons (0-9):** Used for direct track selection or inputting numbers.
- **PLAY (►):** Starts playback.
- **PAUSE (▮▮):** Pauses playback.
- **STOP (■):** Stops playback.
- **REWIND (◀◀):** Rewinds playback.

- **FAST FORWARD (►►):** Fast forwards playback.
- **PREVIOUS (◀◀|):** Skips to the beginning of the current track or previous track.
- **NEXT (►►|):** Skips to the next track.
- **MENU:** Accesses the DVD player's main menu.
- **OK:** Confirms selections within menus.
- **Arrow Buttons (▲ ◀ ▼ ►):**Navigates through menus and options.
- **RETURN:** Returns to the previous screen or menu.
- **TV VOL (+/-):** Adjusts TV volume (if programmed or compatible).
- **TV MUTE:** Mutes TV audio (if programmed or compatible).

3.2 Compatible Models

This remote control is compatible with the following Samsung DVD Player models:

- DVD-SH893A
- DVD-SH893
- DVD-SH895A
- DVD-SH897A
- DVD-SH895
- DVD-SH897
- DVDSH895A
- DVDSH893
- DVDSH897A
- DVDSH897
- DVDSH893A
- DVDSH895
- AK59-00104J (Original Remote Model)
- AK5900104J (Original Remote Model)

4. Maintenance

4.1 Cleaning

To maintain the remote control's functionality and appearance:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, abrasive cleaners, or immerse the remote in water.

4.2 Storage

When not in use for extended periods, it is recommended to:

- Remove the batteries to prevent leakage and potential damage to the remote.
- Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

5. Troubleshooting

If you experience issues with your ALLIMITY AK59-00104J Replacement Remote Control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control does not work.	• Batteries are dead or inserted incorrectly. • Infrared (IR) sensor on DVD player is obstructed. • Remote control is too far from the DVD player or not pointed correctly. • DVD player is not powered on.	• Replace batteries with new 1.5V AAA batteries, ensuring correct polarity (+/-). • Remove any obstructions between the remote and the DVD player's IR sensor. • Ensure you are within range and pointing the remote directly at the DVD player. • Verify the DVD player is powered on.
Some buttons do not respond.	• Button may be stuck or dirty. • Specific function not supported by your DVD player model.	• Gently press the button multiple times to dislodge any debris. • Confirm the function is available on your specific Samsung DVD player model.

6. Specifications

Feature	Detail
Product Model Number	CV-AK59-00104J-SH
Brand	ALLIMITY
Compatible Devices	Samsung DVD/Blu-ray Players (specific models listed in Section 3.2)
Connectivity Technology	Infrared (IR)
Power Supply	2 x 1.5V AAA Batteries (not included)
Product Dimensions	6.5 x 1.38 x 0.72 inches
Item Weight	2 ounces
Special Feature	No Programming Required

7. Warranty and Support

For specific warranty information or technical support regarding your ALLIMITY AK59-00104J Replacement Remote Control, please refer to the documentation provided with your purchase or contact the seller directly. As a replacement part, warranty terms may vary.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C1N5J66R

More documents and user manuals: **https://manuals.plus/**