E-YOOSO X-31

E-YOOSO X-31 Large Bluetooth Wireless Mouse

INSTRUCTION MANUAL

Introduction

Thank you for choosing the E-YOOSO X-31 Large Bluetooth Wireless Mouse. This manual provides detailed instructions for setting up, operating, and maintaining your new mouse. Designed for comfort and efficiency, the X-31 offers versatile connectivity options and adjustable performance settings to enhance your computing experience.



Image: Top view of the E-YOOSO X-31 Large Bluetooth Wireless Mouse, showcasing its ergonomic design and button layout.

What's in the Box

- E-YOOSO X-31 Large Bluetooth Wireless Mouse

- USB Nano Receiver

Note: 1 AA battery is required for operation and is not included.

Features

- **Dual Device Connection:** Seamlessly switch between Bluetooth (3.0/5.0) and 2.4GHz wireless USB receiver modes, allowing connection to multiple devices like PCs, laptops, and tablets.
- **Ergonomic Design:** Contoured shape with anti-slip and anti-sweat material, designed to fit large hands comfortably. Features finger rests and conveniently placed forward and backward buttons for enhanced web browsing efficiency.
- **Adjustable DPI & Polling Rate:** Five adjustable DPI levels (800/1200/1600/2000/4800) for precise cursor control. Two polling rates (125Hz/250Hz) for responsive tracking.
- **Extended Battery Life:** Up to 18 months of battery life with smart auto-sleep mode to conserve power when not in use.
- **Wide Compatibility:** Compatible with Windows, Linux, Chromebook, Mac OS (side buttons not available), Android, and various devices with USB ports or Bluetooth capability.



Image: Illustration highlighting the ergonomic shape and finger rests of the E-YOOSO X-31 mouse, designed for comfortable use.



Image: Detailed view of the thumb rest and multi-finger rests, emphasizing the comfortable grip provided by the mouse's design.

Setup

1. Battery Installation

1. Open the battery compartment on the bottom of the mouse.
2. Insert one AA battery, ensuring correct polarity (+/-).
3. Close the battery compartment.

2. Connecting Your Mouse

The E-YOOSO X-31 mouse supports two connection modes: 2.4GHz Wireless (via USB receiver) and Bluetooth (BT3.0/BT5.0).



Image: Labeled diagram showing the various buttons and components of the E-YOOSO X-31 mouse, including the USB receiver storage.

2.1. 2.4GHz Wireless Connection

1. Locate the USB Nano Receiver stored in the battery compartment on the bottom of the mouse.
2. Plug the USB receiver into an available USB port on your computer or device.
3. Slide the mode switch on the bottom of the mouse to the '2.4G' position.
4. The mouse should automatically connect and be ready for use.

2.2. Bluetooth Connection (BT3.0 / BT5.0)

1. Slide the mode switch on the bottom of the mouse to the 'BT' position.
2. Press and hold the Bluetooth Pairing Button (located on the bottom of the mouse, near the mode switch) for 3-5 seconds until the indicator light starts blinking, indicating pairing mode.
3. On your device (PC, laptop, tablet, smartphone), go to Bluetooth settings and search for new devices.
4. Select 'E-YOOSO X-31' or a similar name from the list of available devices to pair.
5. Once paired, the indicator light on the mouse will stop blinking and remain solid for a few seconds, then turn off.



Image: Visual representation of the E-YOOSO X-31 mouse connecting to a phone via Bluetooth 5.0, a monitor via Bluetooth 3.0, and a laptop via 2.4G wireless, demonstrating its multi-device capability.

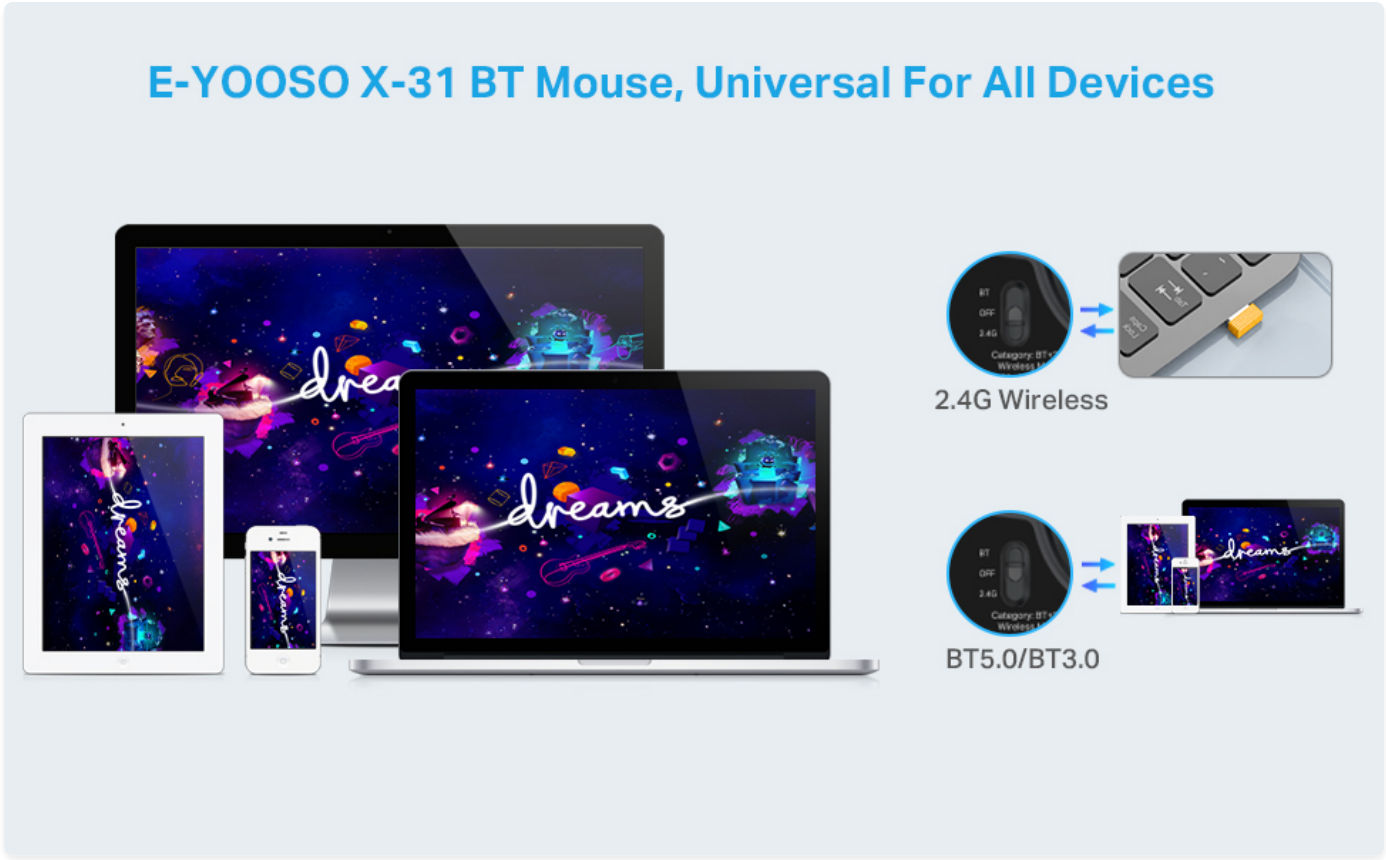


Image: Illustrates the two primary connection methods: plugging in the 2.4G USB receiver for wireless connection and pairing via Bluetooth for BT5.0/BT3.0 devices.

Operating Instructions

1. DPI Adjustment

The mouse features a dedicated DPI button to cycle through five sensitivity levels:

- 800 DPI
- 1200 DPI (Default)
- 1600 DPI
- 2000 DPI
- 4800 DPI

Press the **DPI Button** (located behind the scroll wheel) to switch between these levels. The cursor speed will change accordingly.



Image: Graphic illustrating the 5-level DPI adjustment (800-4800) and the location of the DPI button on the E-YOOSO X-31 mouse.

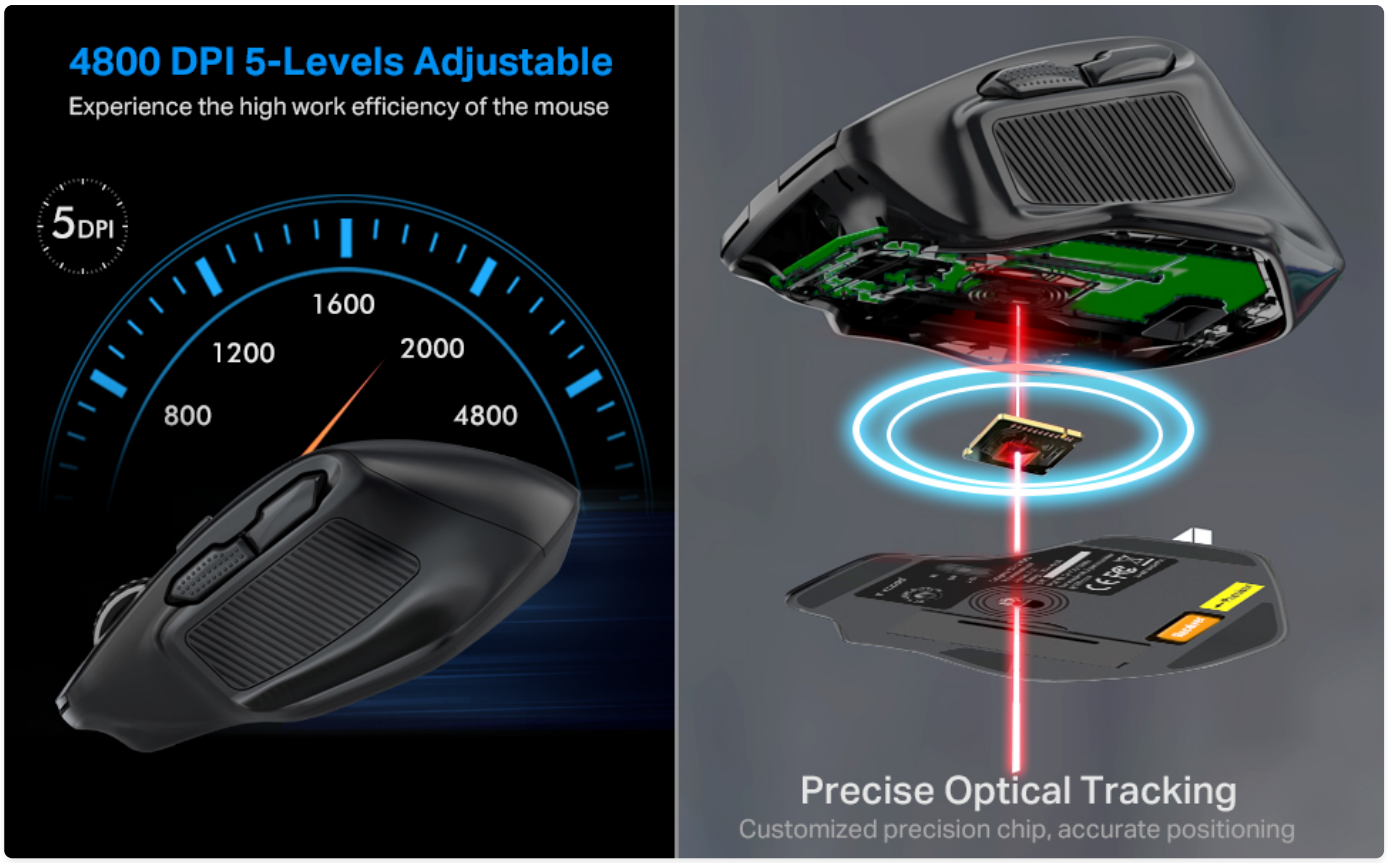


Image: Shows the DPI adjustment interface and a cutaway view of the mouse highlighting its precise optical sensor for accurate tracking.

2. Polling Rate Adjustment

To switch between polling rates (125Hz or 250Hz), press the**Right Button** and the **Middle Button (Scroll Wheel)** simultaneously for 3 seconds. This adjusts the mouse's reporting rate to the computer, affecting responsiveness.

3. Button Functions

- **Left Button:** Standard click function.
- **Right Button:** Context menu function.
- **Medium Scroller (Scroll Wheel):** Scroll up/down, middle click.
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Back Button:** Navigates backward in web browsers or file explorers.
- **DPI Button:** Cycles through DPI settings.
- **BT Pairing Button:** Initiates Bluetooth pairing mode (on bottom).
- **Bluetooth Wireless Mode Switching Button:** Switches between 2.4G and Bluetooth modes (on bottom).

Maintenance

1. Battery Life & Power Saving Mode

The E-YOOSO X-31 mouse is designed for extended battery life, up to 18 months. To maximize battery life, the mouse features a smart auto-sleep mode. If the mouse is not used for approximately 8 minutes, it will automatically enter a dormant state to save power. To reactivate the mouse, simply click any button.



Image: Shows the E-YOOSO X-31 mouse with an overlay indicating its auto-sleep feature and 18-month battery life, along with its dimensions.

2. Cleaning

The mouse is made with anti-slip and anti-sweat custom material. To clean, gently wipe the surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the mouse. Avoid using harsh chemicals or abrasive materials.

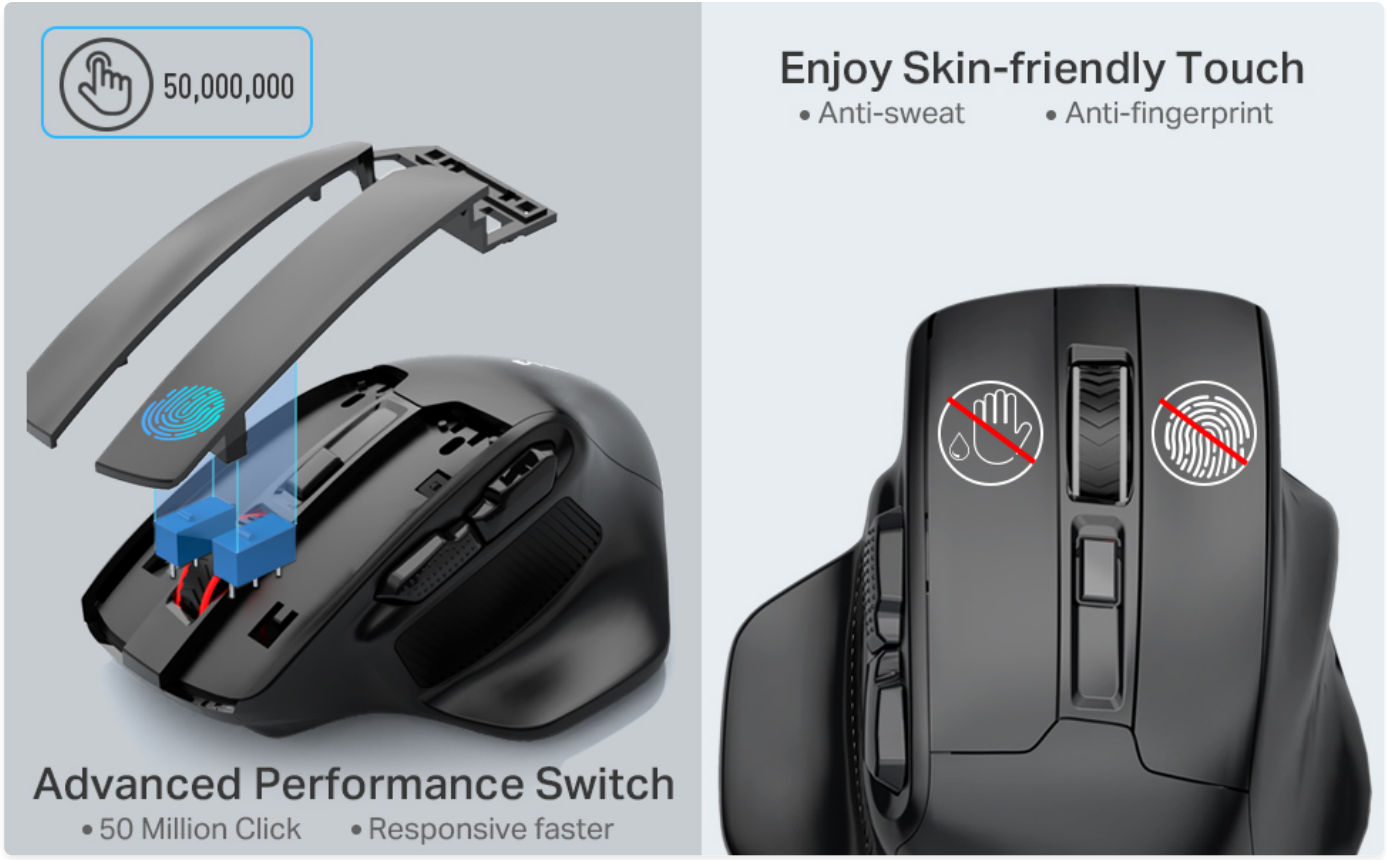


Image: Highlights the skin-friendly touch of the mouse, emphasizing its anti-sweat and anti-fingerprint properties for easy maintenance.

Troubleshooting

- **Mouse Not Responding:**
  - Check if the battery is inserted correctly and has sufficient charge. Replace if necessary.
  - Ensure the mode switch on the bottom of the mouse is set to the correct connection type (2.4G or BT).
  - For 2.4G wireless, ensure the USB receiver is securely plugged into a working USB port. Try a different USB port.
  - For Bluetooth, ensure Bluetooth is enabled on your device and the mouse is properly paired. Try re-pairing the mouse.
- **Side Buttons Not Working on Mac:**
  - The forward and backward side buttons are not natively supported on Mac OS. This is a system limitation, not a mouse defect.
- **Lag or Intermittent Connection:**
  - Ensure the mouse is within the effective operating range (up to 33ft/10m).
  - Reduce interference by moving the mouse away from other wireless devices (e.g., Wi-Fi routers, other Bluetooth devices).
  - Ensure the mouse surface is clean and suitable for optical tracking.

Specifications

Brand	E-YOOSO
Model Number	X-31
Color	Black (Bluetooth+Wireless)
Connectivity Technology	Bluetooth (3.0/5.0), 2.4GHz USB Wireless
Movement Detection Technology	Optical
DPI Levels	800 / 1200 / 1600 / 2000 / 4800
Polling Rate	125Hz / 250Hz
Battery Life	Up to 18 Months
Power Saving Mode	Automatic Sleep after 8 minutes of inactivity
Item Weight	5.9 ounces
Package Dimensions	7.44 x 5.31 x 2.32 inches

Compatibility

The E-YOOSO X-31 Large Bluetooth Wireless Mouse is widely compatible with various operating systems and devices:

- Windows 11, 10, 8.1, 8, 7, XP, Vista
- Linux
- Chromebook
- Mac OS (*Note: Side buttons are not available on Mac systems*)
- Android
- Surface Pro, Surface
- Any device with USB Ports (for 2.4GHz wireless)
- iPad, Smart Phone, PC, Laptop, MacBook (for Bluetooth connection)



Image: Icons representing various operating systems (Android, Vista, Mac, Windows, Linux, Chrome) indicating the wide compatibility of the E-YOOSO X-31 mouse.



Image: Depicts the E-YOOSO X-31 mouse used with a laptop, monitor, and tablet, illustrating its ability to work seamlessly across different devices.

Warranty and Support

For any product inquiries, technical support, or warranty claims, please contact E-YOOSO customer service through the retailer's platform or the official E-YOOSO website. Please retain your proof of purchase for warranty purposes.

© 2023 E-YOOSO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question