Music Sound BTSWAGP

Music Sound SWAG Wireless Earbuds User Manual

Model: BTSWAGP

Introduction

Thank you for choosing the Music Sound SWAG Wireless Earbuds. These earbuds are designed to provide a seamless audio experience with Bluetooth connectivity, touch controls, and a comfortable in-ear fit. This manual will guide you through the setup, operation, and maintenance of your new earbuds.



Image: Music Sound SWAG Wireless Earbuds and Charging Case.

What's in the Box

Ensure all items are present in the package:

- Music Sound SWAG Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- User Manual



Image: Package contents showing earbuds, charging case, USB-C cable, and user guide.

Setup

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place both earbuds into the charging case.
2. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power source (e.g., computer, wall adapter).
3. The LED indicator on the case will show charging status. Once fully charged, the indicator will change or turn off.

A full charge provides up to 20 hours of total playtime with the charging case, and approximately 4 hours on a single earbud charge.

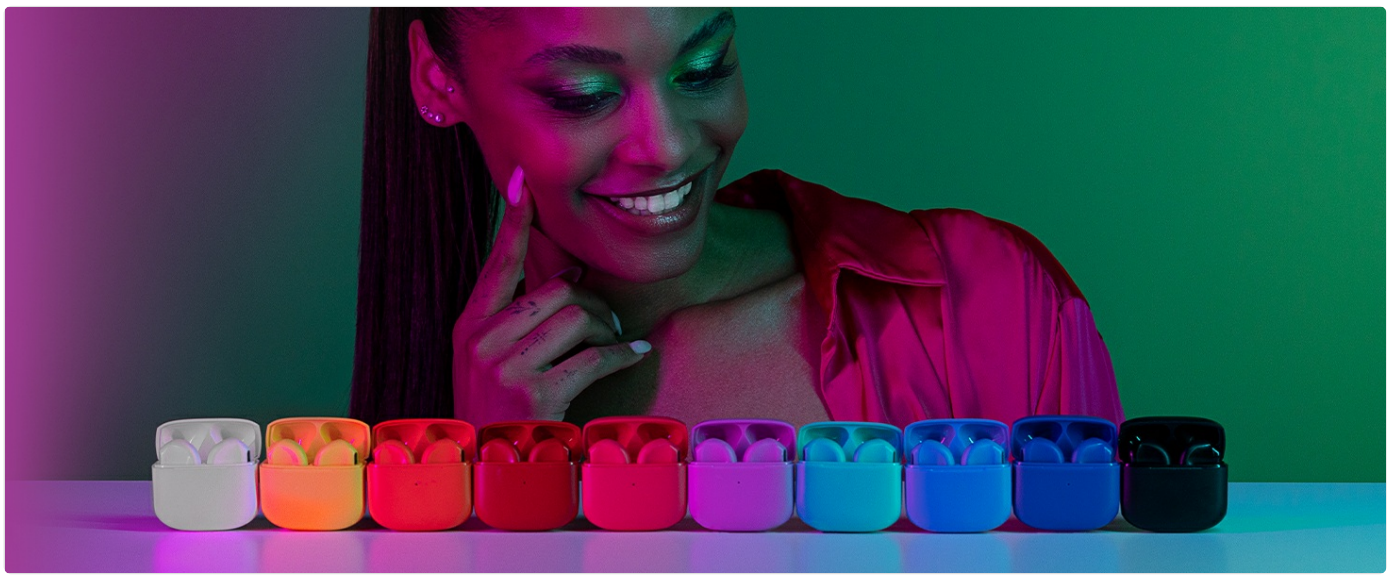


Image: Battery life indication for Music Sound SWAG Earbuds.

2. Automatic Pairing

The earbuds feature automatic pairing for easy connection to your Bluetooth device.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.

3. Select "Music Sound SWAG" from the list of available devices.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.
5. The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

Operating the Earbuds

The Music Sound SWAG earbuds are equipped with touch controls for convenient management of music and calls.

Touch Controls



Image: Touch control functions and LED battery indicator.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold on either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud (if supported by your device).
- **Volume Control:** *(Specific volume control gestures are not detailed in the provided data. If available, refer to the included user manual.)*

Power On/Off

- **Power On:** Open the charging case, or press and hold the touch area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid, or press and hold the touch area on both earbuds for 5 seconds.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your earbuds.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** The earbuds are water resistant. Avoid submerging them in water or exposing them to excessive moisture for prolonged periods. Dry them thoroughly if they get wet.
- **Charging:** Use only the provided USB-C cable or a certified equivalent for charging.

Troubleshooting

Problem	Solution
Earbuds not pairing with device.	• Ensure Bluetooth is enabled on your device. • Make sure the earbuds are charged and out of the case. • Forget "Music Sound SWAG" from your device's Bluetooth list and try pairing again. • Restart your device.
Only one earbud is working.	• Place both earbuds back into the charging case, close the lid, and then take them out again. • Ensure both earbuds are charged. • Try resetting the earbuds (refer to the full user manual for specific reset instructions if needed).
Earbuds not charging.	• Ensure the charging cable is securely connected to both the case and the power source. • Check if the charging port is clean and free of debris. • Try a different USB-C cable or power adapter. • Ensure the earbuds are correctly seated in the charging case.
Low volume or poor sound quality.	• Adjust the volume on both your device and the earbuds. • Ensure the earbuds are clean and free of earwax buildup. • Check for obstructions in the earbud speakers. • Ensure the earbuds are properly seated in your ears.

Specifications

Brand	Music Sound
Model Name	BTSWAGP
Model Number	BTMSTWSSWAGP
Color	Pink
Ear Placement	In-ear
Form Factor	True Wireless
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.0
Control Method	Touch
Average Battery Life	20 Hours (with charging case)

Frequency Range	20 Hz - 20,000 Hz
Water Resistance Level	Water Resistant
Recommended Uses	Music, Calls
Compatible Devices	Mobile Phones, Laptops, Tablets

Warranty Information

The Music Sound SWAG Wireless Earbuds come with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.
Please retain your proof of purchase for warranty claims.

Support

For further assistance, technical support, or warranty inquiries, please contact Music Sound customer service. Refer to the contact information provided in the packaging or visit the official Music Sound website.
You can also visit the Music Sound Store on Amazon for more product information.

© 2024 Music Sound. All rights reserved.