Nineigh S180

Nineigh 71" Phone Tripod Selfie Stick with Remote - User Manual

Model: S180 | Brand: Nineigh

1. Introduction

Thank you for choosing the Nineigh 71" Phone Tripod Selfie Stick with Remote. This versatile accessory is designed to enhance your mobile photography and videography experience, offering stability, adjustable height, and remote control convenience. Please read this manual carefully to ensure proper setup, operation, and maintenance of your device.



Image: The Nineigh 71" Phone Tripod shown as a tall tripod, a handheld selfie stick, and with its wireless remote.

2. Package Contents

Please verify that all items are present in your package:

- Tripod
- Remote Control

3. Product Overview

Familiarize yourself with the main components of your Nineigh Phone Tripod Stand:



Image: Exploded view highlighting the Universal Phone Holder, Standard 1/4 Screw, 180° Swing Knob, Aluminum Alloy Material, Selfie Stick Locking Knob, and Non-slip Rubber Feet.

- **Universal Phone Holder:** Securely holds smartphones from 2.28 to 4 inches wide. Features 360° rotation.
- **Standard 1/4" Screw:** Compatible with cameras, ring lights, and other accessories.
- **180° Swing Knob:** Allows for flexible angle adjustments of the phone holder.

- **Aluminum Alloy Material:** Provides a lightweight yet durable structure.
- **Selfie Stick Locking Knob:** Secures the extended sections of the stick.
- **Non-slip Rubber Feet:** Ensures stability when used as a tripod.
- **Cold Shoe Mount:** Integrated into the phone holder for attaching additional accessories like microphones or LED lights.

4. Setup Instructions

4.1 Unfolding the Tripod

1. Gently pull the legs outwards from the base of the tripod until they are fully extended and stable.
2. Ensure the legs are locked into position for maximum stability.

4.2 Adjusting Height

The tripod can extend from a folded size of 19.6 inches to a maximum height of 71 inches.



Image: Visual representation of the tripod's adjustable height, from its compact form to its full 71-inch extension.

1. To extend, unlock the section clamps on the central pole.
2. Pull each section upwards to the desired height.
3. Securely lock each clamp to prevent the pole from collapsing.

4.3 Attaching Your Device

The universal phone holder supports smartphones between 2.28 and 4 inches in width. It also features a standard 1/4" screw for other compatible devices.



Image: Detailed view of the universal phone holder, its rotation, cold shoe mount, and 1/4" screw, illustrating broad device compatibility.

1. **For Smartphones:** Expand the phone holder clamps and carefully insert your smartphone. Ensure it is securely gripped.
2. **For Cameras/Other Devices:** If your device has a 1/4" screw mount, attach it directly to the standard 1/4" screw on the tripod head.

4.4 Pairing the Remote Control

The included wireless remote control allows you to trigger your phone's camera from up to 33 feet (10 meters) away.

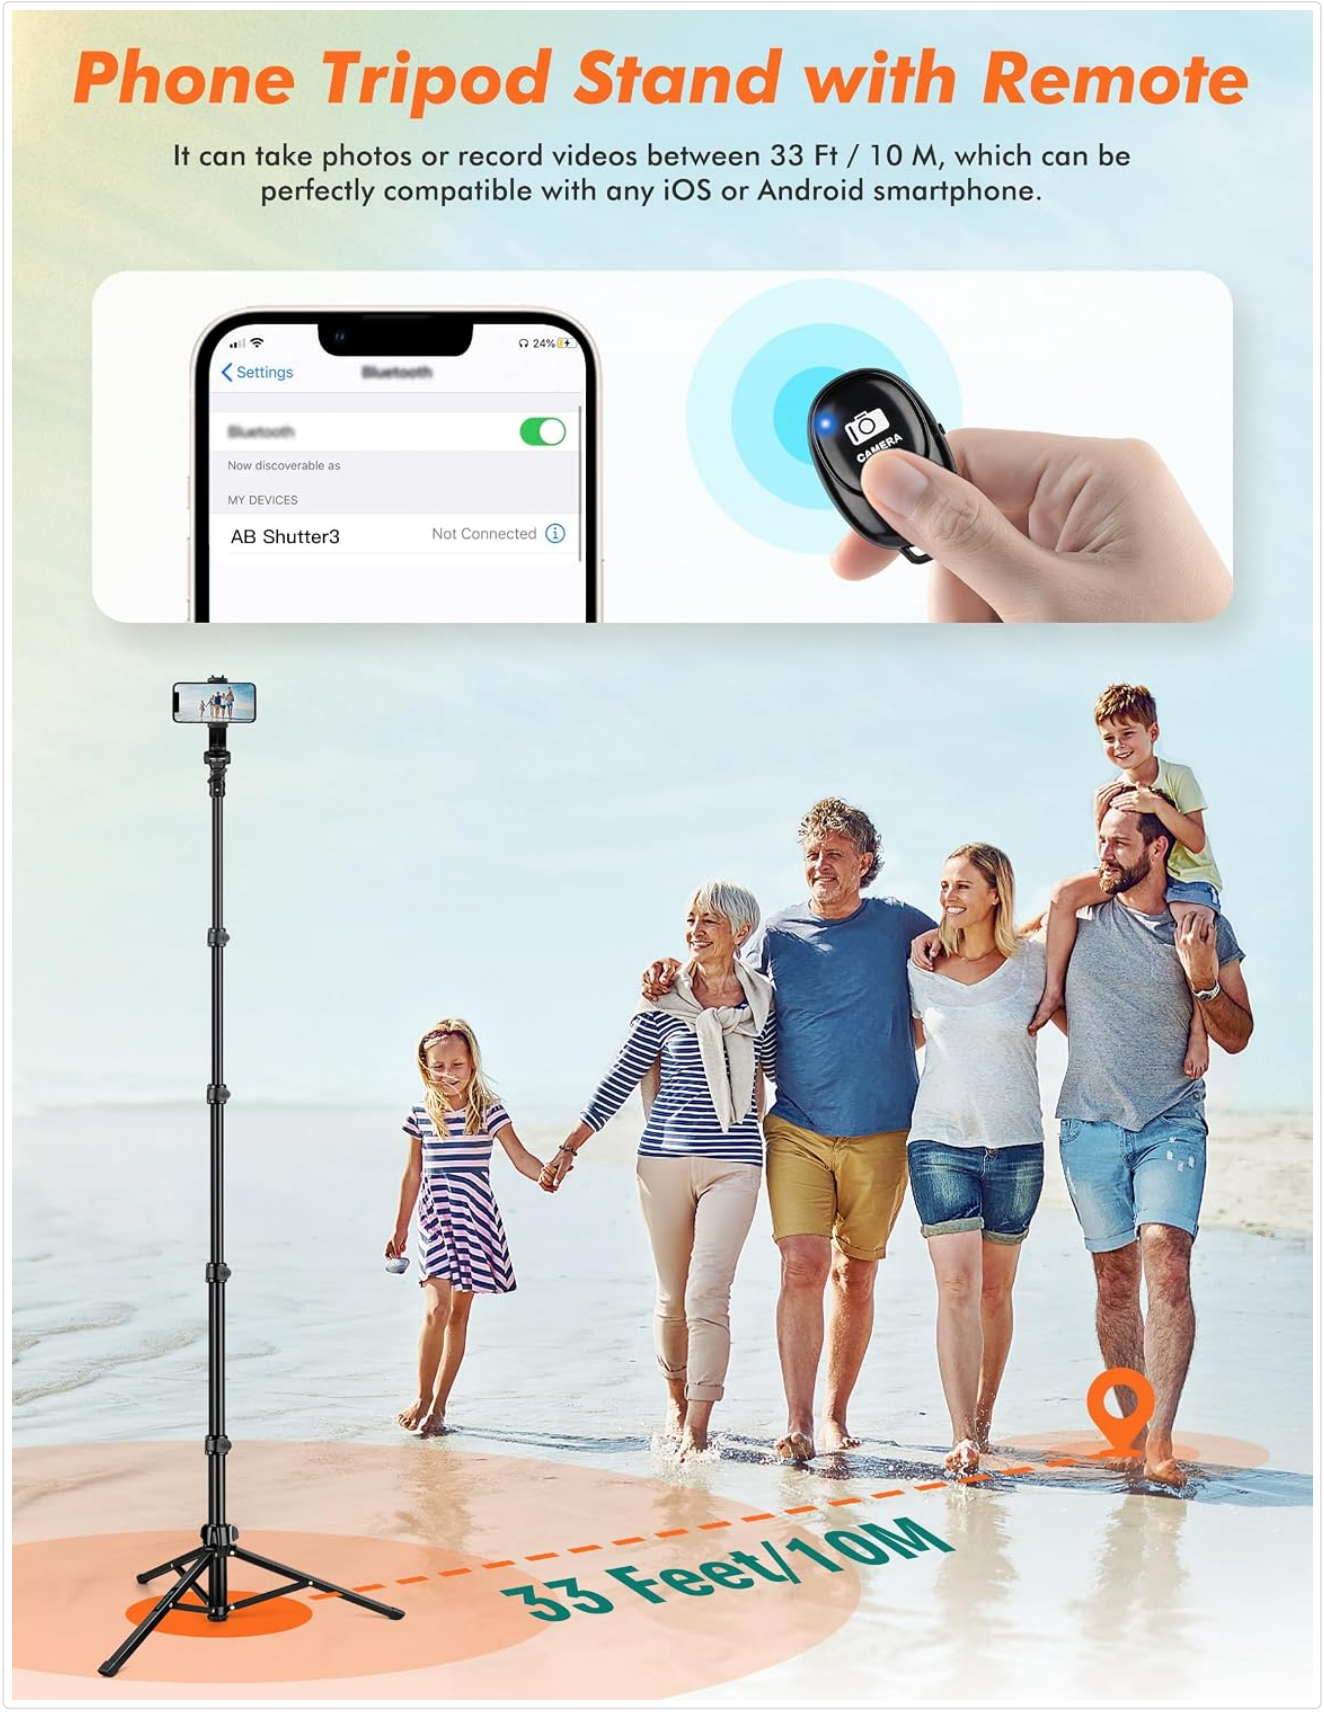


Image: The wireless remote control and a smartphone displaying Bluetooth pairing instructions.

1. Turn on the remote control using the ON/OFF switch. The LED indicator will flash.
2. On your smartphone, go to Bluetooth settings and enable Bluetooth.
3. Look for a device named 'AB Shutter3' (or similar) in the list of available devices and select it to pair.
4. Once paired, the LED indicator on the remote will stop flashing.
5. Open your phone's camera app. The remote button will now trigger the shutter.

5. Operating Instructions

5.1 Using as a Tripod

For stable shots, extend the tripod legs fully and place it on a flat, stable surface. Adjust the height and angle as needed.

5.2 Using as a Selfie Stick

When using as a selfie stick, ensure the tripod legs are folded and locked against the central pole. Hold the handle firmly and extend the pole to your desired length.

5.3 Adjusting Shooting Angles

The tripod offers flexibility for various shooting angles:



Image: Examples of parallel, overhead, and 90-degree shooting angles using the tripod.

- The phone holder can rotate 360° for portrait or landscape orientation.
- Use the 180° swing knob to tilt your device up or down for optimal framing.

5.4 Capturing Photos/Videos with Remote

Once the remote is paired, open your phone's camera application. Press the button on the remote to take photos or start/stop video recording.

6. Maintenance

6.1 Cleaning

Wipe the tripod with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish.

6.2 Storage

When not in use, fold the tripod to its compact size and store it in the provided carry bag in a cool, dry place away from direct sunlight and extreme temperatures.



Image: The tripod in its portable carry bag, emphasizing its travel-friendly design.

7. Troubleshooting

7.1 Remote Control Not Connecting

- Ensure the remote control is turned on and within 33 feet (10 meters) of your phone.
- Check your phone's Bluetooth settings to confirm Bluetooth is enabled and the remote is visible or paired.
- If already paired, try unpairing and re-pairing the remote.
- Check the remote's battery.

7.2 Tripod Instability

- Ensure all leg sections and pole clamps are fully extended and securely locked.
- Verify that the tripod is placed on a flat, stable surface.
- Avoid over-extending the tripod in windy conditions, which can affect stability.

7.3 Phone Not Holding Securely

- Ensure your phone's width is within the supported range (2.28 - 4 inches).
- Make sure the phone is centered and firmly gripped by the holder's clamps.

8. Specifications

Feature	Specification
Product Dimensions	19.6 x 22.65 x 71 inches
Item Weight	1.74 pounds (0.79 Kilograms)
Model Number	S180

Feature	Specification
Brand	Nineigh
Color	Black
Compatible Devices	Camera, Smartphone (iPhone 16, 15, 14, 13, XS, X, 8 Plus, XR, 11 Pro, Galaxy S10, Google, most smartphones)
Special Features	Foldable, Lightweight, Remote Control, Slip Resistant
Material	Aluminum
Weight Limit	6.6 Pounds
Maximum Height	71 Inches
Tripod Head Type	Ball Heads

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Nineigh customer service directly. Contact details can typically be found on the manufacturer's official website or through your point of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question