IKEA IK.405.440.14

IKEA SOMMARLÅNKE LED Lighting Chain

Model: IK.405.440.14 | Brand: IKEA

Introduction

The IKEA SOMMARLÅNKE LED lighting chain is a battery-operated lighting solution designed for outdoor use, featuring 12 white LED bulbs. This manual provides essential information for the safe and effective setup, operation, and maintenance of your lighting chain.

Safety Information

Please read all safety instructions carefully before using the product. Failure to follow these instructions may result in injury or damage.

- This product is designed for outdoor use but is **NOT water resistant**. Avoid direct exposure to heavy rain or submersion in water.
- Use only the type of batteries specified in the product packaging or battery compartment. Ensure correct polarity (+/-) when inserting batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not going to be used for an extended period.
- Keep batteries out of reach of children. Dispose of used batteries according to local regulations.
- The LED bulbs are non-replaceable. Do not attempt to open or modify the bulbs or wiring.
- Do not expose the product to excessive heat, open flames, or direct sunlight for prolonged periods, as this may damage the battery or components.
- Do not hang the lighting chain in a way that could cause a tripping hazard.

What's in the Box

Your IKEA SOMMARLÅNKE LED lighting chain package should contain the following items:

- 1 x IKEA SOMMARLÅNKE LED lighting chain with 12 bulbs
- 1 x Battery (for initial use)

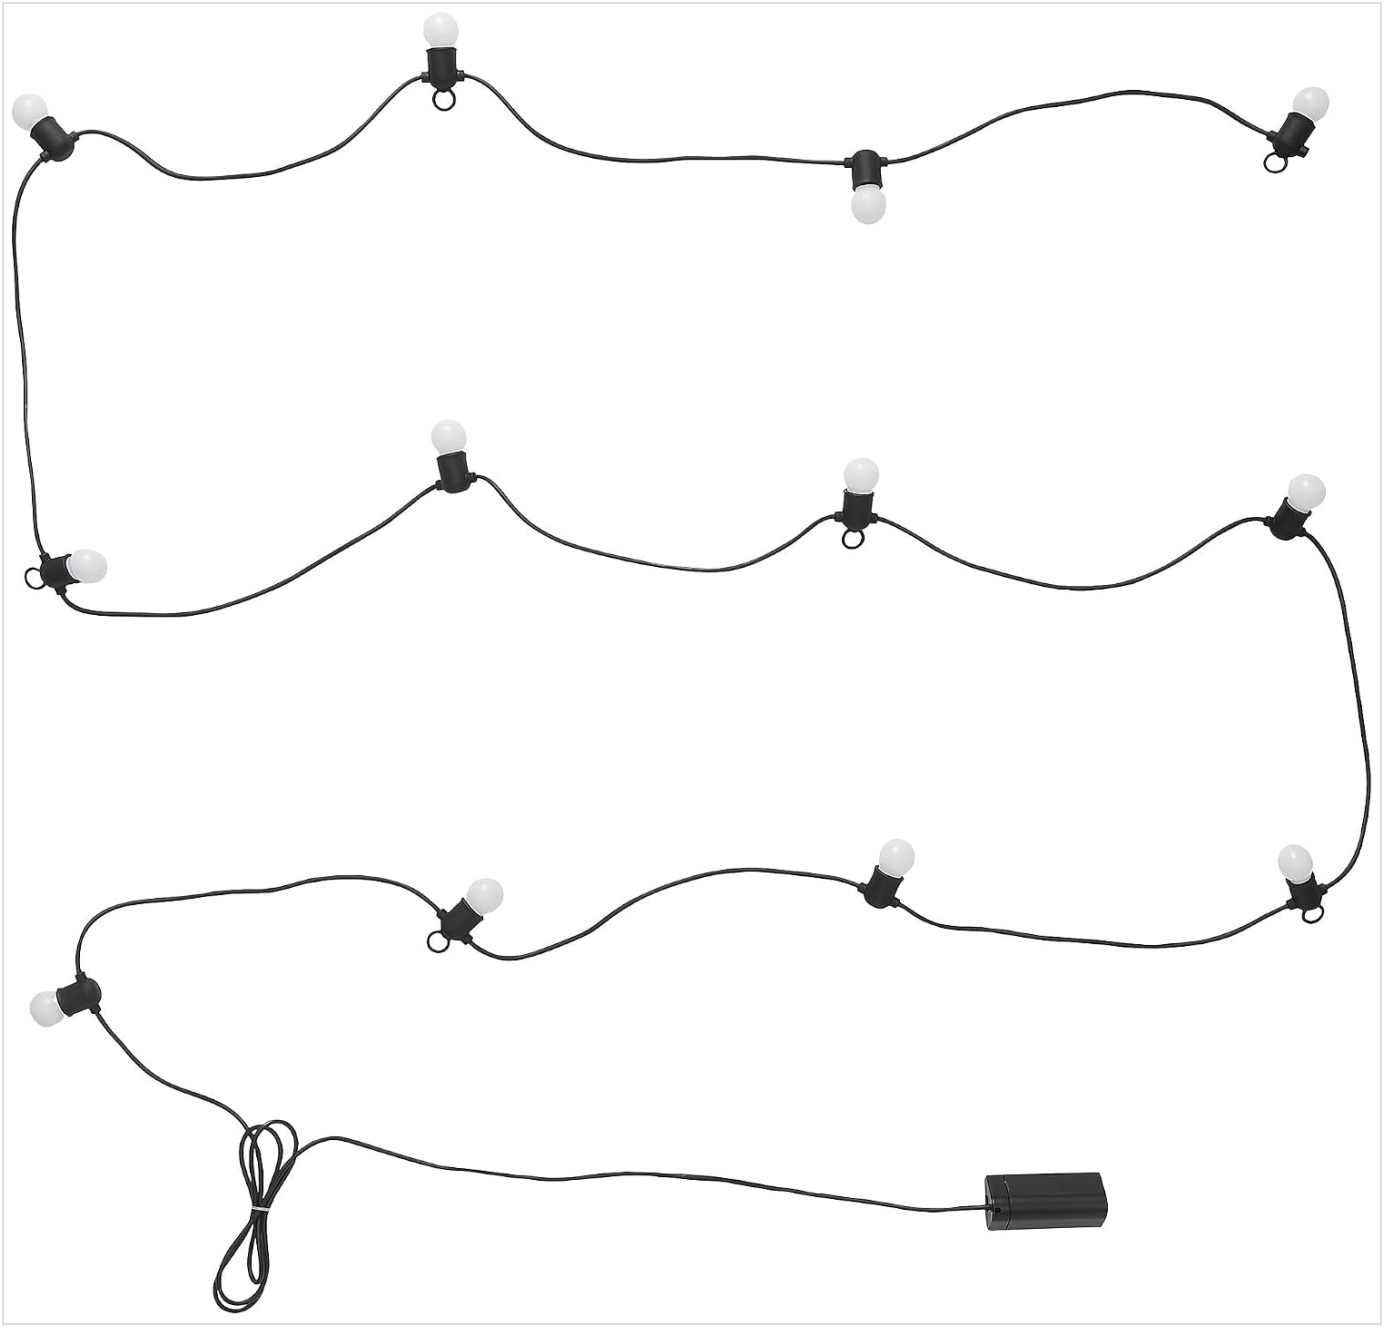


Image: The IKEA SOMMARLÅNKE LED lighting chain with its 12 bulbs and battery pack.

Setup

Follow these steps to set up your lighting chain:

1. **Battery Installation:** Locate the battery compartment on the lighting chain. Open the compartment cover and insert the required batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment. Close the cover securely.
2. **Placement:** Determine your desired location for the lighting chain. While designed for outdoor use, remember it is not water resistant, so choose a sheltered spot if possible.
3. **Stringing the Lights:** Carefully uncoil the lighting chain. Use the integrated loops on each bulb housing to hang or secure the chain. The total length of the chain is approximately 4.9 meters (16'1").



Image: A close-up view of the individual LED bulbs and their attachment points on the lighting chain.

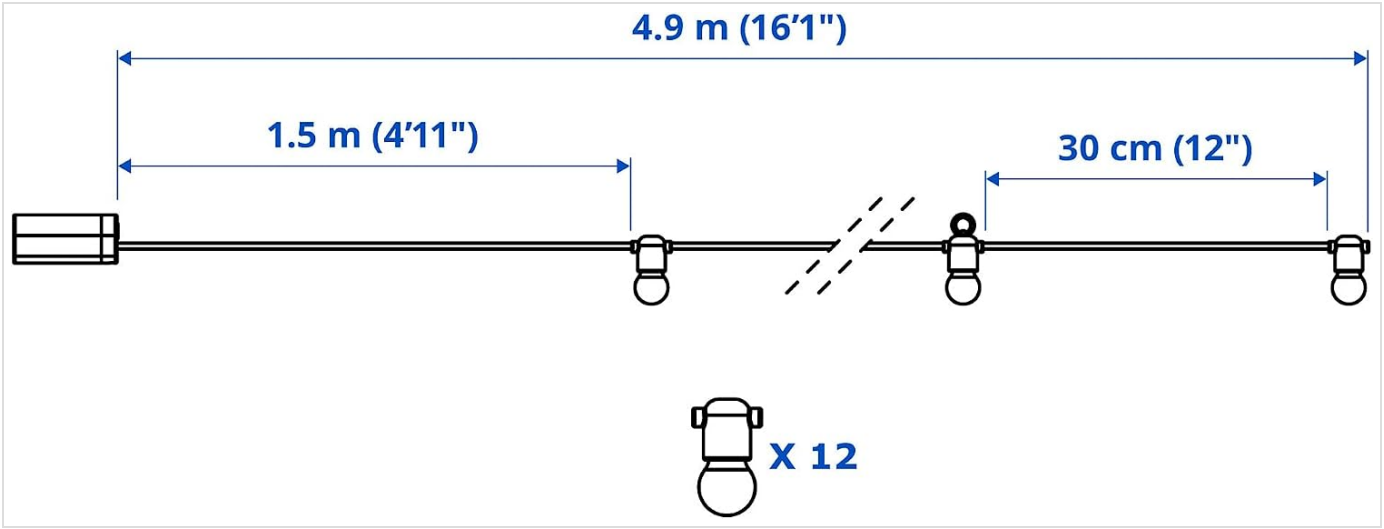


Image: A diagram illustrating the dimensions of the lighting chain, including total length and spacing between bulbs.

Operating Instructions

To operate your IKEA SOMMARLÅNKE LED lighting chain:

- **Turning On:** Locate the ON/OFF switch on the battery compartment. Slide the switch to the 'ON' position to illuminate the lights.
- **Turning Off:** To turn off the lights, slide the switch to the 'OFF' position.



Image: The lighting chain illuminating a balcony space, demonstrating typical outdoor use.

Maintenance

Proper care will extend the life of your lighting chain:

- **Cleaning:** Wipe the lighting chain and battery compartment with a soft, damp cloth. Do not use abrasive cleaners or immerse the product in water.
- **Battery Replacement:** When the lights dim or stop working, it's time to replace the batteries. Follow the battery installation steps in the 'Setup' section.
- **Storage:** If storing the lighting chain for an extended period, remove the batteries to prevent leakage and corrosion. Store in a cool, dry place away from direct sunlight.

Troubleshooting

If you encounter issues with your lighting chain, refer to the table below:

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly inserted. Switch is in 'OFF' position.	Replace batteries, ensuring correct polarity. Slide switch to 'ON'.
Lights are dim.	Batteries are low.	Replace batteries with new ones.
Some bulbs are not lit.	Damage to the wiring or individual bulb.	As bulbs are non-replaceable, if multiple bulbs are out, the unit may be damaged. Discontinue use if damage is significant.
Product is wet after rain.	Product is not water resistant.	Immediately turn off and remove batteries. Allow to dry completely before attempting to use again. Consider relocating to a more sheltered area.

Specifications

Feature	Detail
Brand	IKEA
Model Number	IK.405.440.14
Indoor/Outdoor Usage	Outdoor
Light Source Type	LED
Power Source	Battery Powered
Light Color	White
Number of Light Sources	12
Included Components	Battery

Feature	Detail
Water Resistance Level	Not Water Resistant

Warranty and Support

For information regarding warranty coverage and customer support, please refer to the documentation provided with your purchase or visit the official IKEA website. Keep your proof of purchase for any warranty claims.
For further assistance or inquiries, please contact IKEA customer service.

© 2023 IKEA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question