DBSOARS B0C2HBB275

DBSOARS Wireless Earbuds User Manual

Model: B0C2HBB275

INTRODUCTION

Thank you for choosing DBSOARS Wireless Earbuds. These Bluetooth 5.3 headphones offer immersive stereo sound, an LED digital display charging case, dual power display, and IPX5 waterproof rating, making them ideal for various activities including music listening and workouts. This manual provides detailed instructions on setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your earbuds.

Image: The DBSOARS wireless earbuds shown with their charging case, highlighting their sleek black design and the digital display on the case.

PACKAGE CONTENTS

- DBSOARS Wireless Earbuds (Left and Right)

- Charging Case with LED Digital Display

- USB Charging Cable

- Protective Case

- Multiple Ear Cap Sizes

- User Manual (this document)

PRODUCT OVERVIEW

The DBSOARS Wireless Earbuds are designed for comfort and high-quality audio. Key features include:

- **Bluetooth 5.3:** For stable and efficient wireless connection.
- **LED Digital Display Charging Case:** Shows battery levels for both earbuds and the charging case.
- **IPX5 Waterproof:** Resistant to sweat and light splashes, suitable for workouts.
- **Smart Touch Control:** Manage music playback, calls, and voice assistant with simple touches.
- **Ergonomic Design:** Lightweight and comfortable fit for extended wear.

LED Digital Display

Powerful "Charging Case" battery can ensure
that you perfectly charge earbud a total of 4 times

Battery Level for
Charging Case

Battery Level for
Earbud Separately

Image: Close-up of the charging case displaying the battery percentage for the case and individual earbud battery levels, indicating the case can fully charge earbuds 4 times.

Image: Illustrates the ergonomic design of the earbuds, emphasizing comfort, ultralight weight, and the inclusion of 3 ear cap sizes for a customized fit.

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the charging case to a USB power source using the provided USB cable. The LED digital display on the case will show the charging progress. Once fully charged, the

display will indicate 100%.

2. Pairing with Your Device (One-step Auto Pairing)

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device, search for Bluetooth devices and select "DBSOARS Earbuds" (or similar name) from the list.
4. Once connected, a voice prompt will confirm successful pairing.

The earbuds will automatically reconnect to the last paired device when taken out of the case, provided Bluetooth is enabled on the device.

Image: Depicts a smartphone screen showing Bluetooth settings with the earbuds' name "Cloud Nest" connected, illustrating the one-step auto pairing process.

OPERATING INSTRUCTIONS

Smart Touch Controls

The earbuds feature intuitive touch controls on their outer surface. A single touch or long press performs various functions:

- **Power On/Off:** Earbuds power on automatically when removed from the case and power off when placed back in the case.
- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.
- **Answer Call:** Single tap on either earbud during an incoming call.
- **Hang Up Call:** Single tap on either earbud during a call.
- **Reject Call:** Long press on either earbud during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud.

Smart Touch Control

One-key get all the functions

On/Off	Play/Pause	Previous Track	Previous Track

Voice Assistant	Answer Call	Hang Up	Reject

Image: Diagram illustrating the various smart touch control functions on the earbuds, including On/Off, Play/Pause, Previous/Next Track, Voice Assistant, Answer Call, Hang Up, and Reject Call.

Volume Control

Adjust the volume directly from the earbuds:

- **Increase Volume:** Long press the right earbud's touch button for 3 seconds and hold.
- **Decrease Volume:** Long press the left earbud's Touch button for 3 seconds and hold.

Your browser does not support the video tag.

Video: Demonstrates how to control the volume using the touch controls on the earbuds. Long press the right earbud to increase volume, and long press the left earbud to decrease volume.

MAINTENANCE

Cleaning and Care

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Avoid using abrasive cleaners, solvents, or aerosol sprays.
- Clean the charging contacts on both the earbuds and the case to ensure proper charging.

IPX5 Waterproof Rating

The earbuds are rated IPX5 waterproof, meaning they are protected against low-pressure water jets from any direction. This makes them suitable for use during workouts where sweat may be present, or in light rain. However, they are not designed for submersion in water, swimming, or showering. Ensure the earbuds are dry before placing them back into the charging case to prevent damage.

IPX5 Waterproof

Effectively prevent earbuds from being damage of sweat during workouts

Image: The earbuds are shown with water droplets, illustrating their IPX5 waterproof capability, which protects them from sweat during workouts.

IPX5 Waterproof

Effectively prevent earbuds from being damage of sweat during workouts

Image: A person is shown running outdoors while wearing the earbuds, demonstrating their suitability for active use due to their IPX5 waterproof rating.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing/connecting.	• Ensure earbuds are charged and out of the case. • Turn off and on Bluetooth on your device. • Forget "DBSOARS Earbuds" from your device's Bluetooth list and try pairing again. • Ensure earbuds are within range (approx. 10 meters) of your device.

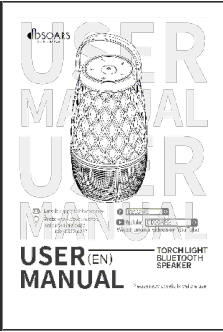| Problem	Possible Solution
No sound or low volume.	- Check volume levels on both your device and the earbuds. - Ensure earbuds are properly seated in your ears. - Try cleaning any debris from the earbud speakers.
Earbuds not charging.	- Ensure the charging cable is securely connected to both the case and the power source. - Check if the charging case itself has power. - Clean the charging contacts on both the earbuds and inside the case.
One earbud not working.	- Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out again. - Ensure both earbuds are charged. - Try resetting the earbuds (refer to manufacturer's website if specific reset instructions are not in manual).

SPECIFICATIONS

Feature	Detail
Brand	DBSOARS
Model	B0C2HBB275
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Ear Placement	In Ear
Form Factor	In Ear
Control Method	Touch, Voice
Waterproof Rating	IPX5
Color	Black
Recommended Uses	Running, Music

WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not provided within this manual. Please refer to the product packaging or the retailer's website for details on warranty coverage and how to contact customer support for assistance.

Related Documents - B0C2HBB275

[DBSOARS Torch Light Bluetooth Speaker User Manual](#)

User manual for the DBSOARS Torch Light Bluetooth Speaker, detailing its features, operation, Bluetooth pairing, speaker synchronization, charging, maintenance, and warranty information.