Mabe EMH7602JBS0

Mabe EMH7602JBS0 Floor Stove User Manual

Model: EMH7602JBS0

Introduction Safety
Information Setup Operating Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides essential instructions for the safe installation, operation, and maintenance of your Mabe EMH7602JBS0 Floor Stove. Please read all instructions thoroughly before using the appliance to ensure proper function and to prevent potential hazards. Keep this manual for future reference.

The Mabe EMH7602JBS0 is a 76 cm (30-inch) floor stove designed for cooking with LP gas, convertible to natural gas. It features 6 burners, durable cast iron grates, an oven with Easy Clean Pro coating, electronic ignition for the oven, and a thermocontrol system for precise temperature management.



Figure 1.1: Front view of the Mabe EMH7602JBS0 Floor Stove.

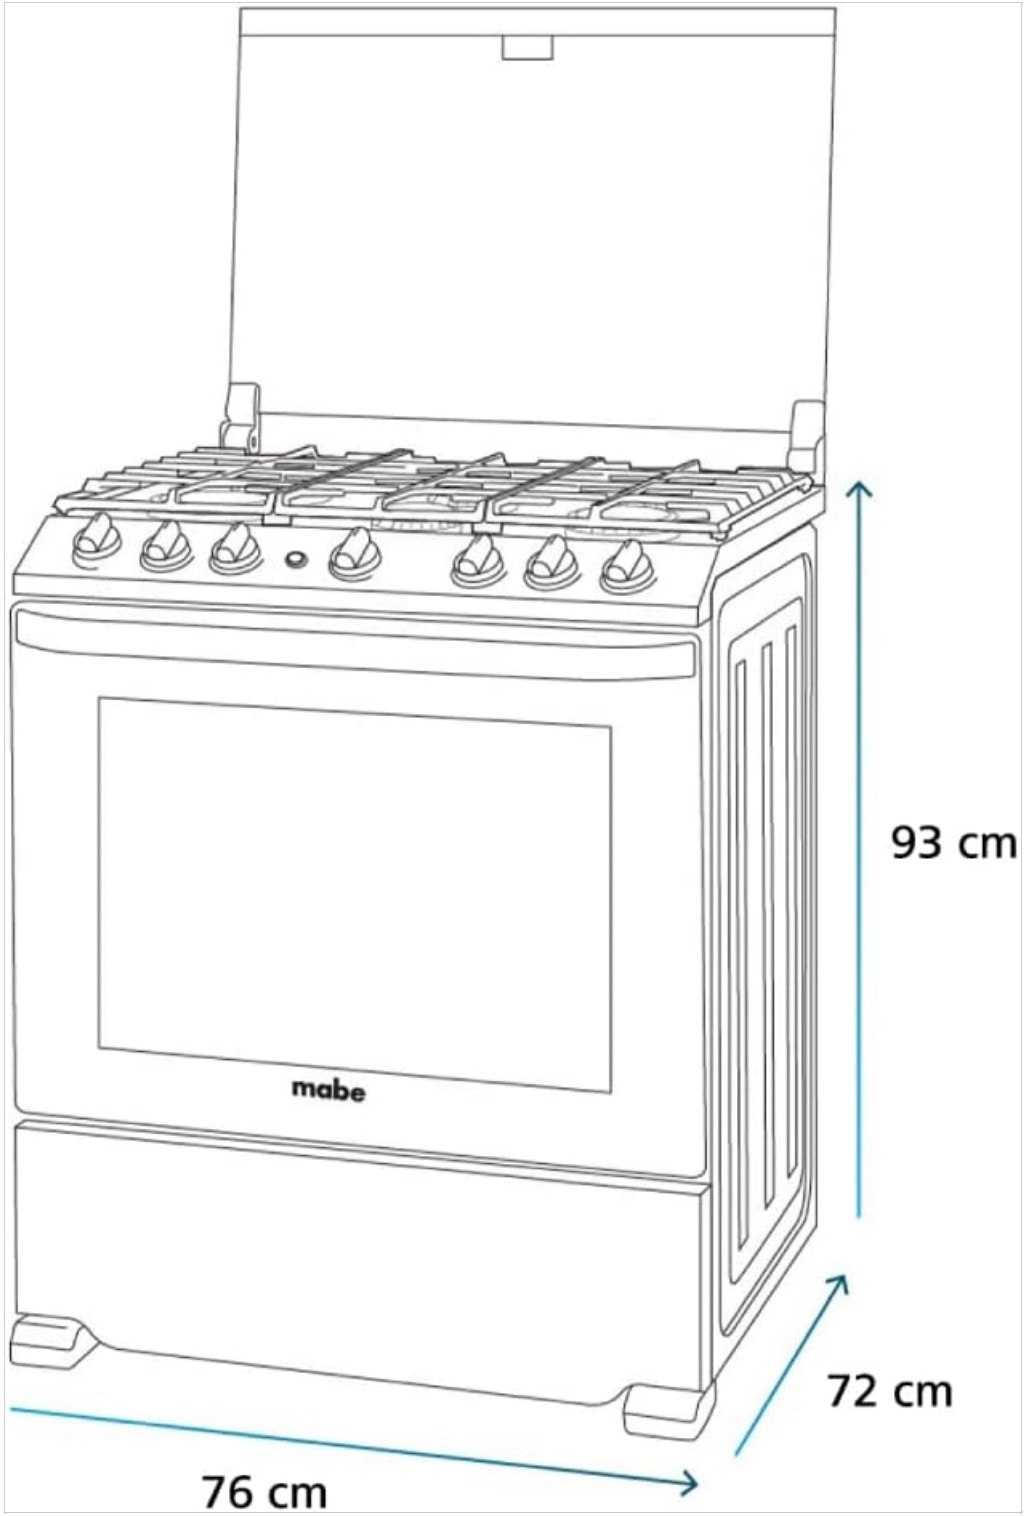


Figure 1.2: Angled side view of the Mabe EMH7602JBS0 Floor Stove, showcasing its design.

2. Safety Information

WARNING: Gas appliances can cause carbon monoxide poisoning. Use only in well-ventilated areas. Read all instructions before use.

- **Gas Leaks:** If you smell gas, immediately shut off the gas supply to the appliance, open windows, and evacuate the area. Do not operate any electrical switches or phones. Contact a qualified technician.
- **Ventilation:** Ensure adequate ventilation in the kitchen area when operating the stove.
- **Children and Pets:** Keep children and pets away from the appliance during operation and when it is cooling down. Surfaces can remain hot for an extended period.
- **Hot Surfaces:** The cooktop, oven, and surrounding areas become hot during use. Use oven mitts or pot holders

when handling hot items.

- **Flammable Materials:** Do not store or use flammable materials near the stove.
- **Proper Installation:** This appliance must be installed by a qualified technician in accordance with all local codes and regulations.
- **Electrical Grounding:** Ensure the appliance is properly grounded to prevent electrical shock.
- **LP Gas Conversion:** If converting from LP gas to natural gas, or vice versa, this procedure must be performed by a qualified service technician.

3. Setup and Installation

3.1 Unpacking

Carefully remove all packaging materials, tape, and protective films from the stove. Inspect the appliance for any damage. Report any damage to your dealer immediately.

3.2 Placement

Position the stove in a location that allows for proper ventilation and clearance from combustible surfaces. Refer to local building codes for specific requirements.

3.3 Gas Connection

WARNING: Gas connection must be performed by a qualified and licensed gas technician.

- Ensure the gas supply line is compatible with the stove's requirements (LP gas, convertible to natural gas).
- Install a manual shut-off valve in an accessible location near the stove.
- Check all connections for leaks using a non-corrosive leak detection solution. Never use an open flame to check for leaks.

3.4 Electrical Connection

The stove requires an electrical connection for the electric ignition system. Ensure the electrical outlet is properly grounded and matches the voltage requirements specified on the appliance's rating plate.

3.5 Leveling

Use the adjustable leveling legs at the bottom of the stove to ensure it is stable and level. A level stove ensures even cooking and prevents spills.



Figure 3.1: Product dimensions for installation planning (Width: 76 cm, Depth: 72 cm, Height: 93 cm).

4. Operating Instructions

4.1 Cooktop Operation

The cooktop features 6 gas burners with electric ignition and durable cast iron grates for stable cookware placement.



Figure 4.1: Control knobs for burners and oven.



Figure 4.2: Cooktop layout with 6 burners and cast iron grates.

4.1.1 Lighting a Burner

1. Place your cookware on the grate above the desired burner.
2. Push in and turn the corresponding burner knob counter-clockwise to the 'HIGH' position. You will hear a clicking sound as the igniter sparks.
3. Once the burner lights, continue to hold the knob in for a few seconds to allow the flame sensor to activate.
4. Adjust the flame to your desired cooking level.
5. If the burner does not light within 5 seconds, turn the knob to 'OFF', wait for a minute, and try again.

4.1.2 Using the Teflon Comal

The stove includes a Teflon comal. Place it centrally over two burners for even heating. Follow the instructions provided with the comal for best use and care.

4.2 Oven Operation

The oven features electronic ignition, thermocontrol for precise temperature, an oven-sliding grill, and a panoramic door for easy viewing.



Figure 4.3: Oven interior with sliding grill.



Figure 4.4: Oven door with integrated temperature and cooking guide.

4.2.1 Preheating the Oven

1. Ensure the oven is empty and clean.
2. Push in and turn the oven control knob to the desired temperature setting. The oven has electronic ignition activated by this button.
3. Allow the oven to preheat for approximately 10-15 minutes, or until the indicator light (if present) turns off, signaling the set temperature has been reached.

4.2.2 Using the Oven-Sliding Grill

The oven is equipped with a sliding grill for easy access to your dishes. Pull the grill out gently when the oven door is open to check or remove food. Ensure the grill is fully pushed back in before closing the oven door.

5. Maintenance and Cleaning

WARNING: Always ensure the stove is cool and disconnected from the gas and electrical supply before cleaning or performing any maintenance.

5.1 Cooktop Cleaning

- **Grates:** Remove the cast iron grates and wash them with warm, soapy water. For stubborn stains, use a non-abrasive cleaner. Dry thoroughly before replacing.
- **Burner Caps and Bases:** Clean burner caps and bases with warm, soapy water. Ensure the burner ports are not clogged. Dry completely before reassembling.
- **Cooktop Surface:** Wipe the stainless steel or enamel cooktop surface with a soft cloth and mild detergent. Avoid abrasive cleaners that can scratch the surface.

5.2 Oven Cleaning (Easy Clean Pro)

The oven features an Easy Clean Pro coating, designed for simplified cleaning.



Figure 5.1: Easy Clean Pro oven interior for simplified cleaning.

- Allow the oven to cool completely.
- Wipe spills and food residue with a damp cloth and mild dish soap.

- For baked-on spills, a non-abrasive oven cleaner suitable for Easy Clean Pro surfaces can be used. Follow the cleaner manufacturer's instructions carefully.
- Avoid using harsh scouring pads or abrasive cleaners, as these can damage the coating.

5.3 Exterior Cleaning

Clean the exterior surfaces, including the tempered glass hood and panoramic door, with a soft cloth and a glass cleaner or mild detergent. Dry with a clean, soft cloth to prevent streaks.

6. Troubleshooting

Before contacting customer service, review the following common issues and their solutions:

Problem	Possible Cause	Solution
Burner does not light	No gas supply Burner ports clogged Igniter dirty or wet Power outage	Check gas valve is open Clean burner ports Clean and dry igniter Check electrical connection/circuit breaker
Oven does not heat	No gas supply Electronic ignition failure Incorrect temperature setting	Check gas valve is open Ensure oven knob is pushed in and turned correctly Verify temperature setting
Uneven cooking in oven	Oven not level Overcrowding Incorrect rack position	Level the stove Avoid overcrowding the oven Refer to cooking guides for optimal rack positions
Gas odor	Minor leak Unlit burner	Ensure all burners are off. If odor persists, shut off gas supply and contact a technician.

If the problem persists after attempting these solutions, contact Mabe customer support or a qualified service technician.

7. Specifications

- **Model:** EMH7602JBS0
- **Brand:** Mabe
- **Type:** Floor Stove (Gas Range)
- **Dimensions (Product):** 76 cm (Width) x 72 cm (Depth) x 93 cm (Height)
- **Fuel Type:** LP Gas (convertible to Natural Gas)
- **Cooktop Burners:** 6
- **Cooktop Grates:** Cast Iron
- **Cooktop Ignition:** Electric
- **Oven Ignition:** Electronic (button activated)
- **Oven Control:** Thermocontrol
- **Oven Interior:** Easy Clean Pro coating
- **Oven Features:** Sliding grill, Panoramic door
- **Included Accessories:** Tempered glass hood, Teflon comal

- **UPC:** 757638400756

8. Warranty and Support

8.1 Warranty Information

Mabe products are covered by a limited warranty. Please refer to the warranty card included with your purchase or visit the official Mabe website for detailed terms and conditions. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, service requests, or questions regarding your Mabe EMH7602JBS0 Floor Stove, please contact Mabe customer support. Contact information can typically be found on the Mabe official website or in your product documentation.

- Have your model number (EMH7602JBS0) and serial number ready when contacting support.
- Describe the issue clearly and provide any relevant details.

© 2024 Mabe. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question