Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

tenwin TW8188-7

tenwin Rechargeable Electric Pencil Sharpener User Manual

Model: TW8188-7

Introduction

Thank you for choosing the tenwin Rechargeable Electric Pencil Sharpener, Model TW8188-7. This fully automatic sharpener is designed for convenience and efficiency, providing a hands-free sharpening experience for various pencil types and sizes. Please read this manual carefully to ensure proper use, maintenance, and to maximize the lifespan of your device.

Product Overview

The tenwin TW8188-7 is an advanced electric pencil sharpener featuring a hands-free automatic mechanism, a powerful rechargeable battery, and adjustable sharpness settings. It is suitable for a wide range of pencils, including colored pencils.

Key Features:

- **Hands-Free Automatic Operation:** Simply insert the pencil, and the sharpener will automatically pull it in, sharpen it, and eject it when complete.
- **Wide Pencil Compatibility:** Designed for pencils with diameters ranging from 7mm to 11.5mm, including standard graphite and colored pencils.
- **Special Mode for Colored Pencils:** Utilizes a gentle sharpening force to prevent lead breakage, common with softer colored pencil leads.
- **Rechargeable Battery:** Equipped with a 2000mAh lithium battery, capable of sharpening approximately 600 pencils on a full charge. Can be used while charging via USB.
- **Adjustable Sharpness:** Offers three distinct sharpness levels (sharp, medium, blunt) to suit various artistic and writing needs.
- **Short Pencil Sharpening:** Efficiently sharpens pencils as short as 2.5 inches, extending the usability of your pencils.
- **Durable Helical Blade:** Features a robust stainless steel helical blade with an estimated lifespan of 8000 sharpening cycles.

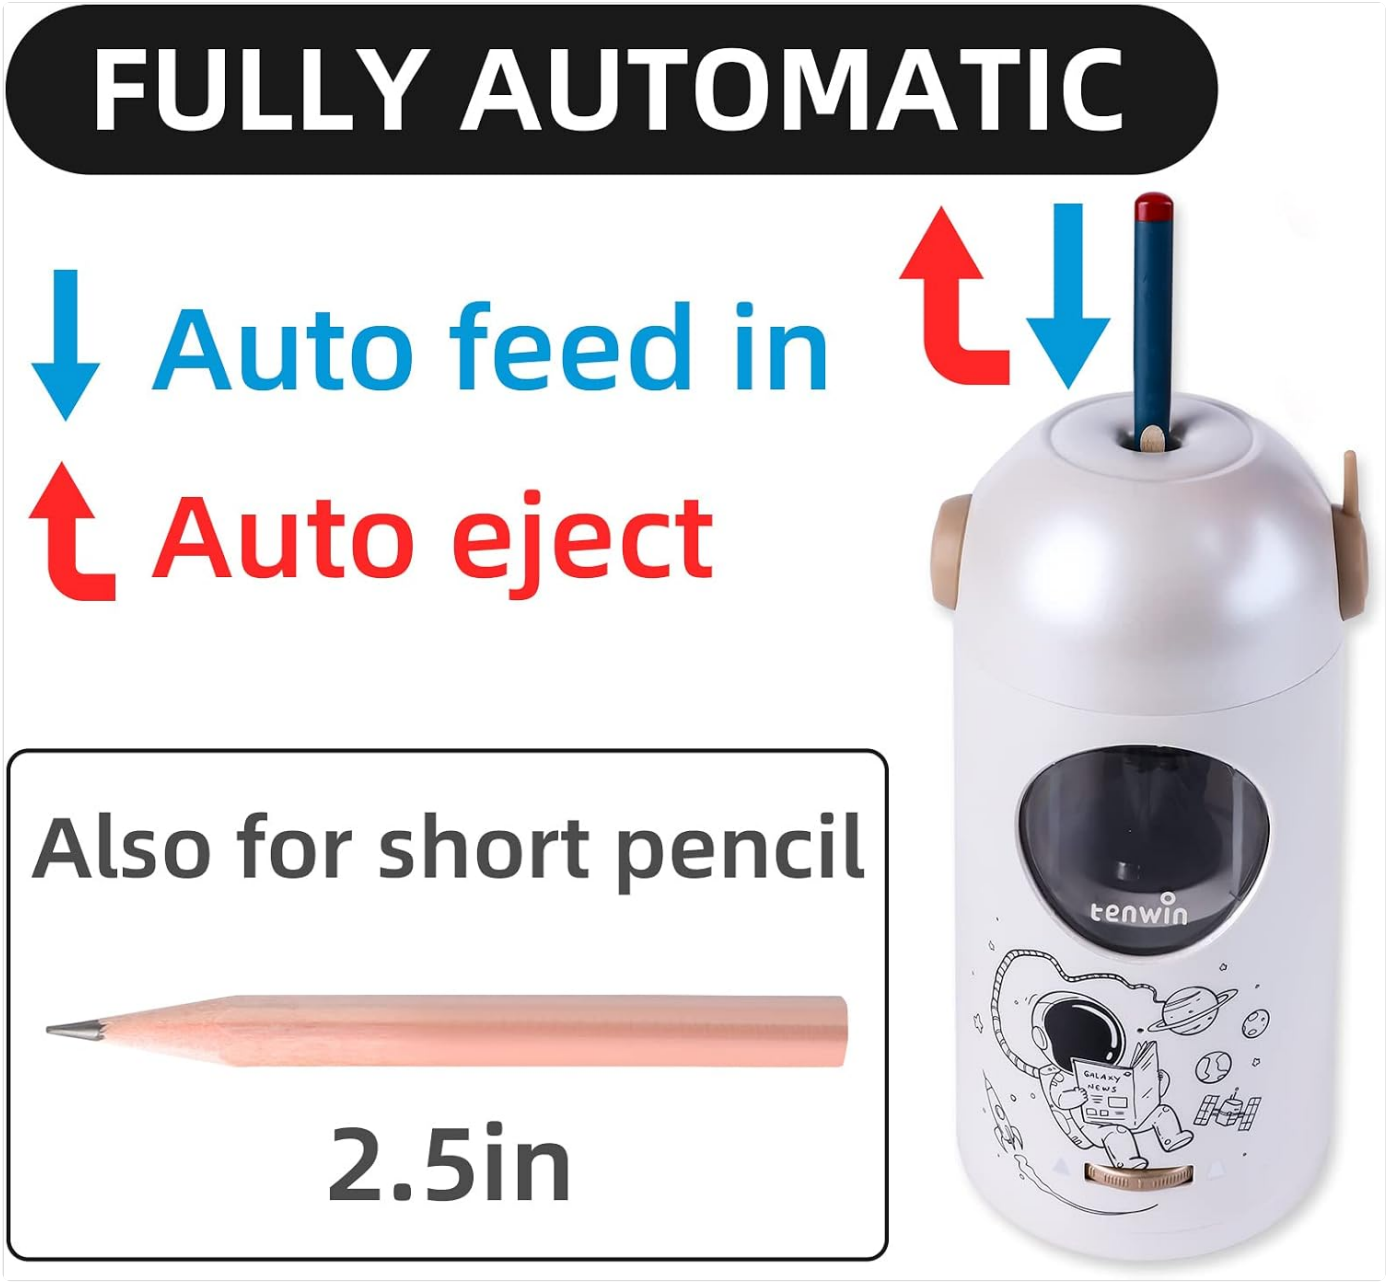


Image: The tenwin electric pencil sharpener demonstrating its fully automatic operation and capability to sharpen short pencils.



Image: Visual representation of the automatic pencil feeding and ejection system.



Image: The sharpener's compatibility with different pencil diameters (7-11.5mm) and shapes.

Setup

1. Unboxing and Inspection:

- Carefully remove the sharpener from its packaging.
- Inspect the device for any signs of damage. If damaged, do not use and contact customer support.
- Ensure all components are present: the sharpener unit and a USB charging cable.

2. Initial Charging:

- Before first use, fully charge the sharpener.
- Connect the provided USB cable to the charging port on the sharpener and to a compatible USB power source (e.g., power bank, laptop, USB wall adapter).
- The charging indicator light will illuminate during charging. A full charge typically takes approximately 2 hours.
- The sharpener can be used while it is charging.



Image: The sharpener's rechargeable battery and various USB charging methods.

Operating Instructions

1. Adjusting Sharpness Level:

- Locate the sharpness adjustment dial on the sharpener.
- Rotate the dial to select your desired sharpness:**Sharp**, **Medium**, or **Blunt**.

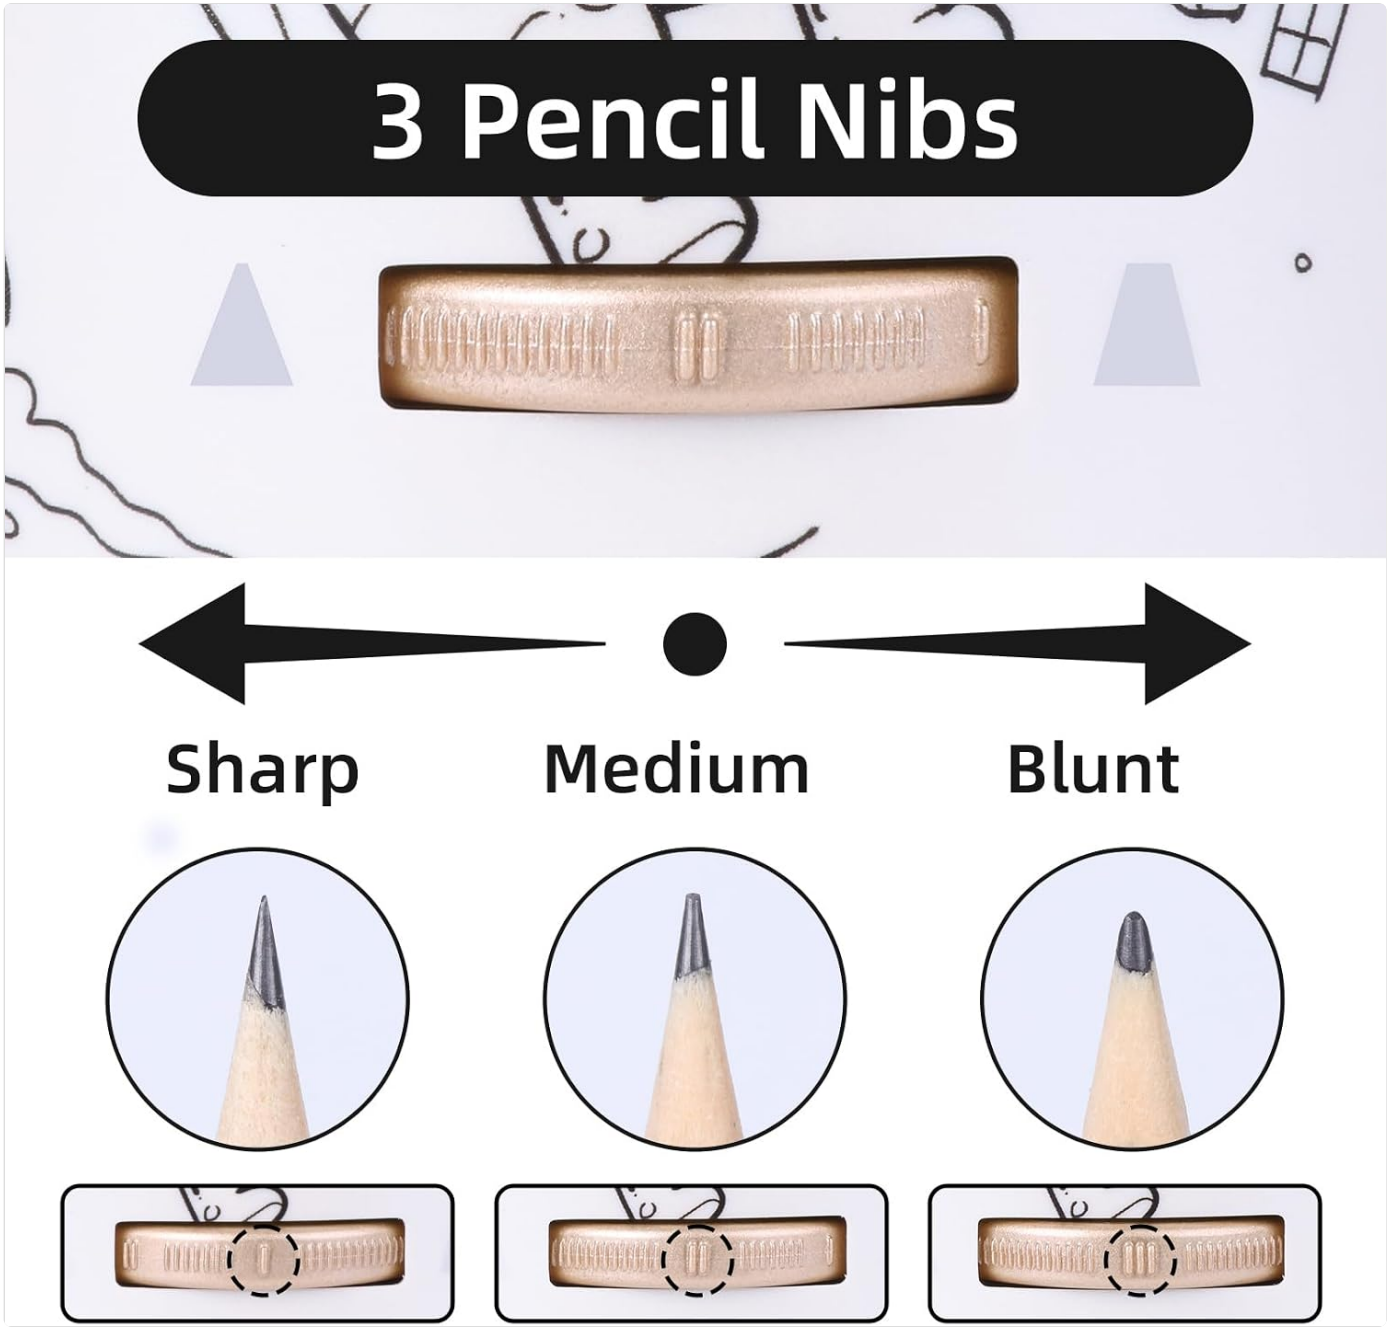


Image: The sharpness adjustment dial and examples of the three available pencil nibs.

2. Sharpening a Pencil:

- Ensure the shaving reservoir is properly closed and the sharpener is on a stable surface.
- Gently insert a pencil into the sharpening hole at the top of the device.
- The sharpener will automatically grip the pencil and begin sharpening. You do not need to apply pressure or hold the pencil.
- Once the pencil reaches the selected sharpness, the sharpener will automatically stop and eject the pencil.
- Remove the sharpened pencil.



Image: Top view of the sharpener, showing the pencil insertion opening.

Maintenance

1. Emptying the Shaving Reservoir:

- Regularly check the transparent shaving reservoir.
- When the reservoir is full, carefully remove it from the sharpener.
- Empty the pencil shavings into a waste bin.
- Reattach the reservoir securely to ensure proper operation.

2. Cleaning the Blade:

- Periodically, or if sharpening performance decreases, clean the blade unit.
- Ensure the sharpener is turned off and unplugged (if charging).
- Carefully remove the shaving reservoir and then the blade unit (refer to diagrams in the full manual if available for specific removal instructions).
- Use a soft brush or cloth to remove any accumulated graphite or wood particles from the blade. Do not use water or harsh chemicals.
- Reassemble the blade unit and shaving reservoir securely.



Image: The durable helical blade, responsible for smooth pencil sharpening.

Troubleshooting

Problem	Possible Cause	Solution
Sharpener does not turn on.	Low battery or no charge.	Charge the sharpener using the provided USB cable.
Pencil is not sharpening or sharpens unevenly.	Blade is dull or clogged with shavings.	Clean the blade unit. If the issue persists, the blade may need replacement (contact support).
Pencil lead breaks frequently.	Pencil is too soft (e.g., colored pencil) or incorrect sharpness setting.	Ensure the sharpener is set to the appropriate sharpness level for colored pencils. Avoid excessive force when inserting.

Problem	Possible Cause	Solution
Pencil is not ejected automatically.	Mechanism obstruction or sensor issue.	Ensure no large debris is blocking the ejection path. Gently remove the pencil. If persistent, contact support.
Shavings leak from the reservoir.	Reservoir not properly closed or damaged.	Ensure the shaving reservoir is securely attached. If damaged, contact support for a replacement.

Specifications

Feature	Detail
Brand	tenwin
Model Number	TW8188-7
Power Source	Battery Powered (Rechargeable Lithium Battery)
Battery Capacity	2000mAh
Pencil Diameter Compatibility	7-11.5mm
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel
Color	Silver
Blade Life Span	Approx. 8000 sharpening cycles
Additional Features	Cordless, Fully Automatic, Portable



Outer Shell	ABS Plastic
Blade Life Span	8000 Times
Power Source	Rechargeable lithium battery
Fit Pencil Diameter	ϕ7-11.5mm

Image: Physical dimensions and a summary of product specifications.

Warranty & Support

Warranty Information:

This tenwin Rechargeable Electric Pencil Sharpener (Model TW8188-7) comes with a**365-day warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support:

For any questions, concerns, or warranty claims, please contact tenwin customer support through the retailer where the product was purchased or visit the official tenwin website for contact information. Please have your model number (TW8188-7) and proof of purchase ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C39YFJBC

More documents and user manuals: **https://manuals.plus/**