Nekteck 91aa7860-3c7a-40ff-93f2-04aebbee682b

Nekteck Neck Massager and FM01 Foot Massager Machine with Heat Bundle User Manual

Model: 91aa7860-3c7a-40ff-93f2-04aebbee682b

Introduction

Thank you for choosing the Nekteck Neck Massager and FM01 Foot Massager Machine with Heat Bundle. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new massagers. Please read this manual thoroughly before use and retain it for future reference.



Image: The Nekteck Neck Massager (left) and FM01 Foot Massager (right) shown together. The neck massager is black and grey with red

glowing massage nodes, and the foot massager is blue with red glowing massage nodes.

Safety Information

Please observe the following safety precautions to prevent injury or damage to the product:

- **Overheating Protection:** Both massagers are equipped with an automatic shut-off feature. The massager will automatically shut off after 15 minutes of continuous use to prevent overheating. This is a safety feature and not an indication of malfunction.
- Do not use the massager while driving or operating heavy machinery.
- Consult a physician before use if you have any medical conditions, are pregnant, have a pacemaker, or are undergoing medical treatment.
- Do not use on swollen, inflamed, or injured areas of the skin.
- Keep out of reach of children.
- Unplug the massager from the power outlet when not in use and before cleaning.
- Do not immerse the massager in water or any other liquid.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is not a medical device.

Product Overview

Nekteck Neck Massager

The Nekteck Neck Massager is designed to alleviate muscle soreness, ease neck stiffness, eliminate cervical fatigue, and provide relaxation. It features deep-shiatsu kneading massage nodes and an adjustable intensity with heat function.

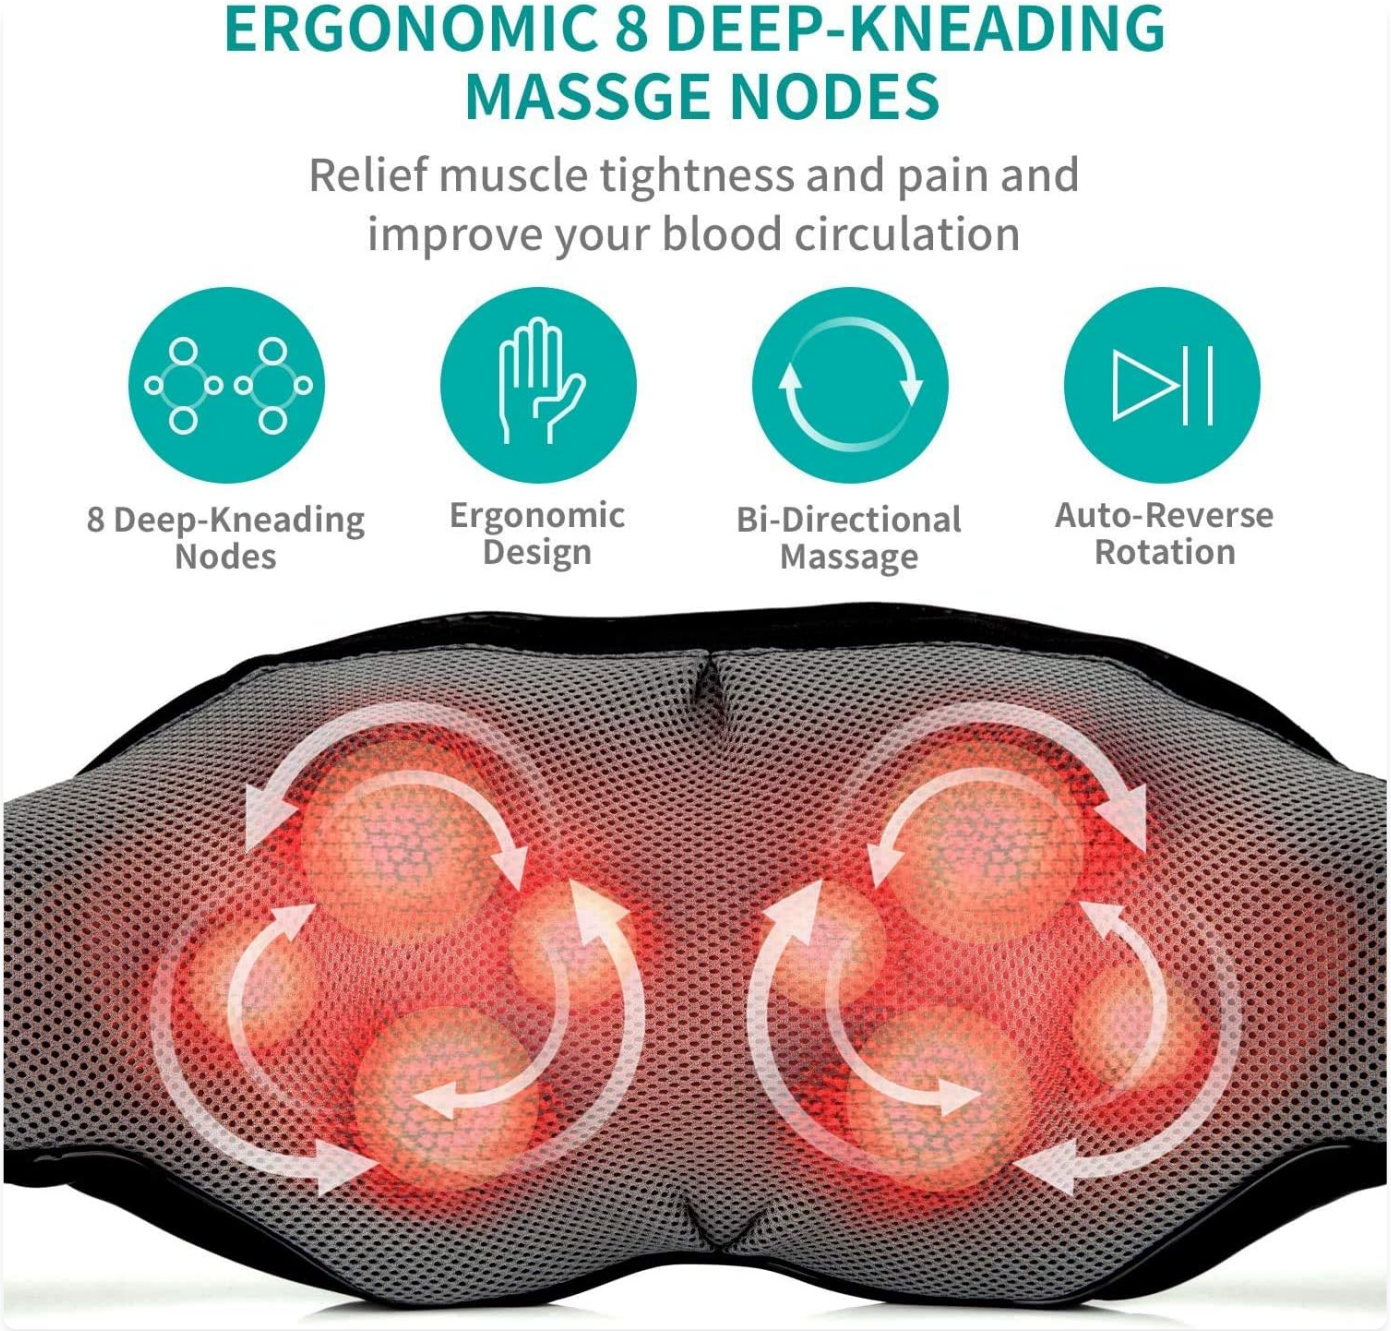


Image: Diagram illustrating the ergonomic design and 8 deep-kneading massage nodes of the Nekteck Neck Massager. It highlights bi-directional massage and auto-reverse rotation for muscle relief and improved blood circulation.

- **8 Deep-Shiatsu Kneading Massage Nodes:** Provides powerful and effective massage.
- **Adjustable Intensity:** 3 speed strength levels to personalize pressure.
- **Soothing Heat Function:** Built-in infrared heat to improve blood circulation (can be turned off).
- **Ergonomic Design:** Conforms to the body for comfortable use.
- **Bi-Directional Massage:** Nodes change direction automatically for comprehensive relief.
- **Long Handle Straps:** Allows adjustment of massage position and strength.
- **Breathable Mesh Fabric:** Ensures comfort and prevents overheating.

Nekteck FM01 Foot Massager Machine

The Nekteck FM01 Foot Massager is designed to relax muscles, ease tensions, and regulate blood flow in your feet. Its versatile design also allows for use on calves, hamstrings, and the back.

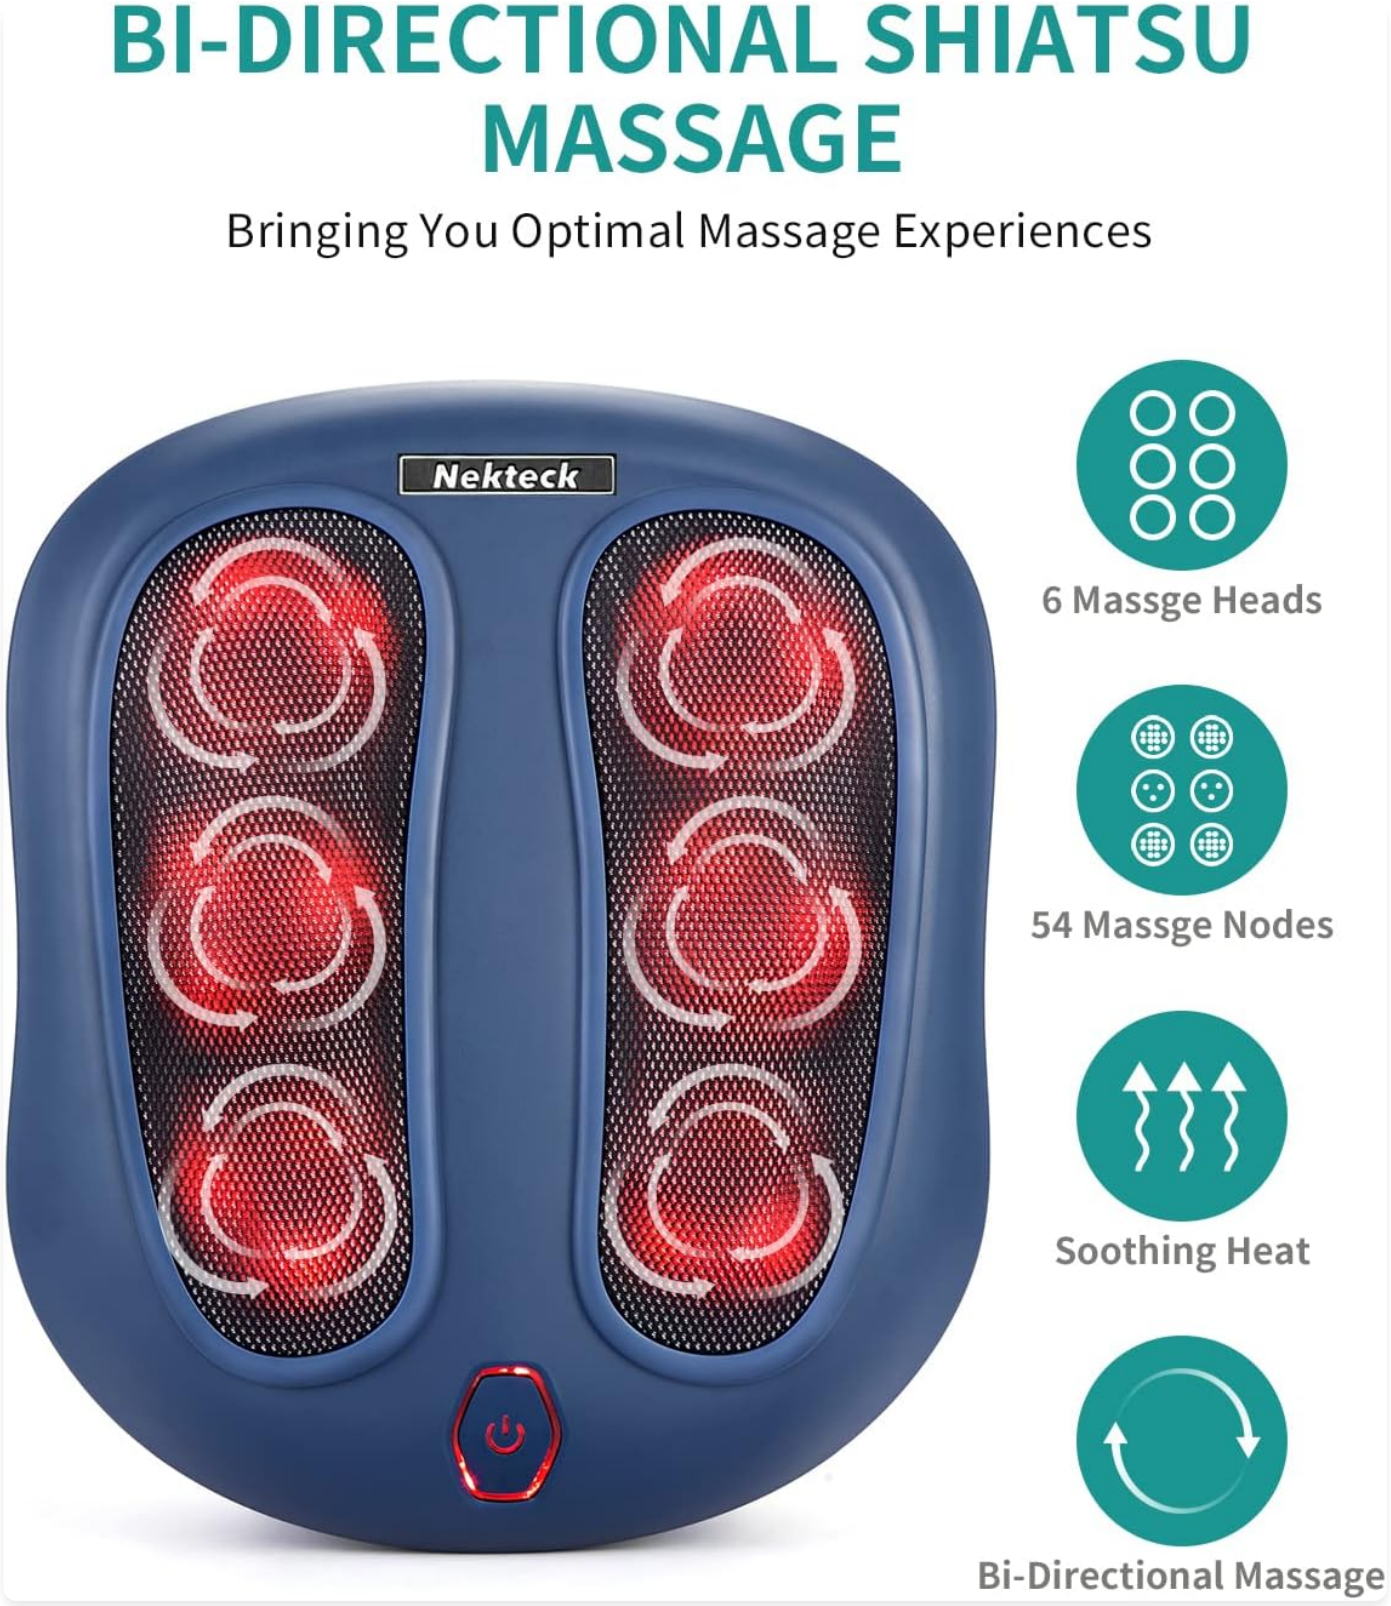


Image: Diagram of the Nekteck FM01 Foot Massager highlighting its 6 massage heads, 54 massage nodes, soothing heat, and bi-directional massage capabilities.

- **6 Massage Heads with 54 Rotating Nodes:** Provides comprehensive foot massage.
- **Heating Function:** Helps fatigued muscles and improves foot wellness (can be turned off).
- **Convenient Toe-Touch Control:** Easy to operate without bending down.
- **Versatile Design:** Can be used for foot, calf, hamstring, and back massage.

Setup

Both massagers are designed for simple plug-and-play operation.

1. Unpack the massager(s) from the packaging.
2. Ensure the power cord is free from kinks or damage.
3. Plug the power adapter into a standard electrical outlet.
4. Connect the power adapter to the massager's power input port.
5. Place the massager on a stable surface or position it comfortably for use.

Operating Instructions

Using the Nekteck Neck Massager



Image: Close-up of the Nekteck Neck Massager control panel, showing buttons for Power ON/OFF, Direction, Speed Level, and Heat ON/OFF. It also indicates required power supply and 15-minute auto shut-off.

1. **Power On/Off:** Press the **Power button** (⏻) to turn the massager on. It will start in the default massage mode.

2. **Adjust Direction:** Press the **Direction button** ( ) to change the rotation direction of the massage nodes. The massager also features auto-reverse rotation.
3. **Adjust Speed Level:** Press the **Speed Level button** ( ) to cycle through 3 different speed/intensity levels.
4. **Heat Function:** Press the **Heat button** ( ) to turn the infrared heat function on or off. The highest temperature reaches 113°F (45°C).
5. **Positioning:** Use the long handle straps to adjust the massager's position and apply desired pressure to your neck, shoulders, back, or legs.
6. **Auto Shut-off:** The massager will automatically turn off after 15 minutes. To continue use, simply press the Power button again.



Image: Diagram showing the advanced heating function of the Nekteck Neck Massager, indicating a maximum temperature of 113°F (45°C) and the 15-minute auto-shutoff for overheat protection.

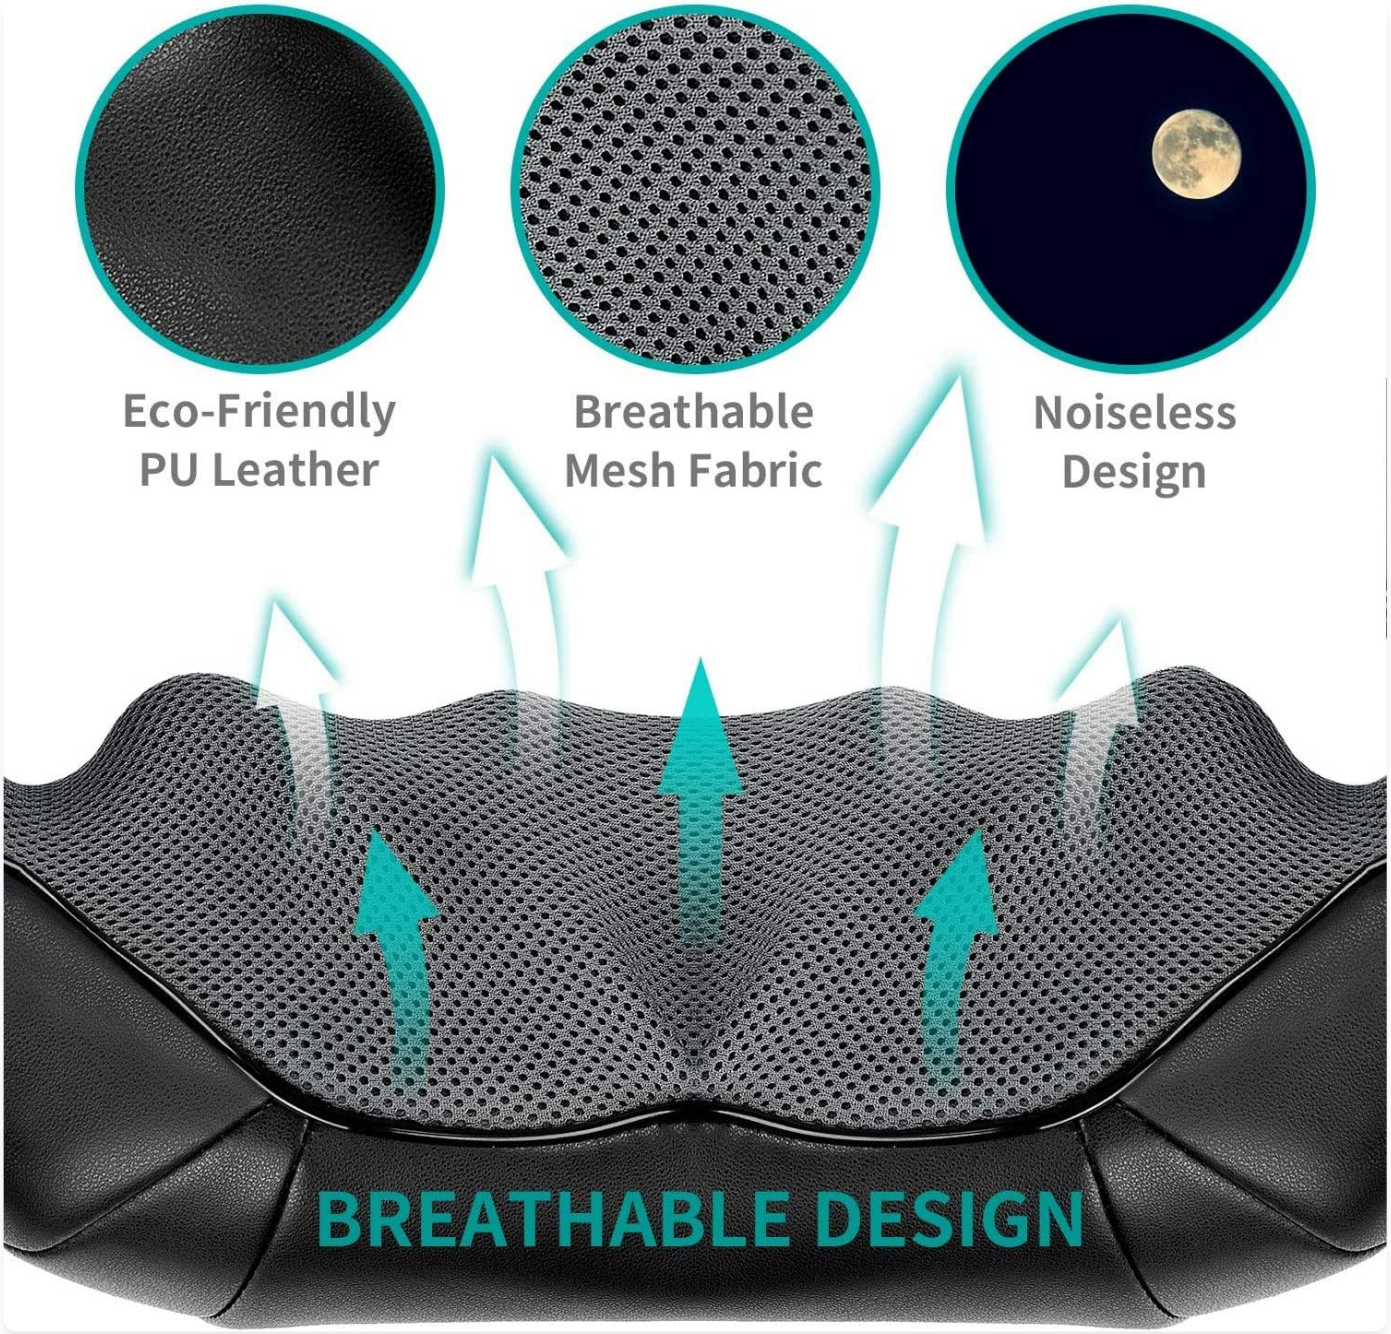


Image: Illustration of the breathable design of the Nekteck Neck Massager, highlighting the eco-friendly PU leather, breathable mesh fabric, and noiseless design for comfort and durability.

Using the Nekteck FM01 Foot Massager



Image: A person's foot pressing the power button on the Nekteck FM01 Foot Massager, demonstrating the convenient toe-touch control. Steps show pressing once to turn on massage, and again to turn on heat.

1. **Power On/Off & Massage:** Place your foot on the massager and press the**Power button** (⏻) with your toe to turn on the massage function.
2. **Heat Function:** Press the **Power button** again to activate the heating function. The massage nodes will glow red when heat is active.
3. **Turn Off:** Press the **Power button** a third time to turn off both the massage and heat functions.

4. **Versatile Use:**
    - **Foot Massage:** Place your feet directly on the massage nodes.
    - **Calf Massage:** Place your calves on the massager.
    - **Hamstring Massage:** Position the massager under your hamstrings while seated.
    - **Back Massage:** Place the massager behind your lower back while seated on a chair or sofa.
5. **Auto Shut-off:** The massager will automatically turn off after 15 minutes. To continue use, simply press the Power button again.

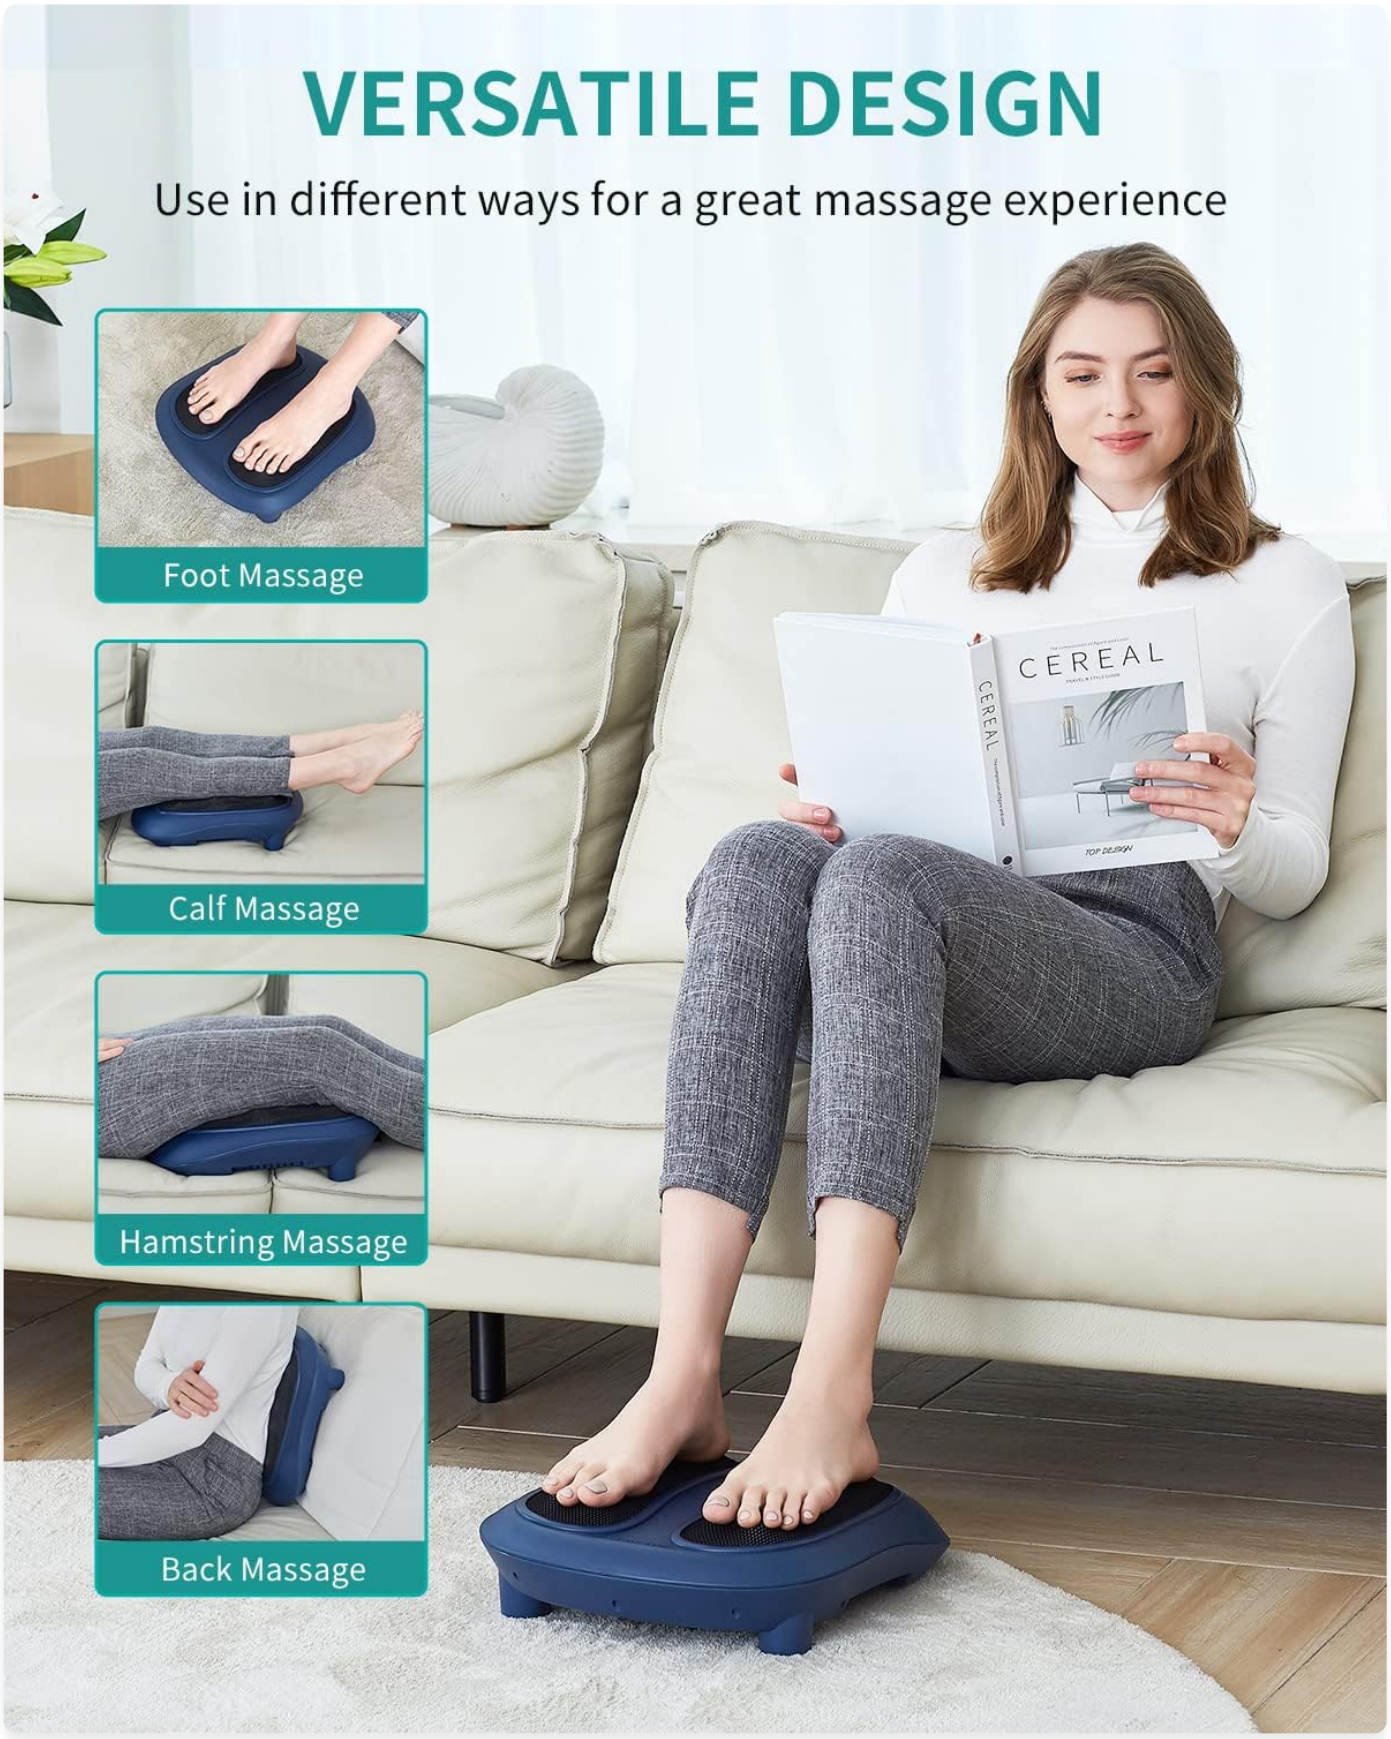


Image: A woman using the Nekteck FM01 Foot Massager in various positions: for foot massage, calf massage, hamstring massage, and back massage, demonstrating its versatile design.



Image: A woman using the Nekteck FM01 Foot Massager as a back massager while seated on a sofa, highlighting its soothing heat function for additional relaxation.

Maintenance

Proper maintenance ensures the longevity of your massagers.

- **Cleaning:** Unplug the massager before cleaning. Wipe the surface with a soft, damp cloth. Do not use abrasive

cleaners or immerse in water.

- **Storage:** Store the massager in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the massager.
- **Cord Care:** Do not wrap the power cord tightly around the massager. Avoid pulling, twisting, or bending the cord excessively.

Troubleshooting

Problem	Possible Cause	Solution
Massager does not turn on.	Not plugged in; power outlet issue; power button not pressed.	Ensure power cord is securely plugged into a working outlet. Press the power button firmly.
Massager stops working after 15 minutes.	Automatic shut-off feature activated.	This is a safety feature. Press the power button again to resume operation.
Heat function is not working.	Heat function not activated; malfunction.	For Neck Massager: Press the Heat button. For Foot Massager: Press the Power button twice. If still not working, contact customer support.
Massage nodes are not rotating.	Massager not powered on; internal issue.	Ensure the massager is powered on. If the issue persists, contact customer support.

Specifications

- **Brand:** Nekteck
- **Model Number:** 91aa7860-3c7a-40ff-93f2-04aebbee682b
- **Color:** Blue (for Foot Massager), Black/Grey (for Neck Massager)
- **Special Feature:** Heat function
- **Neck Massager Type:** Wrap Around Neck Massager with 8 deep-kneading nodes
- **Foot Massager Type:** Shiatsu Foot Massager with 6 massage heads and 54 rotating nodes
- **Auto Shut-off:** 15 minutes
- **Maximum Heat Temperature:** 113°F (45°C)
- **Manufacturer:** Nekteck
- **First Available:** May 6, 2023

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Nekteck website. You can also contact Nekteck customer service directly for assistance.
Nekteck Store Link: https://www.amazon.com/stores/Nekteck/page/CF2863D6-6DF5-4A81-B636-7745C9F2E53F

© 2024 Nekteck. All rights reserved.