Anchilly HD9621/9643/9641/9645/9741/9646

Anchilly Fry Basket Handle User Manual

For Philips Air Fryer Models: HD9621, HD9643, HD9641, HD9645, HD9741, HD9646

Introduction Product
Overview Compatibility Installation Usage Maintenance Troubleshooting Specifications Support

1. Introduction

This manual provides instructions for the installation, usage, and maintenance of your new Anchilly replacement fry basket handle. This handle is designed to replace damaged or worn-out handles on specific Philips Air Fryer models, ensuring continued safe and convenient operation of your appliance. Please read this manual thoroughly before installation and use.

2. Product Overview

The Anchilly Fry Basket Handle is a high-quality replacement part for compatible Philips Air Fryers. It features a durable construction and an ergonomic design for a comfortable and secure grip.

Key Features:

- **Durable Construction:** Made from heat-resistant and robust materials for long-lasting performance.
- **Ergonomic Design:** Provides a comfortable and secure grip for safe handling of the air fryer basket.
- **Easy Installation:** Designed for straightforward attachment to compatible air fryer baskets.
- **Dishwasher Safe:** Simplifies cleaning and maintenance.



Figure 2.1: Main view of the Anchilly Fry Basket Handle.

3. Compatibility

This Anchilly Fry Basket Handle is specifically designed to be compatible with the following Philips Air Fryer models:

- Philips Air Fryer HD9621 Series
- Philips Air Fryer HD9643 Series
- Philips Air Fryer HD9641 Series
- Philips Air Fryer HD9645 Series
- Philips Air Fryer HD9741 Series
- Philips Air Fryer HD9646 Series

Please verify your air fryer model number before attempting installation to ensure proper fit and function. The model number is typically located on the bottom or back of your air fryer.



Figure 3.1: Visual guide for compatible Philips Air Fryer models (Part 1).

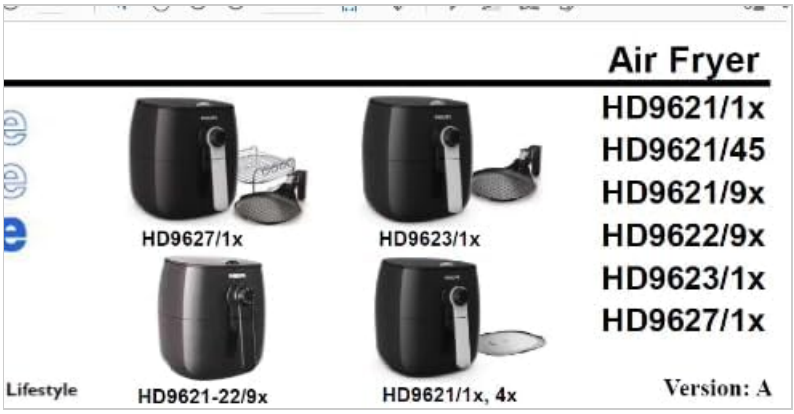


Figure 3.2: Visual guide for compatible Philips Air Fryer models (Part 2).

4. Installation Instructions

Follow these steps to safely install the Anchilly Fry Basket Handle onto your Philips Air Fryer basket.

1. **Ensure Safety:** Unplug your Philips Air Fryer from the power outlet and allow it to cool completely before handling any parts.
2. **Remove Old Handle (if applicable):** If replacing an existing handle, carefully detach it from the fry basket. This may involve pressing a release button or disengaging clips. Refer to your original air fryer manual if unsure.
3. **Align New Handle:** Position the Anchilly replacement handle with the attachment points on your air fryer basket. The handle is designed for a snap-on mechanism.
4. **Secure Handle:** Press the handle firmly into place until you hear or feel a click, indicating it is securely fastened. Ensure all clips or attachment points are fully engaged.
5. **Verify Stability:** Gently tug on the handle to confirm it is securely attached and does not wobble. A loose handle can be a safety hazard.



Figure 4.1: Top view of the handle, illustrating the attachment mechanism.



Figure 4.2: Demonstrating the ergonomic grip of the handle.

5. Operating Instructions

The Anchilly Fry Basket Handle functions identically to the original handle. Always ensure the handle is securely attached before lifting or moving the air fryer basket, especially when it contains hot food. Use caution as the basket and its contents will be hot after cooking.

- Always use oven mitts or heat-resistant gloves when handling the hot air fryer basket.
- Do not overload the air fryer basket beyond the manufacturer's recommended capacity.
- Avoid sudden movements when carrying the basket to prevent spills or accidents.

6. Maintenance and Cleaning

Proper maintenance ensures the longevity and hygiene of your fry basket handle.

- **Cleaning:** The Anchilly Fry Basket Handle is dishwasher safe. Alternatively, it can be hand-washed with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reattaching to the air fryer basket.
- **Inspection:** Periodically inspect the handle for any signs of wear, cracks, or damage. If the handle appears damaged or loose, discontinue use and replace it to ensure safety.
- **Storage:** When not in use, store the air fryer basket with the handle in a clean, dry place.

7. Troubleshooting

If you encounter issues with your Anchilly Fry Basket Handle, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Handle does not fit the basket.	Incorrect air fryer model.	Verify your air fryer model number against the compatibility list in Section 3. Ensure it is one of the listed Philips Air Fryer models.
Handle feels loose after installation.	Not fully engaged or damaged attachment points.	Ensure the handle is pressed firmly until it clicks into place. Inspect the attachment points on both the handle and the basket for any damage. If damaged, the handle may need replacement.
Handle is difficult to attach.	Misalignment or debris.	Ensure proper alignment of the handle with the basket's attachment points. Check for any food debris or obstructions preventing a smooth connection.

8. Product Specifications

Feature	Detail
Brand	Anchilly
Compatible Models	Philips Air Fryer HD9621, HD9643, HD9641, HD9645, HD9741, HD9646
Color	Black
Exterior Finish	Aluminum (attachment mechanism), Plastic (handle grip)
Special Feature	Ergonomic design
Handle Attachment	Snap-on mechanism
Item Weight	5.8 ounces (approx. 164 grams)
Package Dimensions	8.35 x 5.12 x 2.4 inches (approx. 21.2 x 13 x 6.1 cm)
UPC	758226307143



Figure 8.1: Handle length measurement.



Figure 8.2: Handle width measurement.

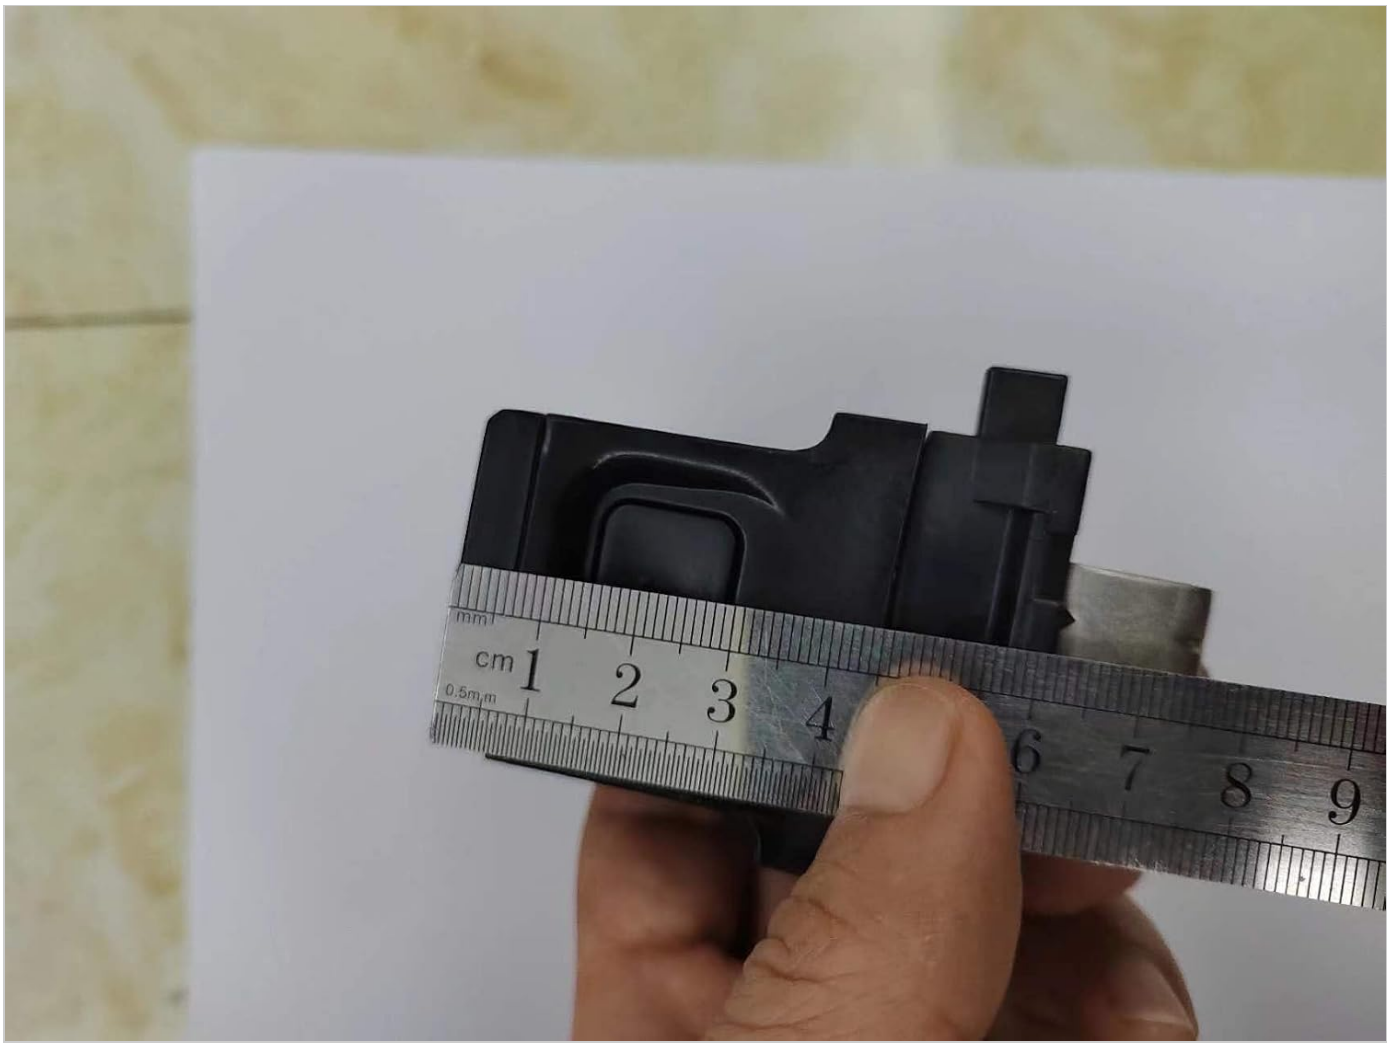


Figure 8.3: Handle height measurement.

9. Warranty and Customer Support

For any questions, concerns, or issues regarding your Anchilly Fry Basket Handle, please contact the seller or manufacturer directly through the platform where the purchase was made. Please retain your proof of purchase for warranty claims, if applicable.

Note: Specific warranty details may vary. Refer to the product listing or contact the seller for precise warranty information.

© 2025 Anchilly. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question