SENSYNE Y68

Sensyne 68" Phone Tripod & Selfie Stick User Manual

Model: Y68

Introduction

The Sensyne 68" Phone Tripod & Selfie Stick is a versatile accessory designed for capturing photos and videos with your smartphone. It functions as both a portable selfie stick and a stable tripod, featuring an integrated wireless remote for convenient operation. Its compact and lightweight design makes it suitable for various indoor and outdoor uses, including group selfies, live streaming, video conferences, and travel vlogging.

What's in the Box

- Sensyne 68" Phone Tripod & Selfie Stick (integrated with wireless remote)

Product Features

- **All-in-One Design:** Combines selfie stick and tripod functionality for versatile use.
- **Extendable Reach:** Extends up to 68 inches with six telescopic sections for various shooting angles.
- **Durable Construction:** Crafted from premium aluminum alloy with a sleek piano baking paint finish.
- **Adjustable Phone Holder:** Features 360° rotation and 90° angle adjustment, accommodating smartphones from 2.3" to 3.9" in width with non-slip silicone pads for secure grip.
- **Wireless Remote:** Detachable Bluetooth remote shutter for hands-free photo and video capture, compatible with both iOS and Android systems.
- **Portable:** Foldable design ensures easy storage and transport, similar to an umbrella.

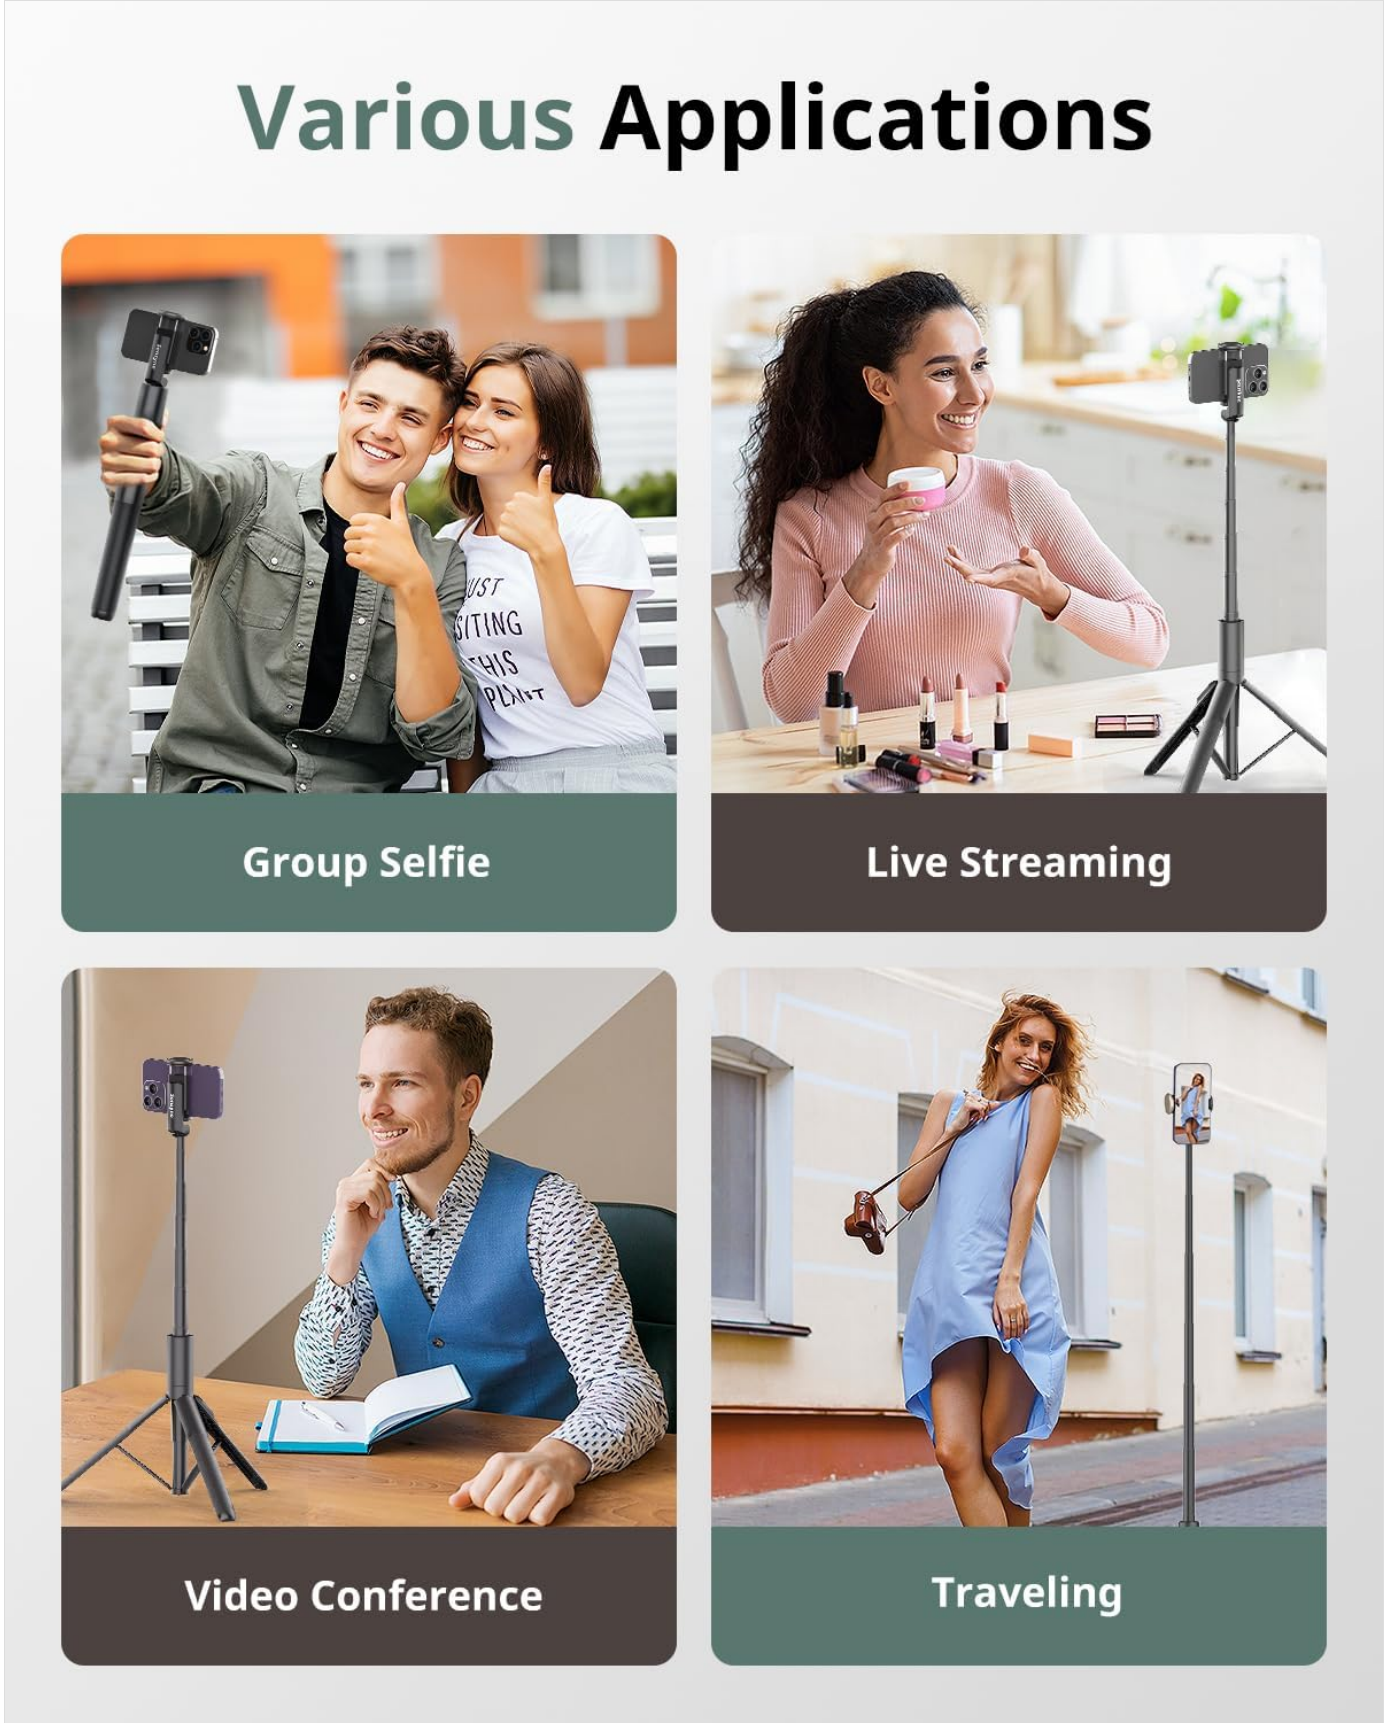


Image: The Sensyne tripod in various usage scenarios, highlighting its versatility for group selfies, live streaming, video conferences, and travel.

Setup Guide

1. Unfolding the Tripod/Selfie Stick

1. Hold the handle firmly.
2. Gently pull the top section upwards to extend the stick to your desired length.

3. For tripod mode, spread the three legs at the base until they are fully extended and stable on a flat surface.



Image: Illustrations of the product being used in selfie stick mode, handheld mode, and tripod mode.

2. Attaching Your Phone

1. Open the phone holder clamps by pulling them apart.
2. Carefully place your smartphone into the holder, ensuring it is centered and securely held by the non-slip silicone pads.
3. Adjust the phone holder's angle as needed for optimal viewing or shooting.

3. Pairing the Bluetooth Remote

1. Locate the detachable Bluetooth remote shutter, which is typically nestled in the tripod's leg.
2. Turn on the remote by pressing and holding the button until the indicator light begins to flash.
3. On your smartphone, navigate to your Bluetooth settings and search for available devices.
4. Select "Y60 selfie stick" or a similar device name from the list to pair. The indicator light on the remote will stop flashing once successfully paired.
5. The remote is now ready to capture photos or start/stop video recordings.



Image: The detachable wireless remote and a smartphone screen illustrating the Bluetooth pairing process.

Operating Instructions

1. Switching Modes

- **Selfie Stick Mode:** Keep the tripod legs folded and hold the stick by the handle. Extend the telescopic pole to your desired length for selfies or overhead shots.
- **Tripod Mode:** Extend the tripod legs fully on a flat, stable surface. Extend the telescopic pole to your desired height for stable recording or group photos.

2. Adjusting Height and Angle

- **Height Adjustment:** Extend or retract the telescopic sections of the stick to achieve any height between 13 inches (folded) and 68 inches (fully extended).
- **Angle Adjustment:** The phone holder supports 360° rotation and 90° angle adjustment. Pivot the holder to achieve your preferred horizontal or vertical orientation and tilt angle.

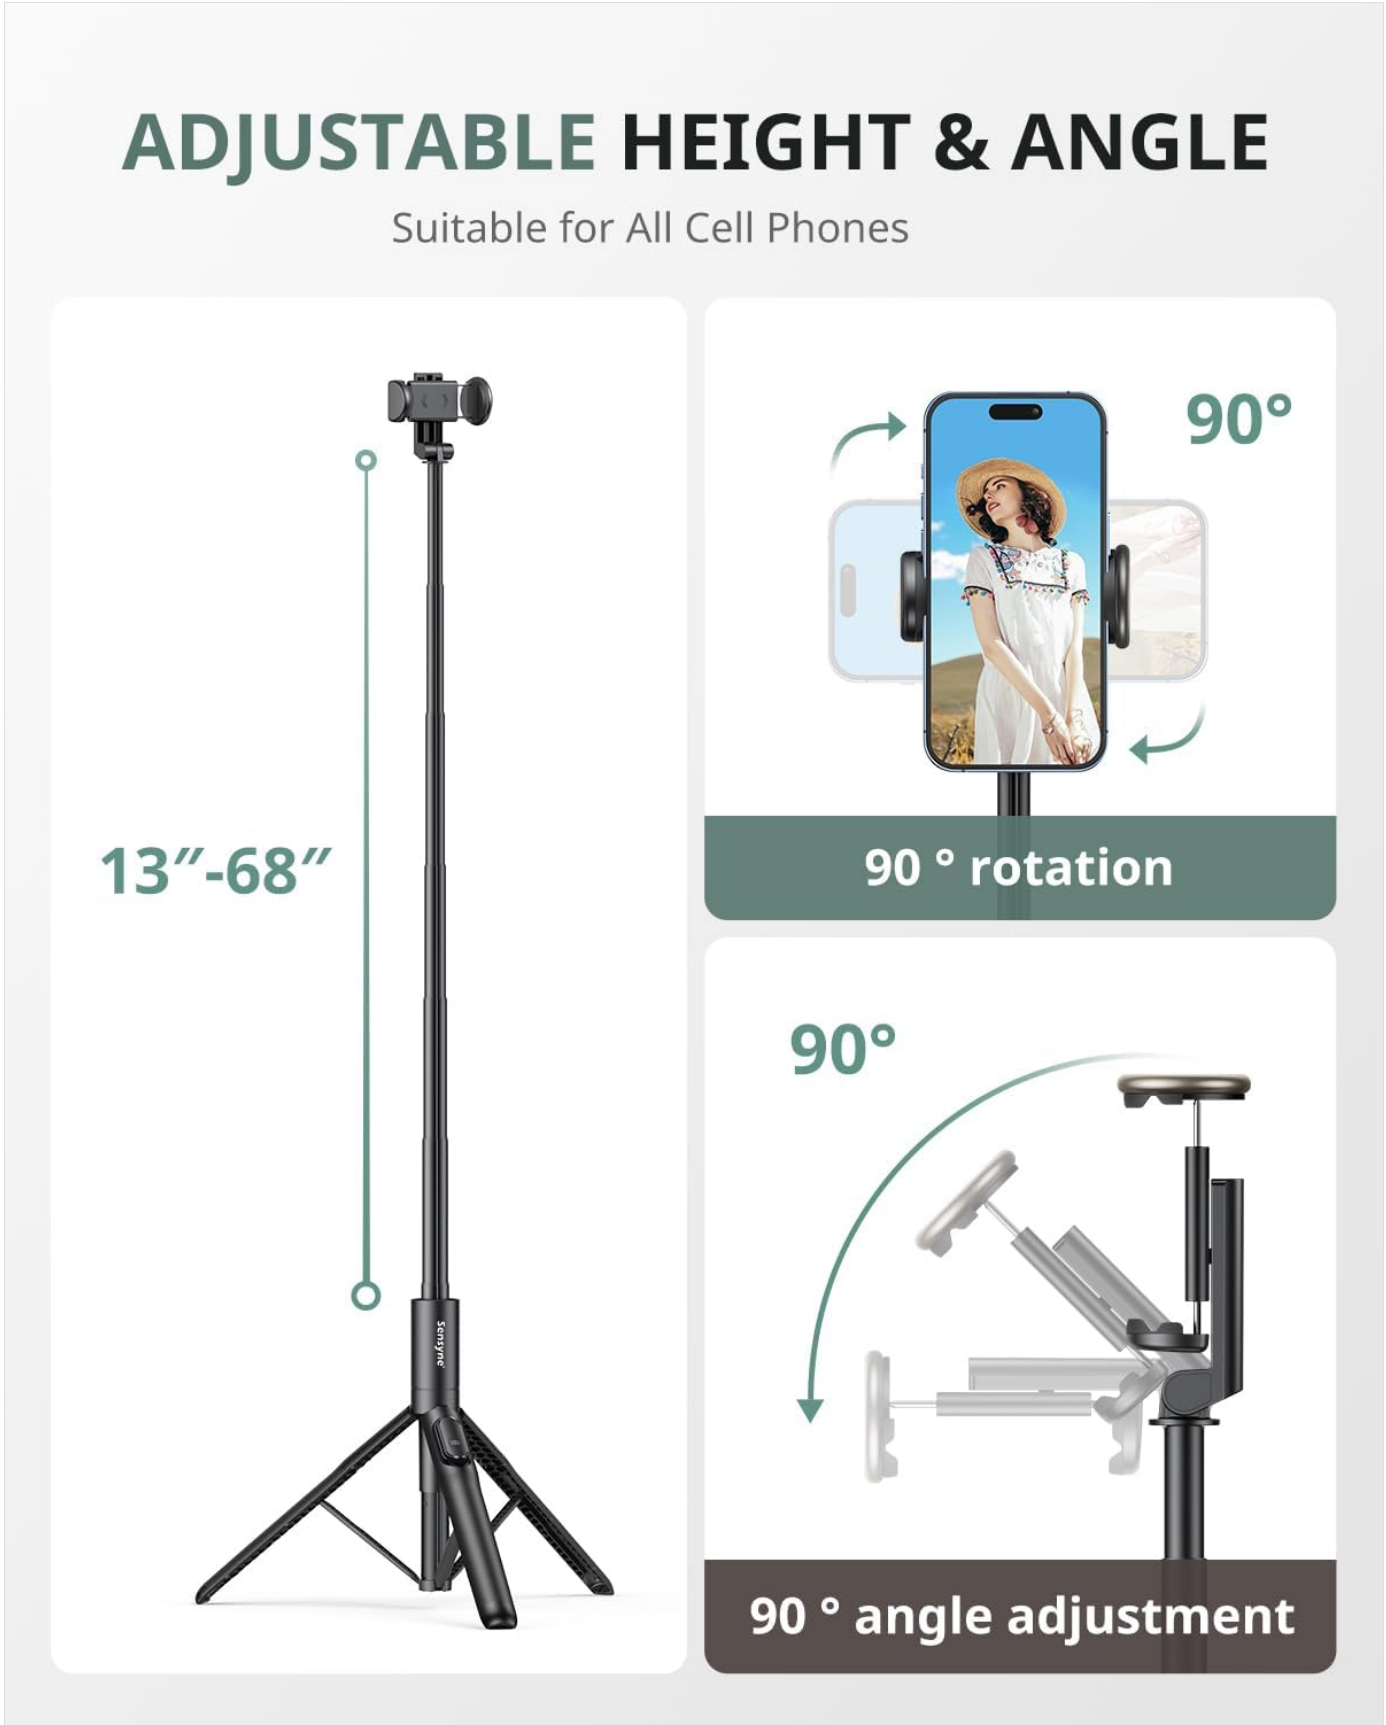


Image: Diagram illustrating the adjustable height range (13"-68") and the 90° rotation and angle adjustment capabilities of the phone holder.

3. Using the Remote Shutter

Once the Bluetooth remote is paired with your smartphone, simply press the button on the remote to trigger your phone's camera shutter for photos or to start/stop video recording from a distance.

Maintenance

- **Cleaning:** Wipe the tripod and phone holder with a soft, dry cloth. Avoid using abrasive cleaners or solvents, which can damage the finish.
- **Storage:** Fold the tripod completely and store it in a dry, cool place away from direct sunlight when not in use.
- **Battery:** The Bluetooth remote uses a button cell battery. Replace it when the remote's performance diminishes or it fails to power on.

Troubleshooting

- **Remote Not Pairing:**
  - Ensure the remote has a fresh battery and is powered on.
  - Verify Bluetooth is enabled on your smartphone.
  - Try unpairing and then re-pairing the device in your phone's Bluetooth settings.
  - Restart both your phone and the remote.
- **Phone Not Secure in Holder:**
  - Ensure the phone holder clamps are fully engaged around your phone.
  - Confirm your phone's width is within the supported range of 2.3" to 3.9".
- **Tripod Instability:**
  - Ensure the tripod legs are fully extended and placed on a flat, stable surface.
  - Avoid extending the pole to its maximum height in windy conditions or on uneven terrain, as this can reduce stability.
  - Do not exceed the recommended weight limit of 2.2 ounces for attached devices or accessories.

Specifications

Brand	SENSYNE
Model Name	AB Shutter3 (Y68)
Material	Aluminum
Item Weight	12.64 ounces
Weight Limit	2.2 ounces
Maximum Height	68 inches
Minimum Height	13 inches
Folded Size	Approximately 13.5 inches
Compatible Devices	Smartphones (2.3" to 3.9" width)
Special Features	Adjustable, Compact, Flexi, Lightweight
Tripod Head Type	Ball Heads
Number of Leg Sections	6
UPC	704090732918



Image: The product's compact and lightweight design, indicating a folded size of 13.5 inches and a weight of 0.79 lbs, ideal for portability.

Warranty & Support

Warranty Information

This Sensyne product comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase (receipt or order confirmation) for any warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It

does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

For further assistance, technical support, or inquiries regarding your Sensyne 68" Phone Tripod & Selfie Stick, please contact Sensyne customer support. You can typically find contact information on the official Sensyne website or through the retailer where you purchased the product. When contacting support, please have your product model number (Y68) and proof of purchase ready.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question