Bushnell 202321P

Bushnell Golf Tour V6 Shift Laser Rangefinder

Model: 202321P

Introduction

The Bushnell Golf Tour V6 Shift Laser Rangefinder is an advanced optical instrument designed to provide precise distance measurements for golfers. This manual provides comprehensive instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Figure 1: The Bushnell Golf Tour V6 Shift Laser Rangefinder, showcasing its compact and ergonomic design.

Key Features

- **Tour Trusted Slope-Switch Technology:** Provides precise slope-compensated distances. This device is USGA conforming and tournament legal when slope is disabled.
- **Improved Pinseeking:** Features Visual Jolt technology, providing tactile and visual confirmation (a red ring flashes while JOLT vibrates) when the device locks onto the flag.
- **Magnetic Mount for Convenience:** The integrated BITE Magnetic Mount allows for easy and secure attachment to a golf cart or any magnetic surface, ensuring quick access.
- **Improved Weather Resistant Design:** The Tour V6 Shift boasts an IPX6 rating, making it the most weather-resistant Tour series laser Bushnell Golf has ever produced.
- **Premium Accessories:** Includes a premium carrying case, microfiber cleaning cloth, and quick start guide for immediate use.



Figure 2: Overview of the Tour V6 Shift's primary features, including optics, Pinseeker with Visual JOLT, magnification, range, and magnetic mount.

Setup

Battery Installation

The Tour V6 Shift requires a CR2 battery (not included). To install the battery:

1. Locate the battery compartment cap at the end of the device, opposite the eyepiece.
2. Press down on the cap and twist it counter-clockwise to open.
3. Insert a new CR2 battery, ensuring the positive (+) terminal is facing outwards.
4. Replace the cap by twisting it clockwise until it is securely closed.



Figure 3: The end of the rangefinder showing the battery compartment, which opens by pressing and twisting the cap.

Initial Power On

To power on the device, press the power button located on the top of the rangefinder. The display will illuminate, indicating it is ready for use.

Operating Instructions

Slope-Switch Technology

The Tour V6 Shift features a physical Slope-Switch on the side of the device. This allows you to quickly toggle between Slope mode (which calculates compensated distances based on elevation changes) and Non-Slope mode (for tournament play, providing only direct line-of-sight distances).

- To enable Slope mode, slide the switch to reveal the orange indicator.
- To disable Slope mode (making the device tournament legal), slide the switch to cover the orange indicator.



Figure 4: The physical Slope-Switch allows for quick toggling between slope-compensated and non-slope modes.

PinSeeking with Visual Jolt

To measure distance to the flagstick, aim the crosshairs at the flag and press the power button. The Pinseeker technology will lock onto the flag, and the Visual Jolt feature will provide a short vibration and a red ring flash in the display to confirm target acquisition.

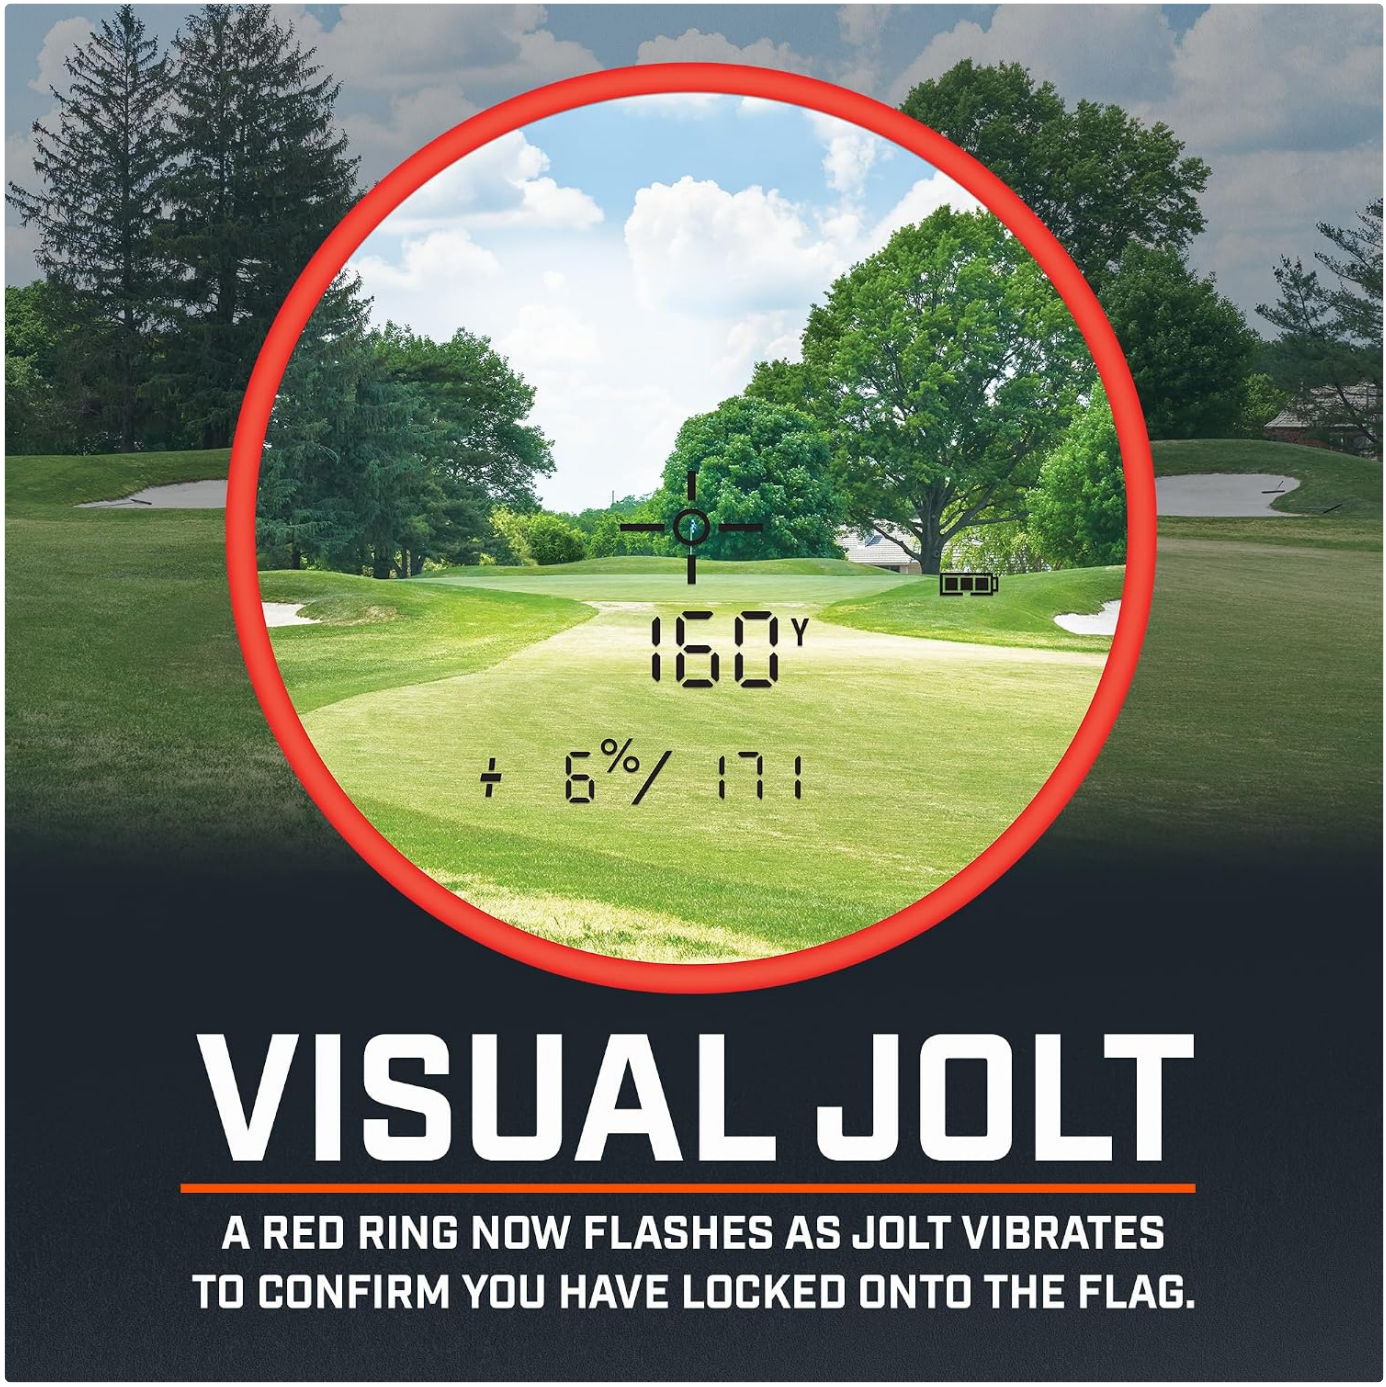


Figure 5: The Visual Jolt feature provides a clear red ring and vibration to confirm flag lock.

Magnetic Mount (BITE)

The integrated BITE Magnetic Mount allows for convenient attachment to metal surfaces, such as a golf cart frame. Simply press the side of the rangefinder with the BITE logo against a magnetic surface to secure it.



Figure 6: The BITE Magnetic Mount provides easy and secure access to your rangefinder during play.

Magnification and Range

The Tour V6 Shift offers 6x magnification, allowing for clear viewing of distant targets. It can measure distances from 5 to 1,300 yards, with a reliable range of 5 to 500 yards to a flag.



Figure 7: Magnification and range specifications for the Tour V6 Shift.

Fast Focus System

Adjust the eyepiece to achieve a sharp, clear view of the display and target. Rotate the eyepiece clockwise or counter-clockwise until the image appears in crisp focus.



Figure 8: The eyepiece allows for quick and precise focus adjustment.

Maintenance

Proper care and maintenance will ensure the longevity and performance of your Bushnell Golf Tour V6 Shift Rangefinder.

- **Cleaning Lenses:** Gently wipe lenses with the included microfiber cleaning cloth. Avoid using abrasive cloths or paper towels, which can scratch the lens surfaces.
- **Cleaning Body:** Use a soft, damp cloth to clean the exterior of the device. Do not use harsh chemicals or solvents.
- **Storage:** Store the rangefinder in its protective carrying case when not in use. Keep it in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace the CR2 battery when the low battery indicator appears on the display to ensure consistent performance.

Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Dead or improperly installed battery.	Check battery orientation or replace with a new CR2 battery.
Inaccurate distance readings.	Dirty lenses; unstable aiming; environmental factors (fog, rain).	Clean lenses with microfiber cloth. Ensure stable aiming. Note that extreme weather can affect performance.
No Visual Jolt confirmation.	Target not properly acquired; low battery.	Re-aim and try again, ensuring the flag is clearly visible. Check battery level.
Display is dim or unclear.	Low battery; eyepiece out of focus.	Replace battery. Adjust the eyepiece until the display is clear.

Specifications

Feature	Specification
Brand	Bushnell
Model Name	Tour V6 Shift Patriot Pack
Model Number	202321P
Magnification	6x
Measuring Range	5-1,300 yards
Range to Flag	5-500 yards
Water Resistance Level	IPX6 (Water Resistant)
Battery Type	CR2 (not included)
Item Weight	247 Grams
Product Dimensions	6"L x 5"W x 4.5"H
Material	Plastic
Color	White/Black/Orange
UPC	029757010483



Figure 9: Product dimensions of the Tour V6 Shift.

Warranty & Support

The Bushnell Golf Tour V6 Shift Laser Rangefinder comes with a**2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use.
For warranty claims, technical support, or additional product information, please refer to the contact details provided in your product packaging or visit the official Bushnell Golf website. You can also visit the Bushnell Store on Amazon for more information.



Figure 10: The product is backed by a 2-year manufacturer's warranty.

© 2025 Bushnell Golf. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question