acer AR40GR2841FDFL

Acer 100 cm (40 inches) Advanced I Series Full HD Smart LED Google TV User Manual

Model: AR40GR2841FDFL

1. Product Overview

The Acer Advanced I Series Full HD Smart LED Google TV (Model: AR40GR2841FDFL) offers a 100 cm (40 inches) display with Full HD (1920 x 1080) resolution and a 60 Hz refresh rate. It integrates Google TV for a smart entertainment experience, powered by a 64-bit Quad Core Processor with 1.5GB RAM and 16GB storage. Key features include 30 Watts sound output with Dolby Audio, dual-band Wi-Fi, and 2-way Bluetooth connectivity.



Image: Acer 40-inch Full HD Smart LED Google TV showcasing its frameless design, Full HD resolution, 30W high-fidelity speakers, 16GB storage, 1.5GB RAM, and Dolby Audio support.

Package Contents:

- 1 x Acer LED TV
- 1 x Remote Control
- 1 x User Manual (this document)
- 1 x Table Top Stand
- 4 x Screws for stand assembly

- 2 x AAA Batteries (for remote control)

2. Setup Instructions

2.1 Unboxing and Placement

Carefully remove the TV and all accessories from the packaging. Place the TV on a stable, flat surface or prepare for wall mounting.

2.2 Stand Installation

If using the table-top stand:

1. Place the TV screen-down on a soft, clean cloth to prevent scratches.
2. Align the stand legs with the corresponding screw holes on the bottom of the TV.
3. Secure each leg with the provided screws. Ensure they are tightened firmly.



Image: Side and bottom views of the Acer TV, illustrating the attachment points for the table-top stand and the location of various input/output ports.

2.3 Wall Mounting (Optional)

This TV supports VESA wall mounts. Refer to your wall mount kit's instructions for proper installation. Ensure the mount is compatible with the TV's VESA pattern and weight. Professional installation is recommended for wall mounting.



Image: Rear view of the Acer TV, highlighting the VESA mounting holes for wall bracket installation.

2.4 Connecting Devices

Connect your external devices such as set-top boxes, Blu-ray players, gaming consoles, or USB storage devices to the appropriate ports on the TV.

- **HDMI Ports:** Two HDMI ports are available for high-definition audio and video input.
- **USB Ports:** Two USB ports allow connection of hard drives or other USB devices for media playback.
- **Ethernet Port:** For wired internet connection.
- **Audio Out:** For connecting external audio systems.

2.5 Initial Power On and Setup

1. Connect the power cord to the TV and then to a power outlet.
2. Press the power button on the TV or the remote control to turn on the TV.
3. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-

Fi or Ethernet), and Google account sign-in.

4. Pair the remote control if prompted.

3. Operating Instructions

3.1 Remote Control Functions

The included voice-enabled smart remote provides easy navigation and quick access to popular streaming services.



Image: The Acer Smart TV remote control, detailing dedicated function keys, navigation buttons, smart function keys, and dedicated hotkeys for Netflix, Prime Video, YouTube, and Disney+Hotstar.

- **Power Button:** Turns the TV on or off.
- **Google Assistant Button:** Activates voice commands for search and control.
- **Navigation Pad (OK button):** Used to navigate menus and select items.
- **Back Button:** Returns to the previous screen.

- **Home Button:** Accesses the Google TV home screen.
- **Volume Up/Down:** Adjusts the volume.
- **Channel Up/Down:** Changes channels (for broadcast TV).
- **Hotkeys:** Dedicated buttons for Netflix, Prime Video, YouTube, and Disney+Hotstar for instant access.

3.2 Google TV Interface

The Google TV interface organizes your content from various streaming services into a personalized home screen.



Image: The Acer TV screen showing the Google TV interface with content recommendations and various streaming application icons.

- **Content Recommendations:** Personalized suggestions based on your viewing history.
- **Watchlist:** Add movies and shows you want to watch later.
- **Personal Profiles:** Create individual profiles for each family member for tailored content.
- **Chromecast built-in:** Cast content from your compatible mobile devices to the TV.

3.3 Picture and Sound Settings

Access the TV settings menu to adjust picture and sound preferences.

- **Picture Modes:** Select from modes like Standard, Dynamic, Movie, Sports, or User to optimize visuals for different content. Features include HDR10, Dynamic Signal Calibration, Black Level Augmentation, and Blue Light Reduction.
- **Sound Modes:** Choose from Stadium, Standard, Movie, Music, or Speech to enhance audio quality. The TV features 30W High Fidelity Speakers with Dolby Audio.

4. Maintenance

4.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Frame and Stand:** Use a soft, dry cloth to wipe dust. For deeper cleaning, a slightly damp cloth can be used, followed by a dry cloth.
- **Remote Control:** Wipe with a soft, dry cloth. Avoid liquids.

Caution: Do not use abrasive cleaners, waxes, or solvents as they can damage the TV's surface.

4.2 Software Updates

Ensure your TV's software is up to date for optimal performance and security. The TV will typically notify you of available updates. You can also manually check for updates in the settings menu under System > About > System update.

5. Troubleshooting

If you encounter issues with your Acer Smart LED Google TV, refer to the following common solutions:

Problem	Possible Cause / Solution
No Power	Ensure the power cord is securely connected to both the TV and a working power outlet. Check if the power outlet is functioning. Try a different outlet.
No Picture / Black Screen	Verify the TV is powered on. Check the input source (HDMI, AV) is correctly selected. Ensure all cables are securely connected. Try restarting the TV.
No Sound	Check the volume level and ensure the TV is not muted. Verify external audio devices are connected correctly and selected as the output. Check audio settings.
Remote Control Not Working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor. Re-pair the Bluetooth remote if necessary.
Network Connection Issues	Check your Wi-Fi router and internet connection. Restart the router and the TV. Re-enter Wi-Fi password. For wired connection, ensure Ethernet cable is properly connected.
Apps Lagging / Crashing	Close unused applications. Clear cache for problematic apps in TV settings. Ensure sufficient storage space. Restart the TV.

If the problem persists after attempting these solutions, please contact Acer customer support.

6. Specifications

Detailed technical specifications for the Acer AR40GR2841FDFL Smart LED Google TV:

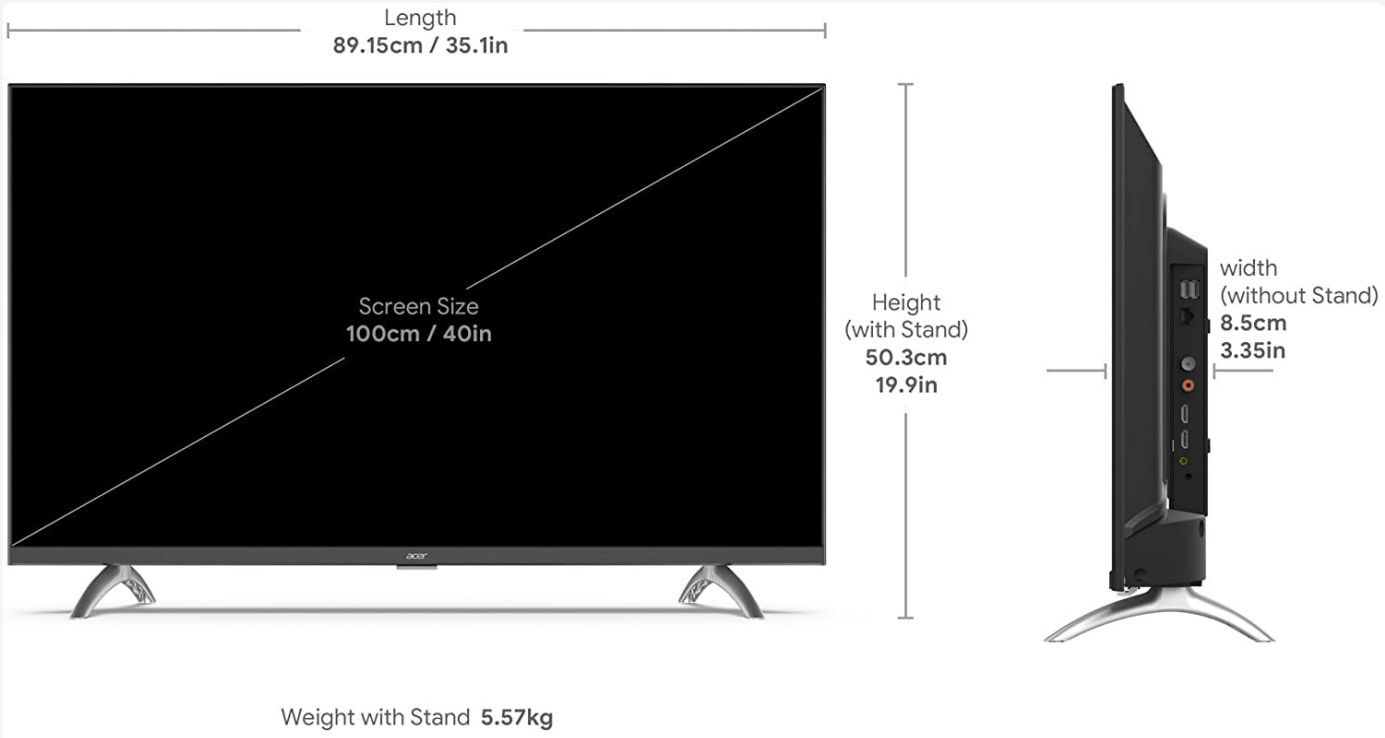


Image: Diagram illustrating the dimensions of the Acer 40-inch TV, including length, height with stand, width without stand, and weight with stand.

Feature	Detail
Brand	Acer
Model	AR40GR2841FDFL
Screen Size	100 cm (40 Inches)
Display Technology	LED, VA, A+ Panel
Resolution	Full HD (1920 x 1080 Pixels)
Refresh Rate	60 Hz
Viewing Angle	178 Degrees
Image Aspect Ratio	16:9
Image Contrast Ratio	4000:1
Special Features	Google TV, HDR10, Blue Light Reduction, Intelligent Frame Stabilization Engine, Wide Colour Gamut (16.7 Million Colours), Digital Noise Reduction, Micro Dimming
Operating System	Google TV
RAM Memory Installed Size	1.5 GB

Feature	Detail
Memory Storage Capacity	16 GB
Graphics Coprocessor	Mali G31 MP2
Sound Output	30 Watts (High Fidelity Speakers)
Audio Features	Dolby Audio, Surround Sound
Connectivity	2 HDMI, 2 USB, Dual Band Wi-Fi (2.4GHz/5GHz), 2-Way Bluetooth 5.0, Ethernet
Power Source	AC
Wattage	70 Watts (On-mode power consumption)
Product Dimensions (LxWxH)	8.5 x 89.15 x 47 cm
Item Weight	5.57 kg
Mounting Type	Wall Mount & Table Mount

7. Warranty and Support

7.1 Warranty Information

This Acer TV comes with a**1-year comprehensive warranty** from the date of purchase. Please retain your purchase receipt for warranty claims.



Image: Acer TV warranty details, highlighting 1-year warranty, doorstep service, certified engineers, wide service network, and Monday to Saturday support.

7.2 Customer Support

For technical assistance, service requests, or any queries regarding your Acer TV, please contact:

- **Email:** support@acertvindia.com

- **Phone:** +91-7669610805
- **Website:** www.acertvindia.com

Support is available Monday to Saturday.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question