K&F Concept KF3.141-130

K&F Concept KF3.141-130 2-in-1 Camera Sling Bag Instruction Manual

Model: KF3.141-130

Introduction

Thank you for choosing the K&F Concept KF3.141-130 2-in-1 Camera Sling Bag. This versatile bag is designed to provide secure and convenient transport for your photography equipment, adapting to various carrying styles and storage needs. Please read this manual thoroughly to understand the features and proper use of your new bag.

Product Features

- **2-in-1 Design:** Functions as an everyday shoulder bag or a multifunction photography crossbody bag.
- **Customizable Interior:** Includes flexfold dividers for brilliant and protective internal organization, allowing maximal use of space.
- **Durable Material:** External material is abrasion-resistant thread, weatherproof, recycled nylon canvas shell with double PU-coating.
- **External Carry Straps:** Bottom straps allow for attachment of small tripods (max diameter 2.99 inches).
- **Multiple Pockets:** Features front and back zipper pockets, internal zipper pockets, internal side pocket, and internal open pocket for organized storage.
- **Adjustable Shoulder Strap:** Varies from 34.25 to 55.1 inches for personalized comfort.

Setup

Adjusting the Shoulder Strap

1. Locate the adjustable buckles on the shoulder strap.
2. Slide the buckles to lengthen or shorten the strap until it reaches your desired length for comfortable carrying, whether as a sling or shoulder bag.
3. Ensure the strap is securely fastened before use.

Customizing Internal Compartments

The bag features removable flexfold dividers to adapt to your gear. These dividers are attached with hook-and-loop

fasteners.

1. Open the main compartment zipper.
2. Gently detach the dividers from the interior lining.
3. Re-position the dividers to create custom compartments that snugly fit your camera body, lenses, and other accessories. Ensure dividers are firmly pressed against the lining for security.

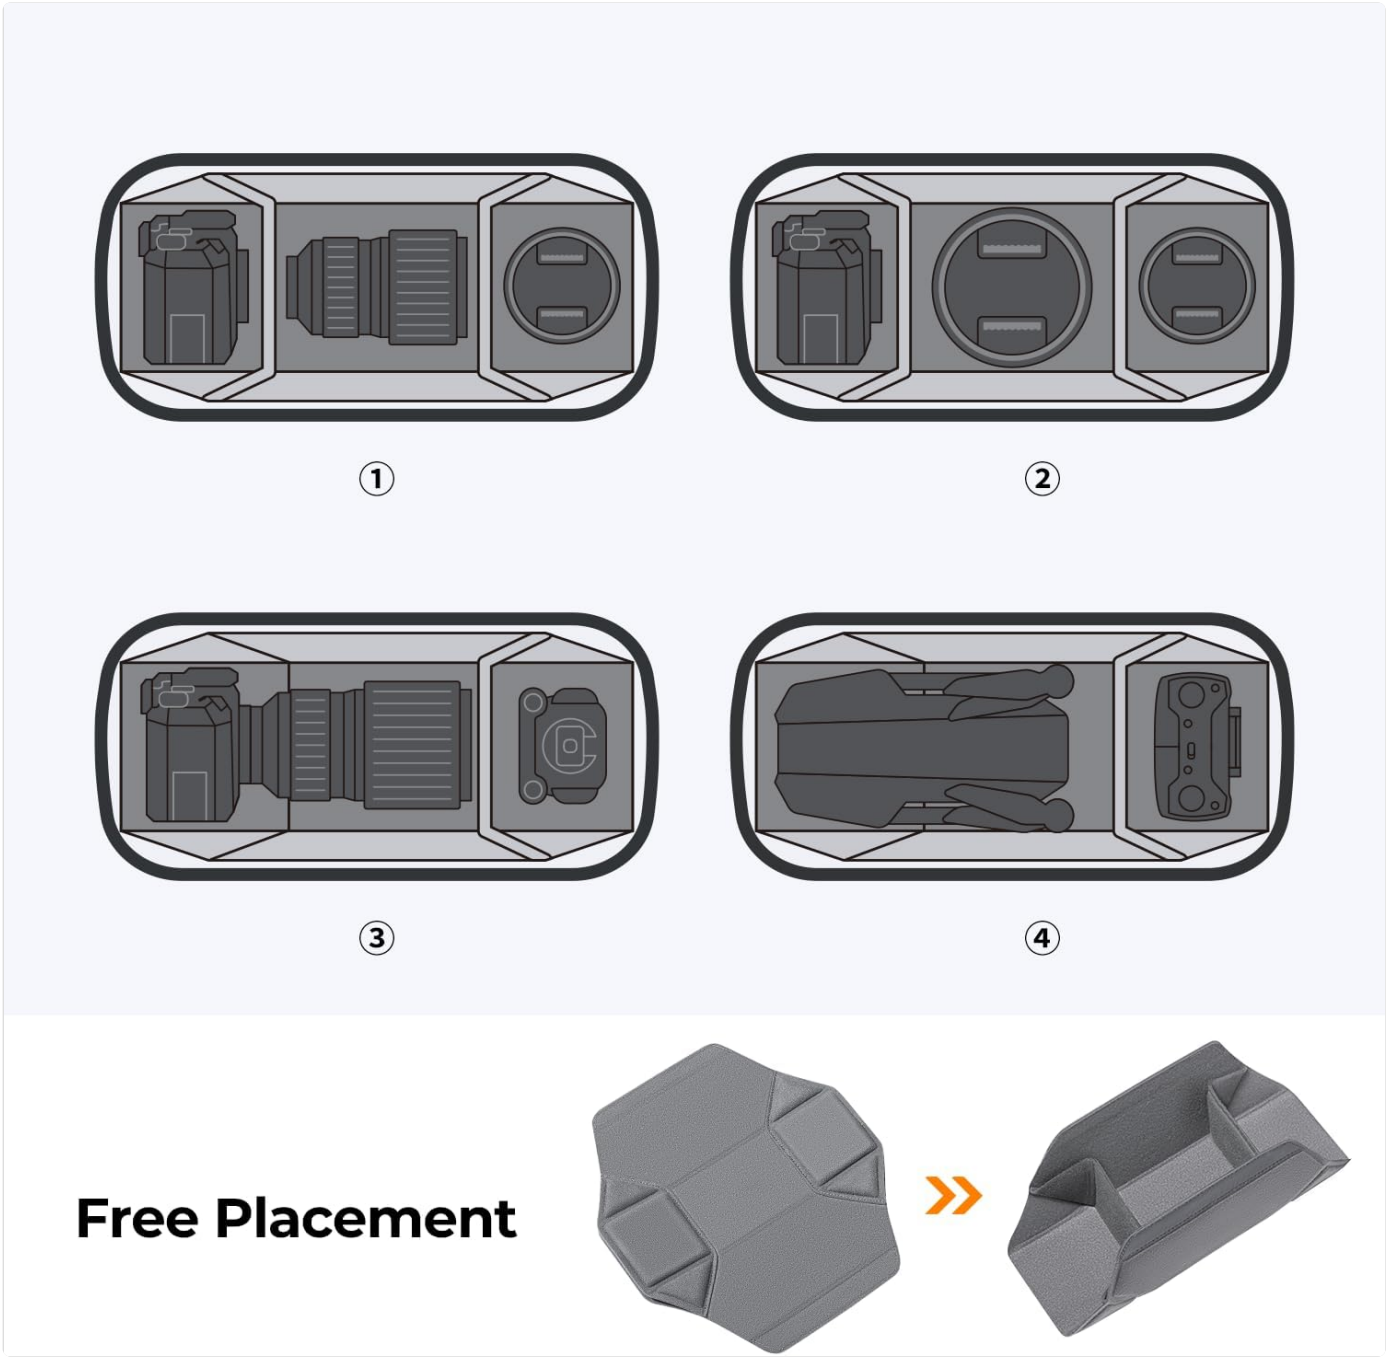


Image: Internal view of the K&F Concept sling bag showing the customizable dividers. The bag is open, revealing padded compartments designed to hold camera gear securely. A camera body and lens are visible within the compartments.

Operating the Bag

Carrying Your Gear

- **Sling Bag Style:** Wear the bag across your body with the strap over one shoulder. This allows for easy access to your gear by rotating the bag to your front.
- **Shoulder Bag Style:** Adjust the strap to a comfortable length and wear it over one shoulder.
- **Hand Carry:** Utilize the reinforced top handle for quick and convenient hand carrying.



Image: A person demonstrating different ways to carry the K&F Concept sling bag, including over the shoulder and by hand, highlighting its versatility.

Attaching a Tripod

The bottom external carry straps are designed for small tripods.

1. Loosen the two straps located on the bottom of the bag.
2. Place your small tripod (with a maximum diameter of 2.99 inches) securely between the straps and the bottom of the bag.
3. Tighten the straps firmly to hold the tripod in place, ensuring it does not shift during movement.



Image: The K&F Concept sling bag shown with a compact tripod securely fastened to the adjustable straps on its underside, demonstrating its external carrying capability.

Maintenance

- **Cleaning:** Hand wash only. Use a soft cloth with mild soap and water to clean the exterior. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Air dry the bag completely before storing or reusing. Do not tumble dry or expose to direct heat.
- **Storage:** Store the bag in a cool, dry place away from direct sunlight when not in use.
- **Water Resistance:** The bag features a weatherproof, double PU-coated shell. While designed to resist splashes and light rain, it is not fully submersible. Avoid prolonged exposure to heavy rain or submersion.

Troubleshooting

Bag feels too tight/loose:

Adjust the shoulder strap using the buckles until a comfortable fit is achieved. Ensure the bag sits securely against your body without restricting movement.

Gear not fitting properly:

Re-adjust the internal flexfold dividers to create custom compartments that perfectly match the size and shape of your equipment. Remove dividers if a larger open space is needed.

Tripod feels insecure:

Ensure the bottom external straps are tightened firmly around the tripod. Verify that your tripod's diameter does not exceed 2.99 inches, as larger tripods may not be securely held.

Specifications

Model Number	KF3.141-130
External Size	13 × 8.6 × 5.9 inches (33 × 22 × 15 cm)
Internal Size	10.6 × 6.7 × 4.1 inches (27 × 17 × 10.5 cm)
Weight	1.32 lb (600g)
Material	Polyester, Recycled Nylon Canvas (double PU-coated)
Care Instructions	Hand Wash Only
Manufacturer	K&F Concept

Warranty & Support

K&F Concept offers a lifetime fix for any product issues. If you encounter any problems with your KF3.141-130 2-in-1 Camera Sling Bag, please contact K&F Concept customer support for assistance.
For returns, the product is eligible for a refund/replacement within 30 days of purchase, subject to the seller's return policy. Visit the official K&F Concept Store for more information and support resources.

Official Product Videos

K&F Concept Fashion Camera Bag

Your browser does not support the video tag.

Video: A promotional video showcasing the K&F Concept Fashion Camera Bag in various urban settings, demonstrating its style, portability, and ease of use for photographers on the go.

© 2026 K&F Concept. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question